

Fitting Instructions

for YewdaleDefiant[®] Insect screens
(F30)



Fitting Instructions

YewdaleDefiant[®] Insect screens
(F30)

Part no: 979


yewdale.co.uk

Fitting Instructions


YewdaleDefiant® Insect screens (F30)

Safety Instructions:

1. Loops in pull cords, chains, tapes and inner cords that operate the product can cause strangulation
2. To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck
3. Move beds, cots and furniture away from window covering cords
4. Do not tie cords together. Make sure cords do not twist and create a loop

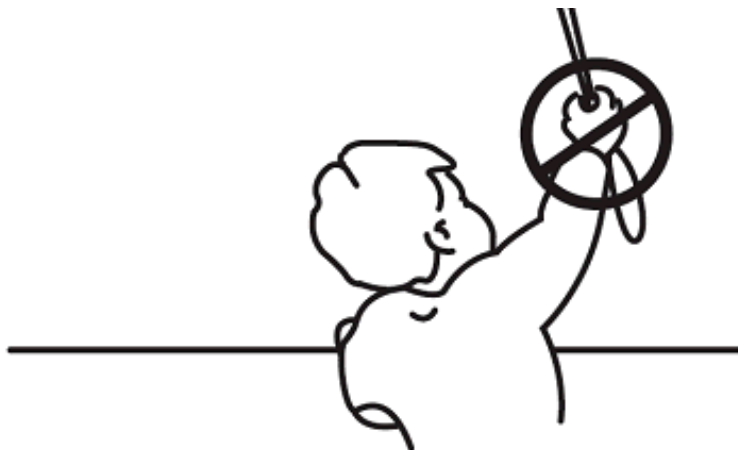


N.B. For more relevant information and child safety device fitting instructions, see Point 5 on Page 7.

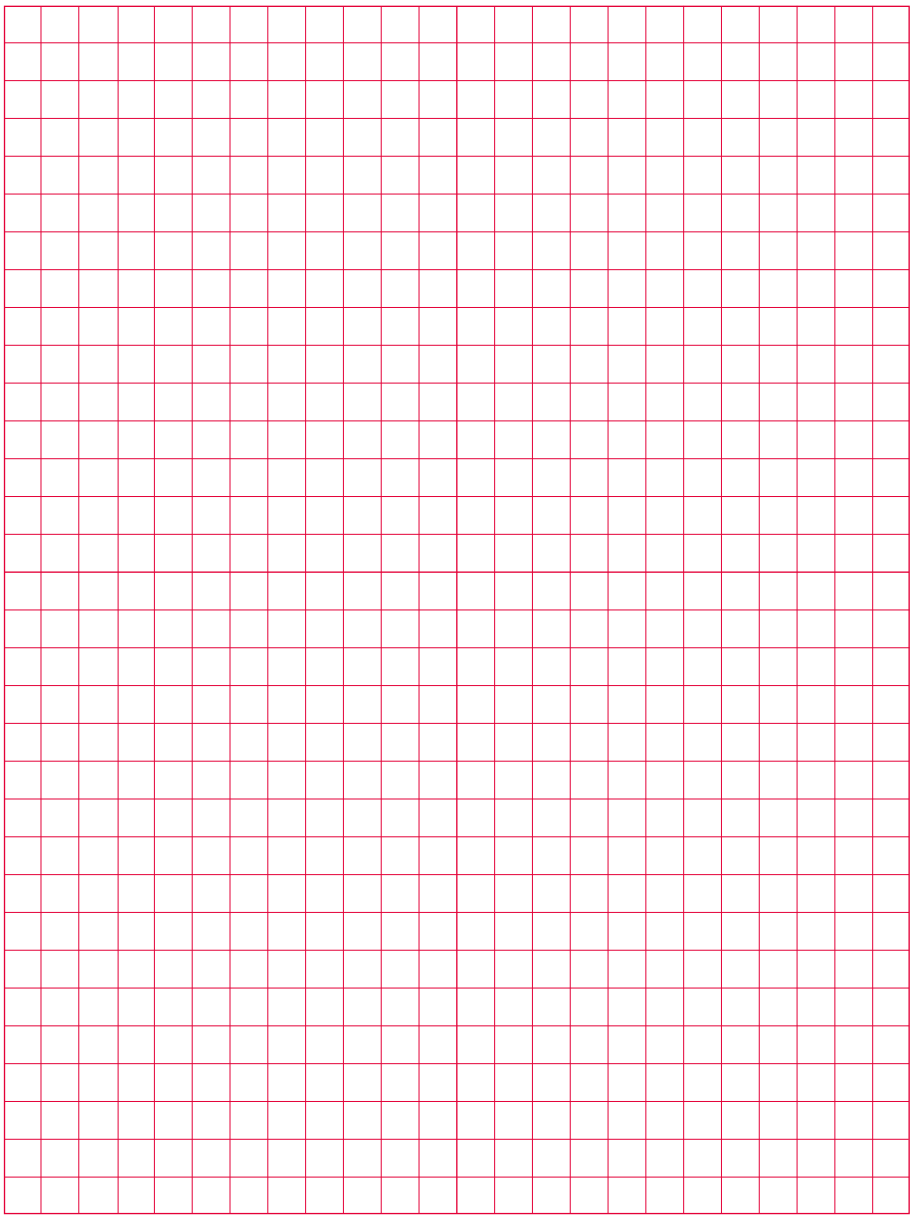

Fitting Instructions

YewdaleDefiant® Insect screens (F30)

F30 Chain Control:

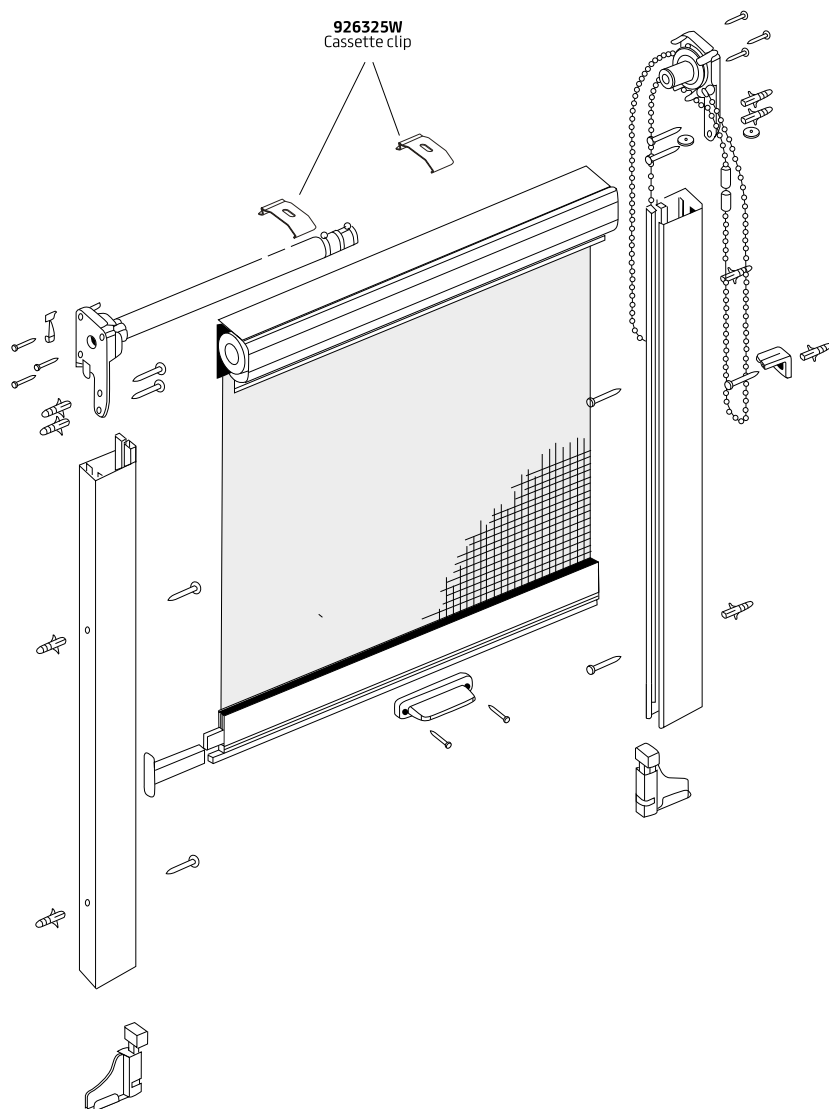



F30 Chain Control – Top Fix:

N.B. This blind should be installed by a person competent in DIY. If in doubt please consult a professional.

1. The cassette is pre-assembled and does not need to be opened. Check the positioning of the cassette. (If intermediate brackets are supplied, for wider units, fix cassette to the recess at equal space using the appropriate screws/plugs. Fit the cassette to brackets.) Fix the side lugs to the recess using the appropriate screws/plugs.
2. At minimum 600mm centres, drill 5mm fixing holes in edge of side channels. Locate side channels to underside of cassette, ensuring that the bottom bar slides down into the side channels.
3. Fix the side channels using the appropriate screws/plugs. The side channels **MUST** be fixed square. Check this by measuring diagonals.
4. Close the screen and adjust the hold-down clips by screwing the top piece in or out until there is no gap showing below the bottom bar.

F30 Chain Control – Face Fix:

N.B. This blind should be installed by a person competent in DIY. If in doubt please consult a professional.

1. The cassette is pre-assembled and does not need to be opened. Slide the brackets onto the cassette, check the positioning, and fix the brackets using the appropriate screws/plugs.
2. At minimum 600mm centres, drill 10mm holes through front of the side channels as shown, and 5mm fixing holes through the back.
3. Locate the side channels to the underside of the cassette, ensuring that the bottom bar slides down into the side channels.
4. Fix the side channels using the appropriate screws/plugs. The side channels **MUST** be fixed square. Check this by measuring diagonals. Close the clearance holes with grommets.
5. Close the screen and adjust the hold-down clips by screwing the top piece in or out until there is no gap showing below the bottom bar.

NB. To operate correctly, complete blind **MUST** be level.

Fitting Instructions

YewdaleDefiant® Insect screens (F30)

Operating Instructions:

1. The cassette should be pre-tensioned at the factory. If it is necessary to increase/decrease tension, do so as follows:.
 2. Remove the fixing screws from the left-hand end cap and carefully prise the end cap out of the cassette until it is possible to rotate it.
 3. Carefully rotate the end cap clockwise to increase the tension or anti-clockwise to decrease the tension. Refit the end cap.
 4. Cut the control chain to the required length and join it using the chain joiner supplied.
 5. To operate the unit, pull the screen down with the ball chain until the bottom bar clicks into place under the two hold-down clips. To open the screen, tip the bottom bar back to release it from the hold-down clips, and allow the screen to retract under the spring tension. Use the ball chain to fully retract the screen into the cassette.
- NB. All chain operated screens are right hand control. It is not possible to fit the chain to the left side of the cassette.**

5. Ensure the relevant child safety devices are used to comply with BS EN13120:2009+A1:2014, BS EN16433:2014 and BS EN16434:2014.



Chain Tidy

A chain tidy will be attached to the chain when the blind arrives. The chain tidy should be at a maximum distance from the control mechanism, keeping the chain taut (not under excessive tension however as this could negatively affect the longevity and operation of the blind). Put the retaining device on the wall, mark fixing holes with a pencil, drill the holes and screw the device to the wall with suitable fixings.

Easy Break Chain Connectors

An easy break chain connector will be connected to the operating chain. If excessive weight is applied within the loop the connector will come apart. If the connector comes apart and is undamaged then it will need to be re-connected by inserting the last ball on the end of the chain into the hole with slot in the connector and pushed into place.





Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.



yewdale **Defiant**[®]
FABRIC AND BLIND SYSTEMS



yewdale **Kestrel**[®]
MAGNETIC ANTI-LIGATURE SYSTEM



yewdale **Movatrack**[®]
CUBICLE AND TRACK SYSTEMS



yewdale **Harrier**[®]
CUBICLE AND SHOWER CURTAINS



yewdale **Vitesse**[®]
CURTAIN TRACK SYSTEMS