

Fitting Instructions

for YewdaleDefiant[®] insect screens
(F32)



Fitting Instructions

YewdaleDefiant[®] insect screens
(F32)


Part no: 980

yewdale.co.uk

Fitting Instructions

YewdaleDefiant® insect screens (F32)

F32 insect screen spring control:

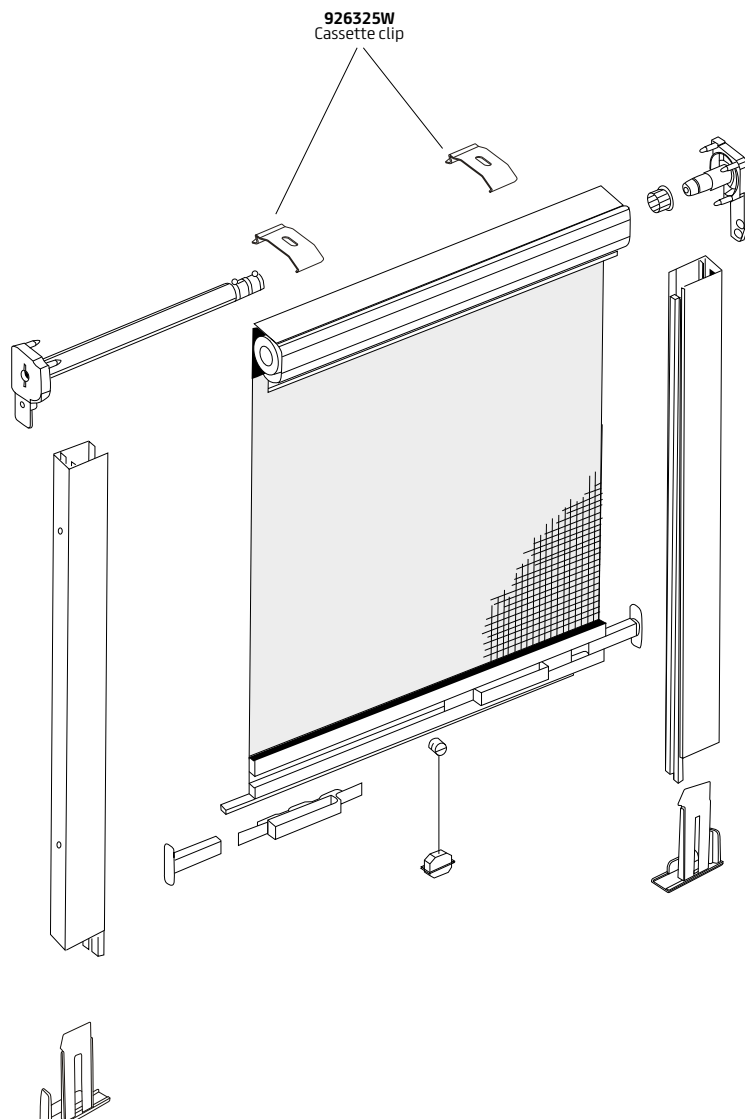



F32 insect screen spring control - Recess fix:

- 1.** The cassette is pre-assembled and does not need to be opened. Check the positioning of the cassette. (If intermediate brackets are supplied, for wider units, fix to the recess at an equal spacing using the appropriate screws/plugs. Fit the cassette to the brackets.) Fix side lugs to the recess using the appropriate screws/plugs.
- 2.** At a minimum of 600mm centres, drill 5mm fixing holes into the edge of the side channels. Locate the side channels to the underside of the cassette, ensuring that the bottom bar slides down into the side channels.
- 3.** Fix the side channels using appropriate screws/plugs. The side channels must be fixed square. Check this by measuring diagonals.
- 4.** The optional pull cord may be added by inserting the attachment into the groove at the front of the bottom bar and turning through 90°. It may be removed in the same way.


Fitting Instructions

YewdaleDefiant® insect screens (F32)

F32 insect screen spring control - Face fix:

1. The cassette is pre-assembled and does not need to be opened. Slide the brackets onto the cassette, check the positioning, and fix the brackets using the appropriate screw/plugs.
2. At a minimum of 600mm centres, drill 10mm holes through the front of the side channels as shown, and 5mm fixing holes through the back.
3. Insert the side channels to the underside of the cassette, ensuring that the bottom bar slides down into the side channels.
4. Fix the side channels using appropriate screws/plugs. Side channels MUST be fixed square. Check by measuring diagonals. Close the clearance holes with grommets.
5. The optional pull cord may be added by inserting the attachment into the groove at the front of the bottom bar and turning through 90°. It may be removed in the same way.

F32 insect screen spring control:

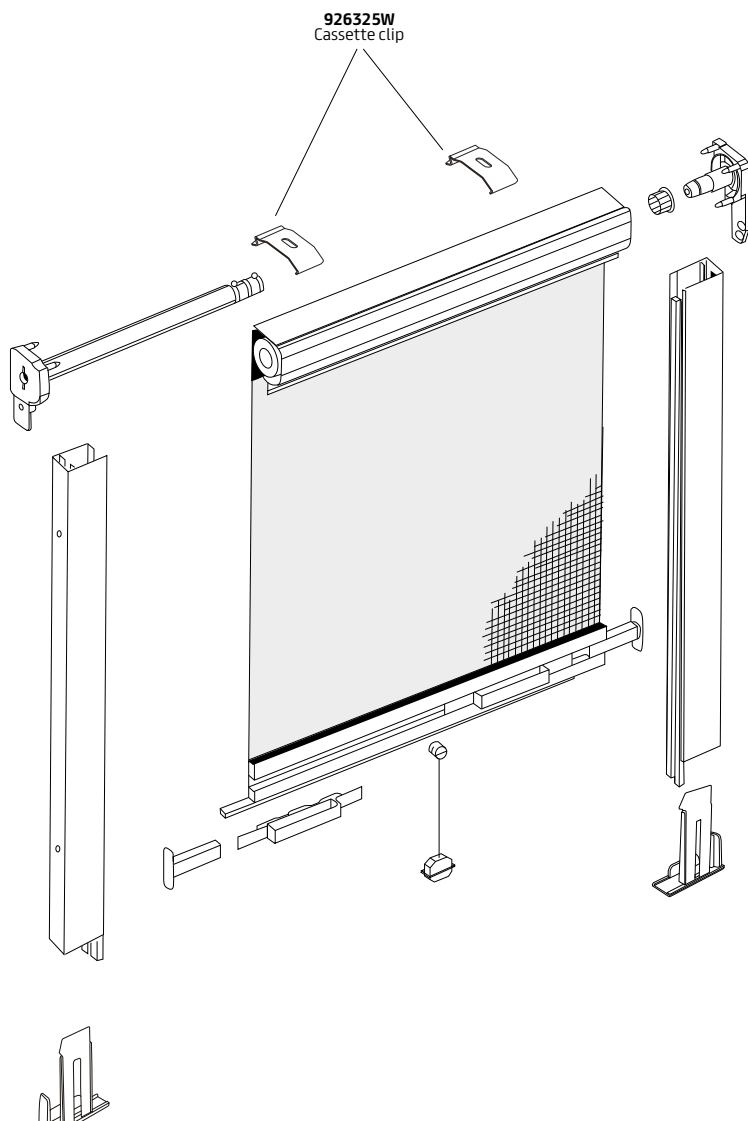


Fitting Instructions

YewdaleDefiant® insect screens (F32)

Operating instructions:

1. The cassette should be pre-tensioned at the factory. If it is necessary to increase/decrease tension this may be done as follows:
2. Remove the fixing screws from the left-hand end cap and carefully prise the end cap out of the cassette, until it is possible to rotate it.
3. Carefully rotate the end cap clockwise to increase tension or anti-clockwise to decrease tension. Refit the end cap.
4. To operate the unit, pull the screen down until the bottom bar clicks into place under the two hold-down clips. To open the screen, tip the bottom bar back to release it from the hold-down clips, and allow the screen to retract under spring tension.

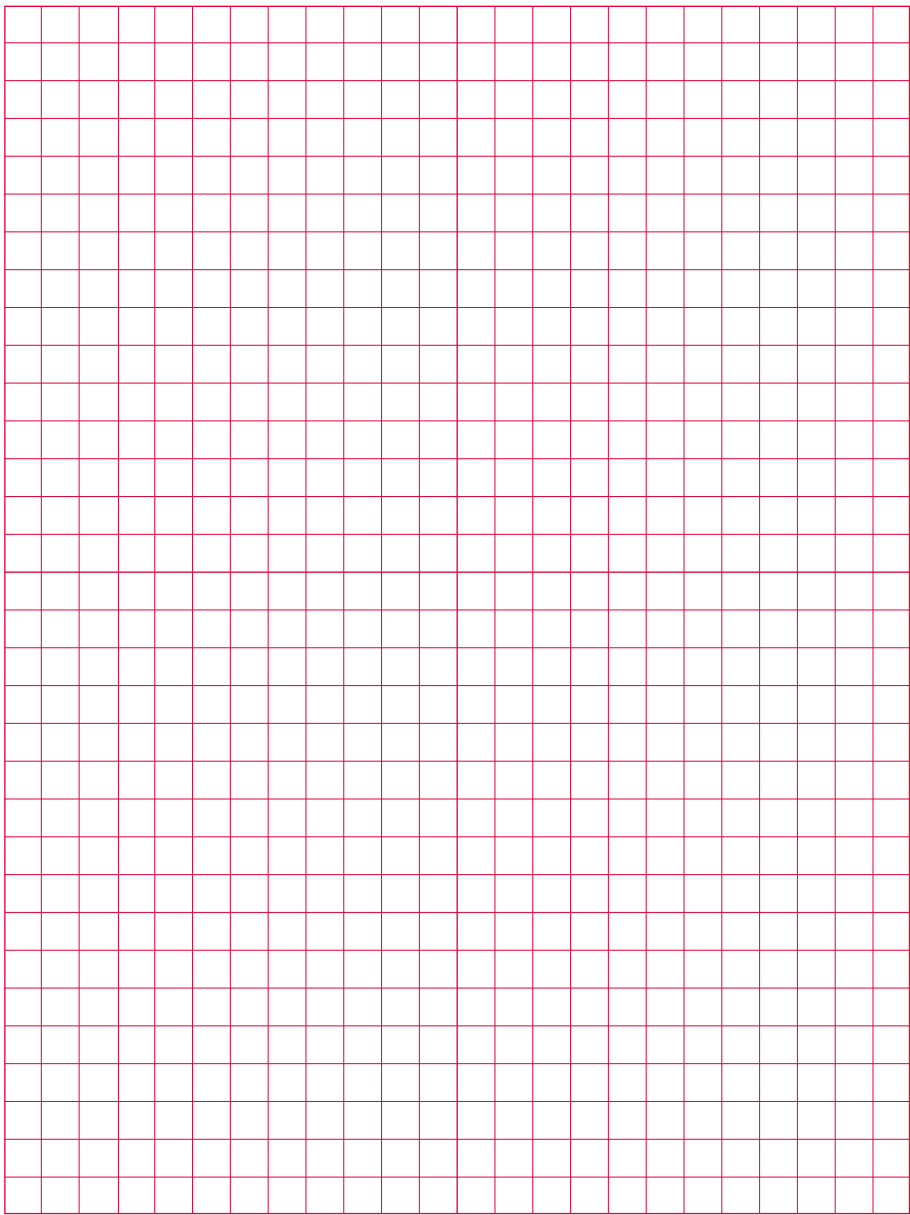



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.



yewdale **Defiant**[®]
FABRIC AND BLIND SYSTEMS



yewdale **Kestrel**[®]
MAGNETIC ANTI-LIGATURE SYSTEM



yewdale **Movatrack**[®]
CURBLE AND TRACK SYSTEMS



yewdale **Harrier**[®]
CURBLE AND SHOWER CURTAINS



yewdale **Vitesse**[®]
CURTAIN TRACK SYSTEMS