

Programming Instructions

for YewdaleDefiant® Motor Relay
(980014)

 
Programming Instructions for YewdaleDefiant® Motor Relay (980014)

Programming Instructions

YewdaleDefiant® Motor Relay (980014)


Specification:

Model:	980014
Power Supply:	230v AC / 120v AC
Working Temperature:	-40°C to +85°C
Rated Power:	500w max.
Receiving Frequency:	433.92MHz
Operation mode:	Remote / Manual

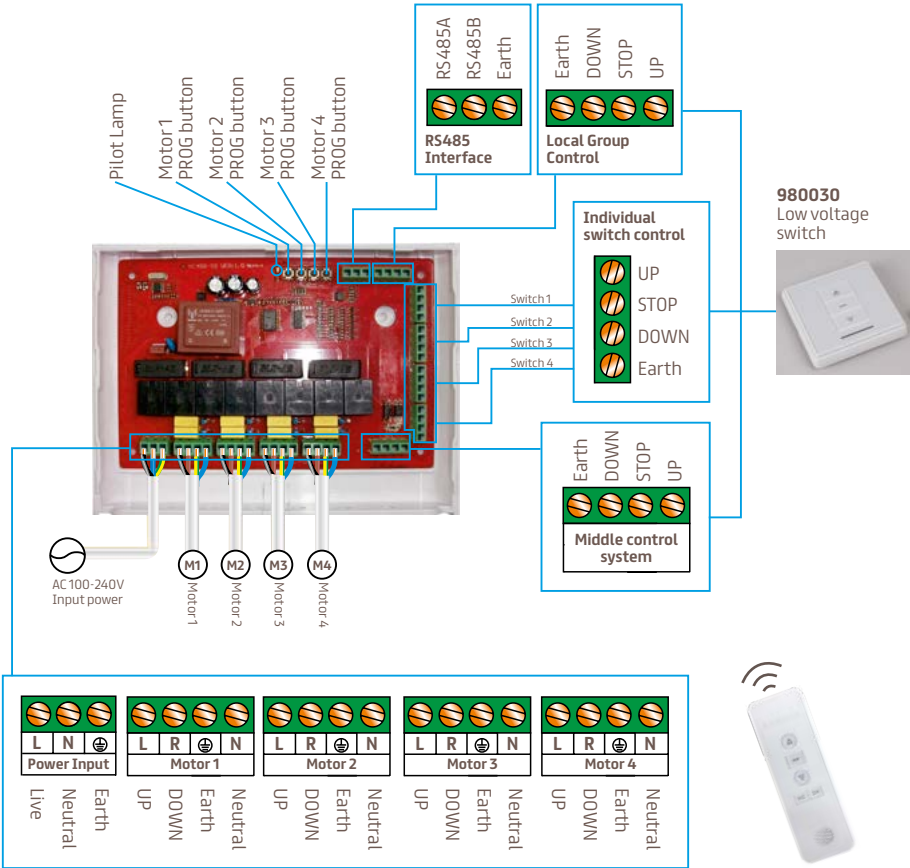

Application Reference:

Diagram for dry contact switch, RS485 single and group control for block system.

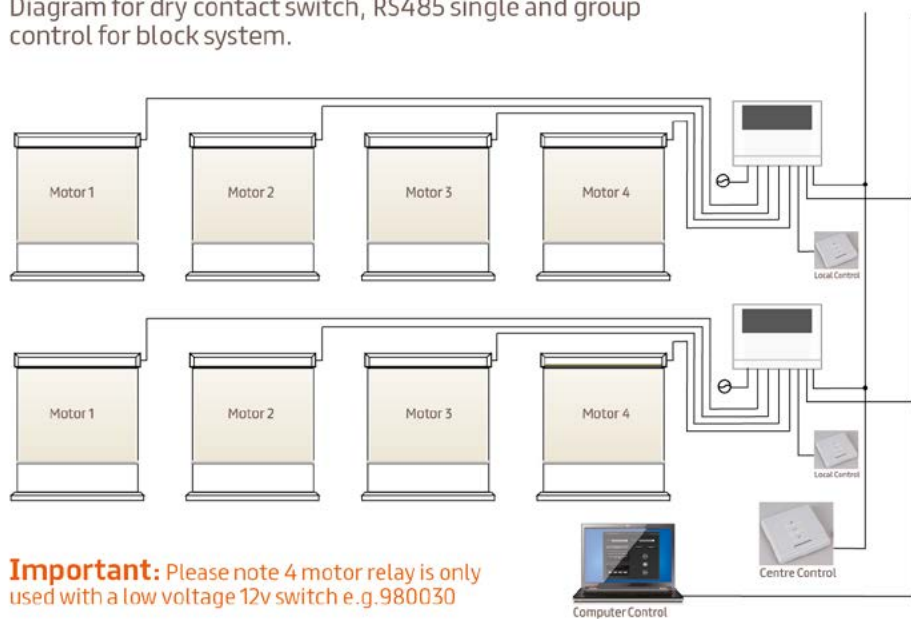

Important: Please note 4 motor relay is only used with a low voltage 12v switch e.g.980030

Programming Instructions


YewdaleDefiant® Motor Relay (980014)

Operation Instruction:

The maximum running time for a motor is five minutes. The delay between switching up and down is 0.5 seconds. Program the wireless motors to a Smart Home Device individually.

Designating motors a channel on the remote control:

To tell the receiver which motor you wish to control with the remote, and on what channel, follow these instructions.

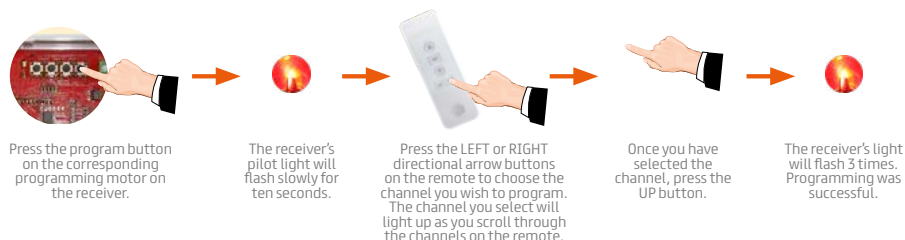

Changing the direction of travel of the blind:

Sometimes it is possible for the motor on the blind to be fitted upside down, which means that the UP and DOWN buttons on the remote are inverted. These instructions will tell you how to change this. This is not always necessary.



Press the button on the receiver that corresponds with the motor you wish to adjust. The receiver's pilot light will flash slowly for ten seconds.



The receiver's pilot light will flash slowly for ten seconds.



Press the LEFT or RIGHT directional arrow buttons on the remote to choose the channel you wish to adjust.



Press the DOWN button.



The receiver's light will flash 3 times, confirming the direction has been changed correctly.

Programming Instructions

YewdaleDefiant® Motor Relay (980014)

Delete single channel memory:



Press the button on the receiver that corresponds with the motor you wish to adjust.



The light will flash for ten seconds.



Press the directional buttons on remote control to select the channel you wish to delete.



Press PROG for 1 second.



The receiver's light will flash three times.

Delete all memories on all channels:



Press the button on the receiver that corresponds with the motor you wish to delete all memories from.



The light will flash for ten seconds.




Press the directional buttons on remote control to select the channel you wish to delete.



Press PROG for 7 seconds.



The receiver's light will flash 3 times and then flash 3 times again 7 seconds later.

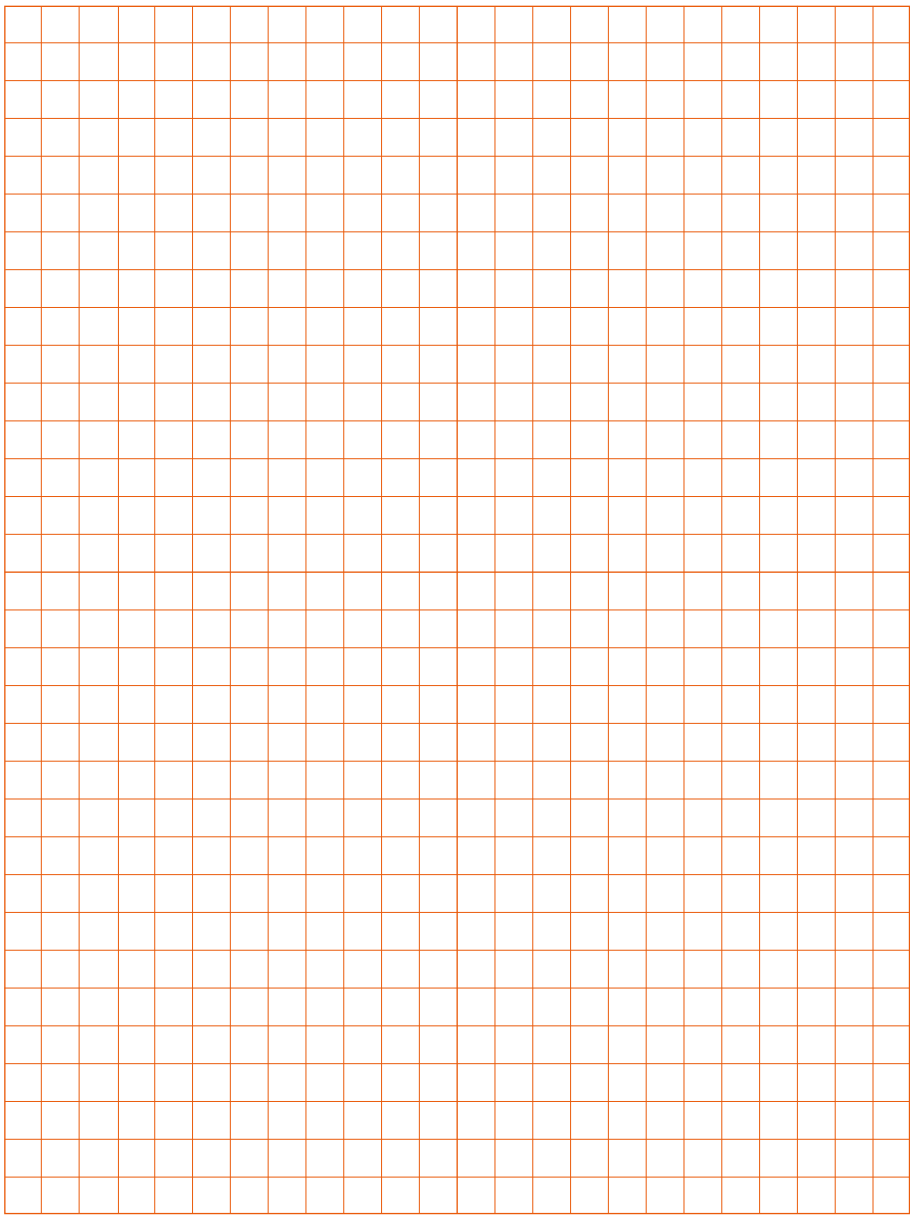



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.



yewdale **Defiant**[®]
FABRIC AND BLIND SYSTEMS



yewdale **Kestrel**[®]
MAGNETIC ANTI-TILTATURE SYSTEM



yewdale **Movatrack**[®]
CURTAIN AND TRACK SYSTEMS



yewdale **Harrier**[®]
CURTAIN AND SHOWER CURTAINS



yewdale **Vitesse**[®]
CURTAIN TRACK SYSTEMS