

Programming Instructions

for YewdaleDefiant® Radio Receiver
(980027)

Programming Instructions for YewdaleDefiant® Radio Receiver (980027)

Programming Instructions

YewdaleDefiant® Radio Receiver (980027)

Specification:

 
Model:	980027
Voltage input:	230v AC / 120v AC
Working Temperature:	-40°C to +85°C
Rated Power:	500w max.
Receiving sensibility:	-110dBm
Transmitter quality:	20 max.
Operation mode:	Remote / Manual

Caution: When wired into a separate system by means of a data cable, the “manual” button will be overridden by a no volt switch but the function will work in the same way.

Vertical & Vitesse Motor
(red and white wires are spare)




Roller Motor




Power input

PROG Button

Manual Button

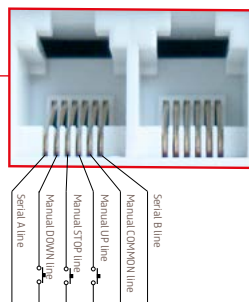

Direction switch
Indicator light

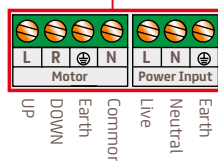



Please ensure you follow all recommended electrical safety procedure. The guideline below also apply:

1. Do not allow the receiver to make contact with metal objects.
2. Minimum distance of 1.5m between receiver and the ground.
3. Minimum distance of 0.3m between receiver and the ceiling.
4. Minimum distance of 0.3m between receiver and the transmitter.
5. For your safety disconnect all sources of power before wiring.
6. Ensure you are earthed to prevent static damage to components.
7. Multi-core flexible cable is recommended.
8. Fix cables with cable clips to prevent receiver damage.


Programming Instructions

YewdaleDefiant® Radio Receiver (980027)

Programming:



Change direction: (method 1)

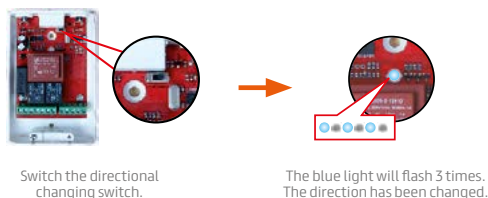

Change direction: (method 2)



Add a new transmitter:

Each receiver can program a maximum of 20 transmitters. In the event of programming a 21st transmitter, the previously programmed transmitter will be deleted (i.e the 20th).



Delete single channel:




Programming Instructions

YewdaleDefiant® Radio Receiver (980027)

Reset all channels: (method 1)




Reset all channels: (method 2)

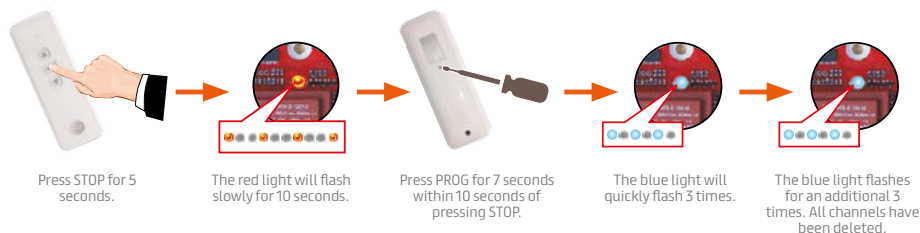

Trouble Shooting:

Items	Problems	Solution
1	Indicator light is on, but the is no reaction.	Check wiring and confirm selected channel.
2	Indicator on transmitter is off or lit dimly.	Check batteries are correctly installed and fitted.
3	Transmitter and receiver work commonly, motor has no rotation.	Check motor wiring and there is no visible damage to the motor.

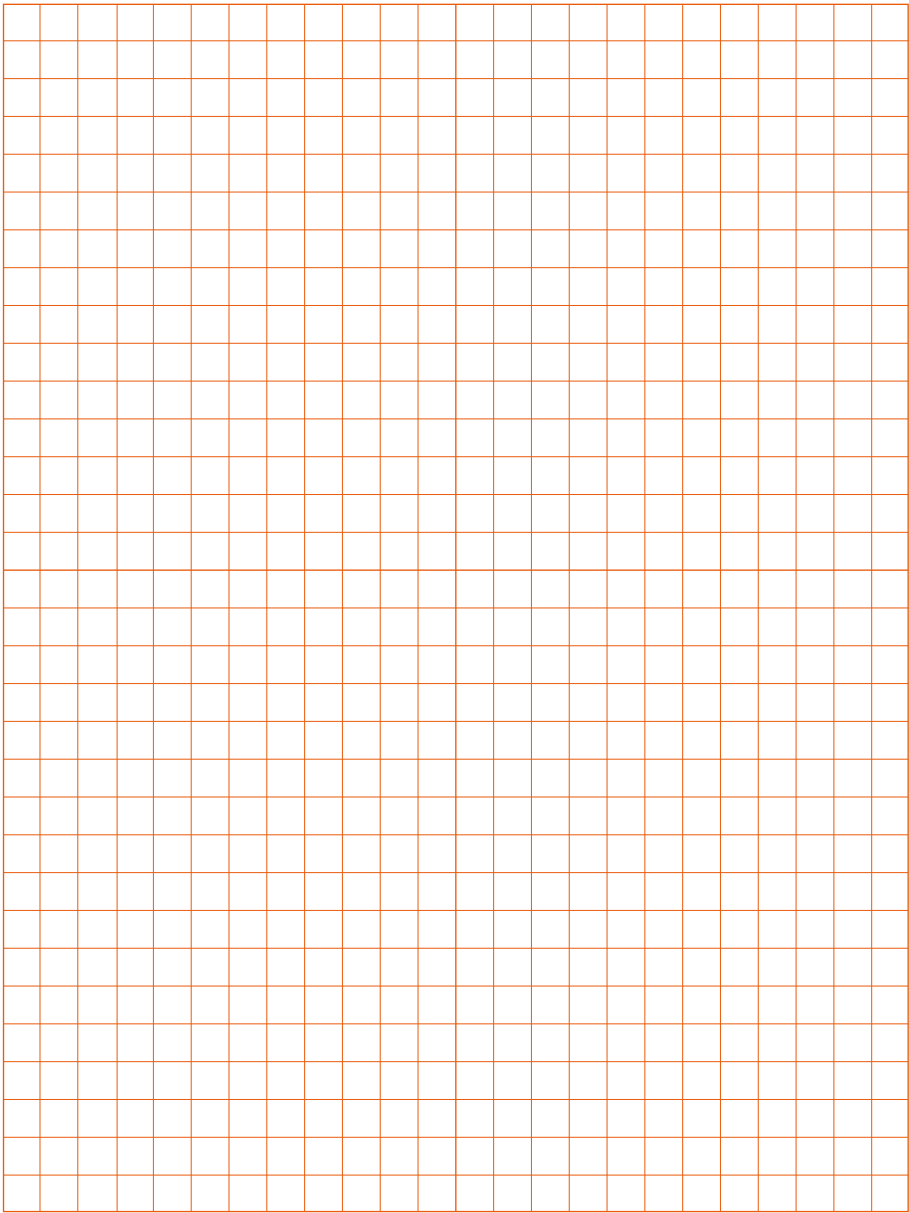



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.



yewdale **Defiant**[®]
FABRIC AND BLIND SYSTEMS



yewdale **Kestrel**[®]
MAGNETIC ANTI-TILTATURE SYSTEM



yewdale **Movatrack**[®]
CURTAIN AND TRACK SYSTEMS



yewdale **Harrier**[®]
CURTAIN AND SHOWER CURTAINS



yewdale **Vitesse**[®]
CURTAIN TRACK SYSTEMS