


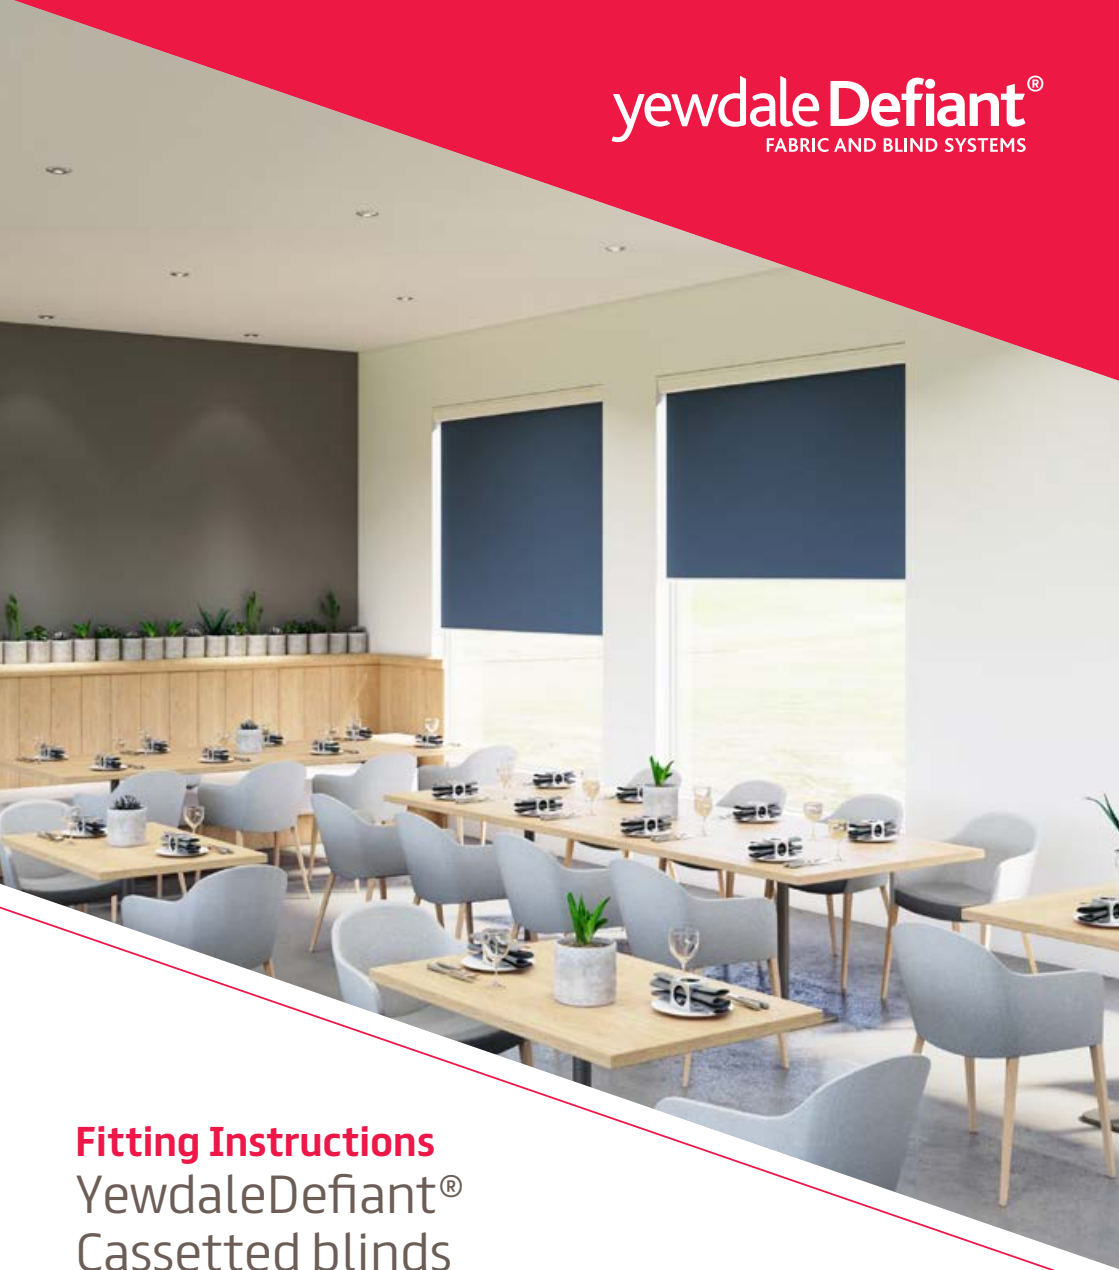


Fitting Instructions
YewdaleDefiant®
Cassette blinds
(C20s)

Part no: 2000

Please note

All blinds should be installed by a person competent in DIY.
If in doubt, please consult a professional.

Safety Instructions

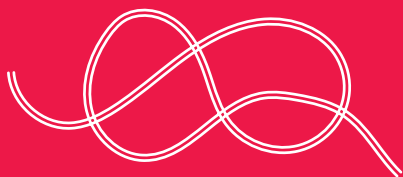

Loops in pull cords, chains, tapes and inner cords that operate the product can cause strangulation.



Keep cords out of the reach of young children.



Move beds, cots and furniture away from window covering cords




Do not tie cords together. Make sure cords do not twist and create a loop


Please note

All blinds should be installed by a person competent in DIY.
If in doubt, please consult a professional.


What you'll need

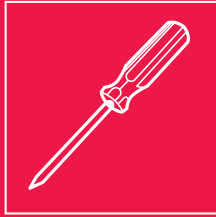

Screwdriver

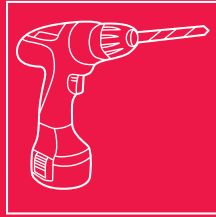

Drill

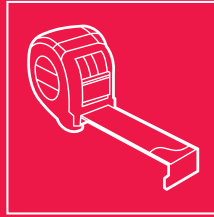

Measuring Tape




Pencil




Screws


What's in the box

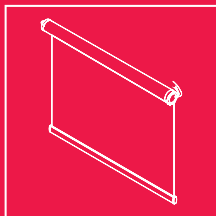


Roller Blind

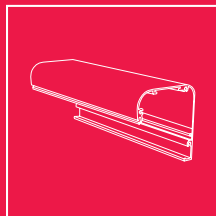

Cassette

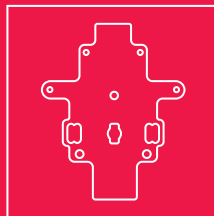

Transition Plate

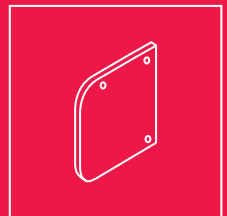

End Plate



Warning

All instructions must be read
before installing the blind.



Fitting Time

Approx. 15 minutes




Need Extra Help?


You can find a helpful installation video by simply
scanning this QR Code or visiting our website

www.yewdale.co.uk/videos-page

C20 Cassette blind

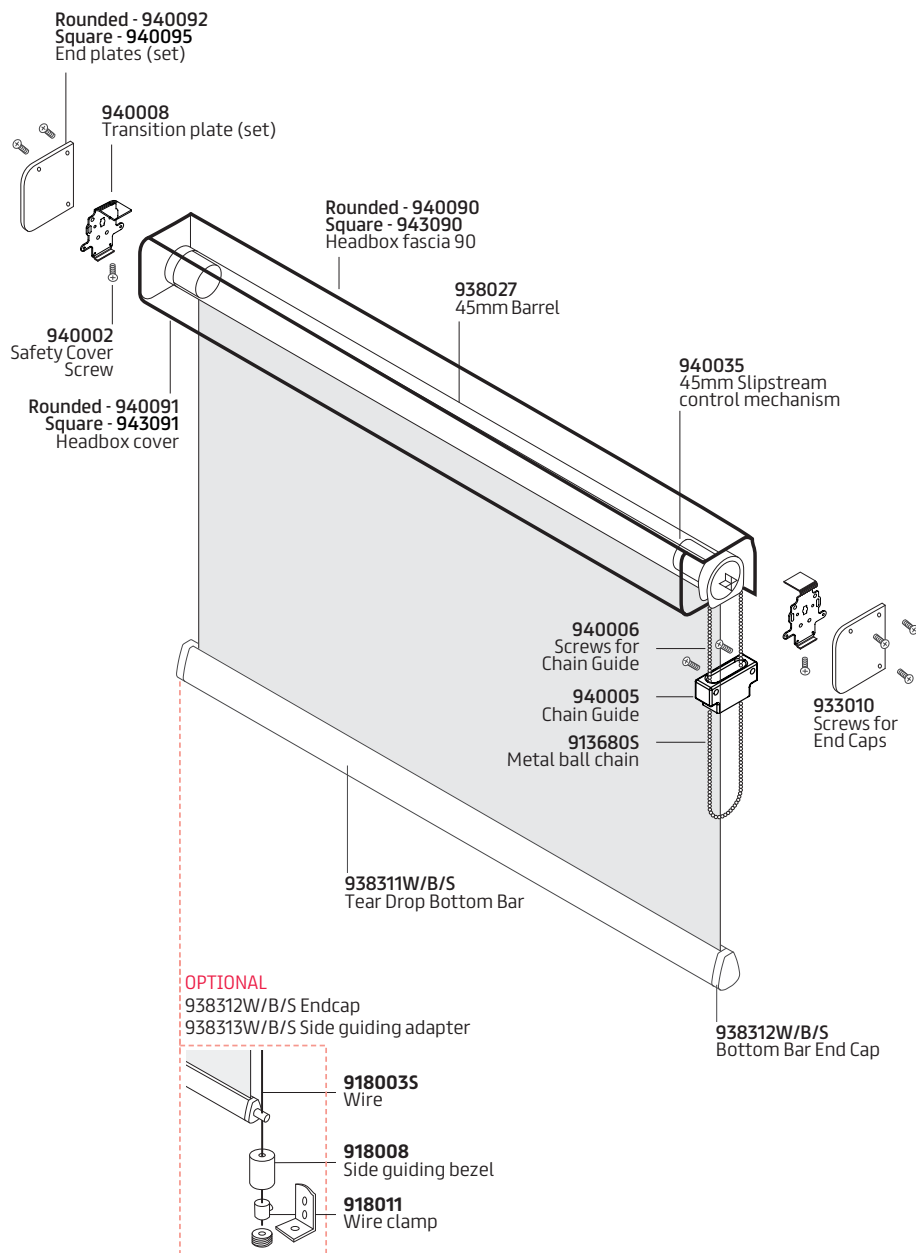


Side Guide Wires

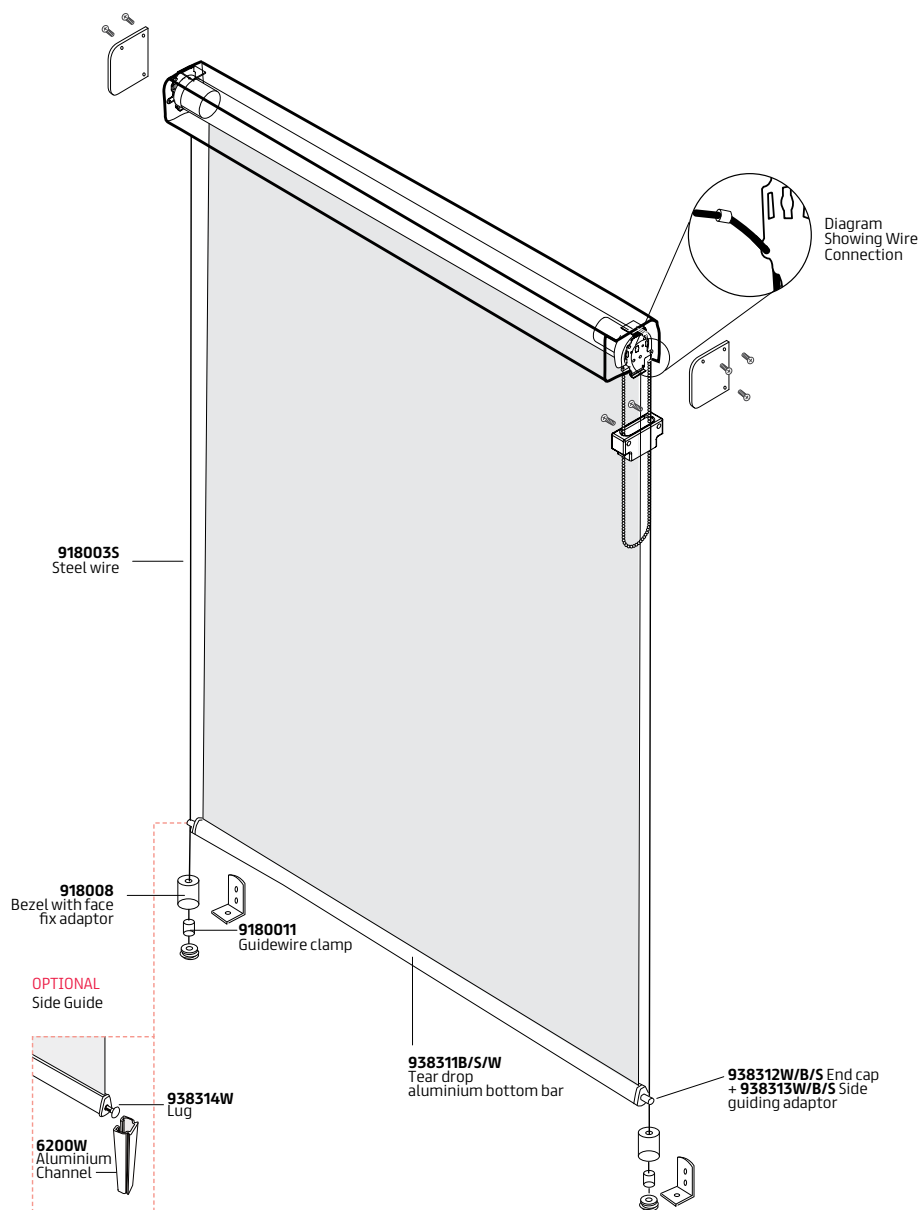


C20s

Cassette blinds


- 01** Remove the two safety screws in the underside of the head box to enable the cover to open (if sidewinder, also unscrew the chain guide).

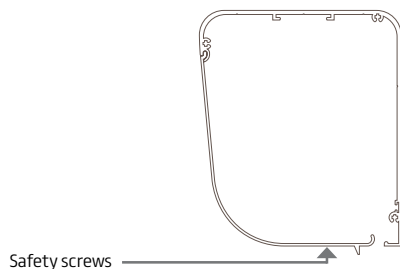

- 02** Drill 3.8mm holes using the indents in the head box—on the top for recess fix or back for face fix. Space holes evenly, no more than 1m apart, to ensure a level installation.

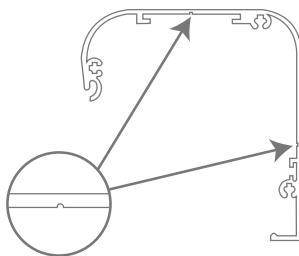

- 03** Lift the head box into place. For steel or concrete, mark and drill holes, insert plugs, then fix with suitable screws. For timber, fix directly using appropriate screws.

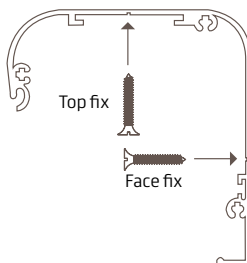


NB. To operate correctly, the blind **MUST** be fixed level.



C20s

Cassette blind


- 04** Insert the barrel and fabric into the head box. If it is **spring controlled**, go to point 5 - 6 and then to point 11. If the blind is **side winder controlled**, go to point 7-9 and then to point 11. If the blind is **crank controlled**, go to point 9 and then to point 16. If it is **electrically controlled**, go to point 10 and refer to motor instructions for setting limit stops

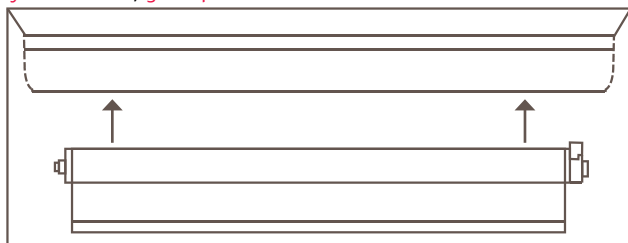

- 05** Insert/click the blind on to the back bar into the head box. The spring must be on the right-hand side unless fabric is reverse rolled.

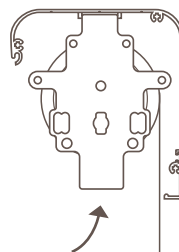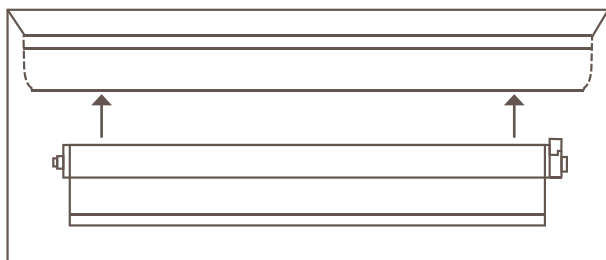

- 06** The spring would have been tensioned during the manufacturing process but the tension can be increased or decreased if required. If the fabric does not wind up completely when the blind is operated, greater spring tension can be applied as follows:

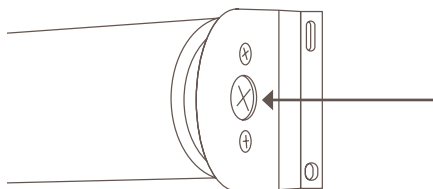


- Remove the blind and back bar from the head box.
- Use a flat head screwdriver through the hole in the bracket at the spring end to either increase or decrease the tension as desired.
- Insert/click the barrel and fabric back into the head box.
- Attach the pull cord onto the bottom bar


C20s

Cassette blinds


- 07** Fix the chain guide into position by threading the chain through the chain guide. Ensure that the chain is not twisted.

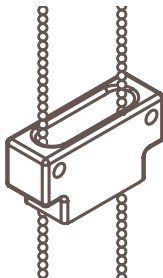

- 08** Re attach the chain guide using the screws provided.

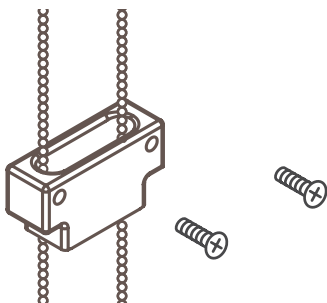


- 09** Insert the barrel and fabric into the head box.

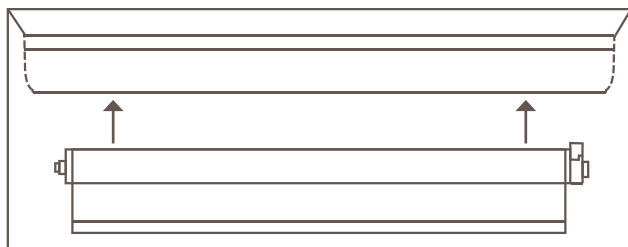


C20s Cassette blind

- 10** Drill an exit hole for the electric cable slide outlet grommet onto the motor cable, push the cable through the exit hole and fit the grommet into position and insert the fabric and barrel into the head box, making sure the supply cable is carefully threaded through.

- 11** If side guiding is required, please follow the instructions overleaf. If not required then click the cover back in place and secure using the 2 safety screws previously removed.

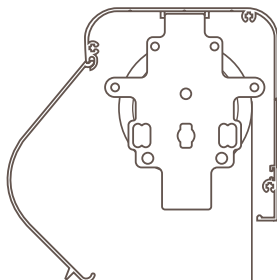


- 12** Check the blind operates correctly.

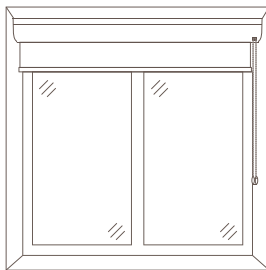

- 13** Ensure the relevant child safety device is used to comply with BS EN13120:2009+A1:2014, BS EN16433:2014 and BS EN16434:2014

Installing the Chain Tidy


The chain tidy will be attached to the chain when the blind arrives. The chain tidy should be at a maximum distance from the control mechanism, keeping the chain taut (not under excessive tension however as this could negatively affect the longevity and operation of the blind). Put the retaining device on the wall, mark fixing holes with a pencil, drill the holes and screw the device to the wall with suitable fixings

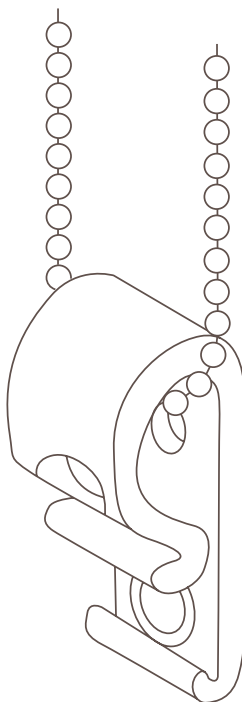


C20s

Easy Break Chain Connectors

Two easy break chain connectors are connected to the operating chain 200mm apart. This ensures that at least one of them will be in the vertical position ensuring they perform as required. If excessive weight is applied within the loop a connector will come apart. If a connector comes apart and is undamaged then it will need to be re-connected by inserting the last ball on the end of the chain into the hole in the connector and pushed into place.

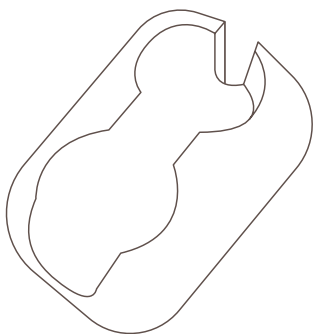


Easy break connector

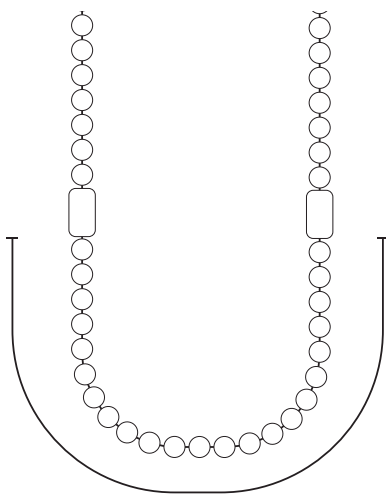


200mm apart

Installing the Side Guide Wires


- 01** Cut two lengths of the steel wire (Blind drop + 100mm), attach the guide wire clamp to one end of each of the wires.

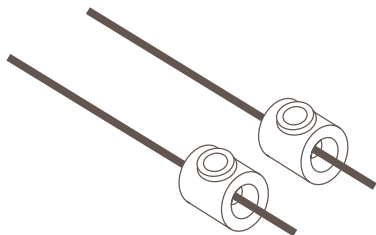


- 02** Thread the loose end of the wire through the transition plates from the top (using the back hole provided).

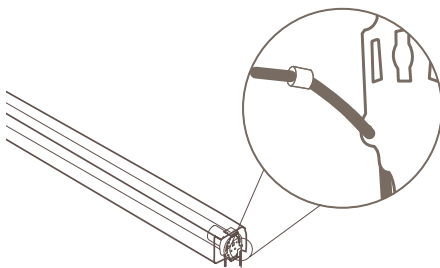

- 03** Thread the steel wire through the guide holes in the bottom bar end caps

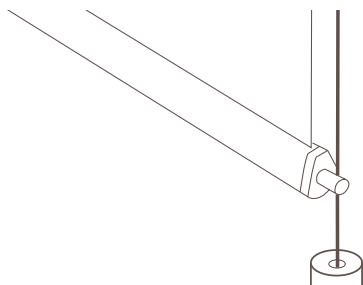

- 04** Unscrew both covers of the bezels.

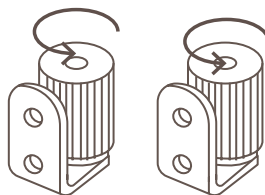

- 05** Fix the bezels directly below wire clamp (if face fix application use the face fix adaptor).



- 06** Thread the steel wire through the bezel cover (from the top).



Installing the Side Guide Wires

- 07** Holding the covers in line with the home position, calculate the length of the wire and trim to size.



- 08** Cut the wire to length and securely fasten wire clamps to the end of the wire.



- 09** Screw the cover caps onto the bezels until the wire is taught



- 10** For motor programming instructions, please refer to the enclosed leaflet.



- 11** If the blind is spring operated, attach the knot holder to the bottom bar (along with pull cord and acorn). Attach the cleat to the cill to hold the blind in the 'Down' position.



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH

Call: +44 (0)1268 570900

Email: sales@yewdale.co.uk

For more information on all
Yewdale products, please call
the sales department.

