


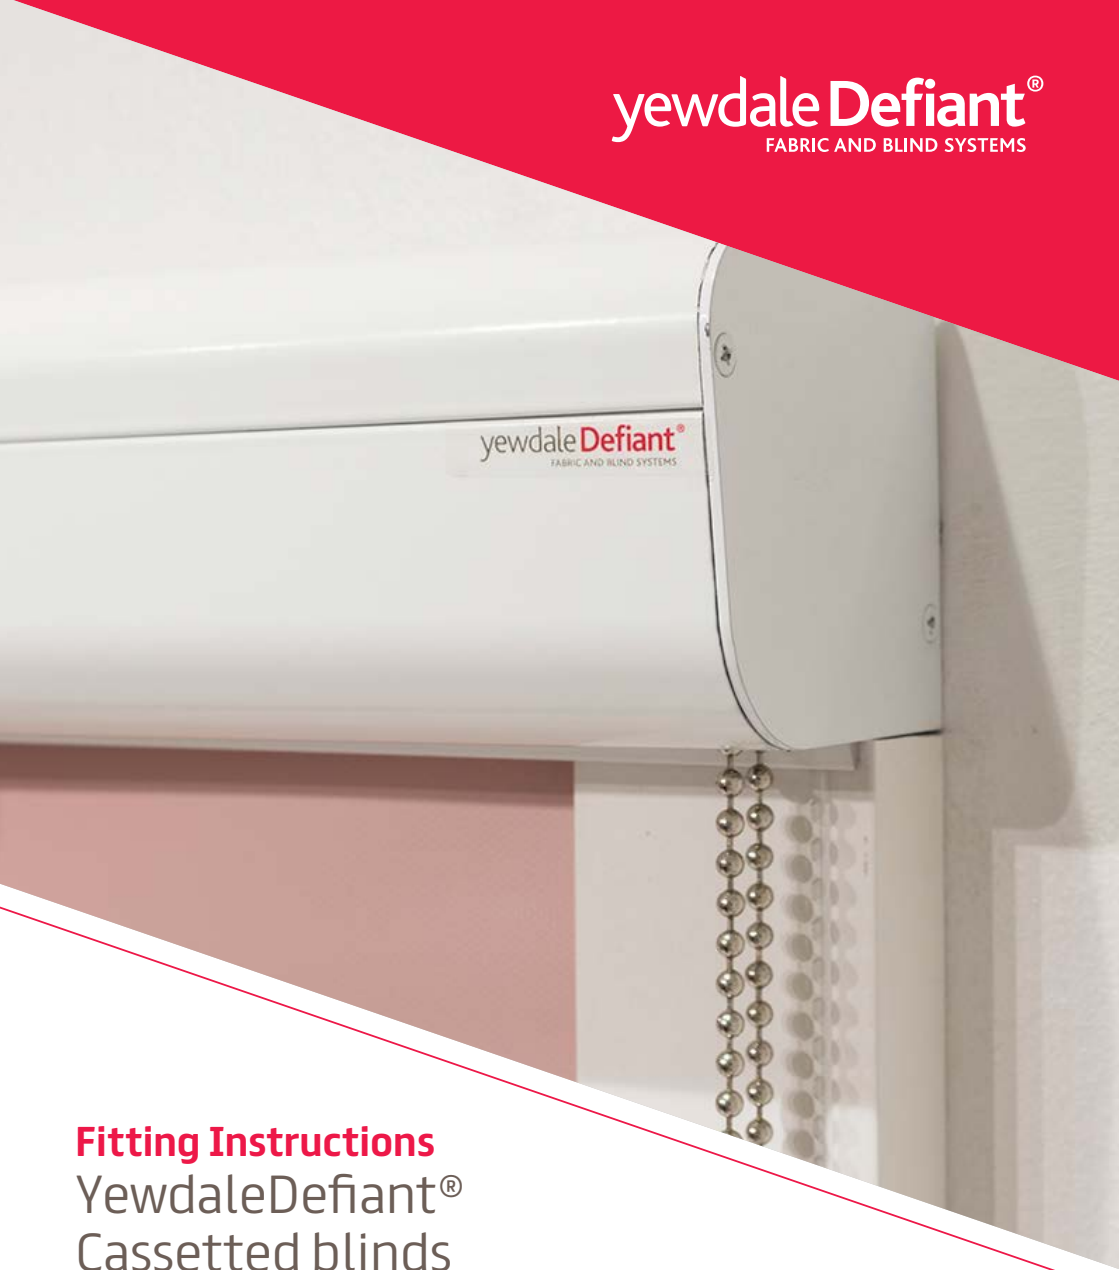


Fitting Instructions
YewdaleDefiant®
Cassetted blinds
(C40s)

Part no: 2001

Please note

All blinds should be installed by a person competent in DIY.
If in doubt, please consult a professional.

Safety Instructions

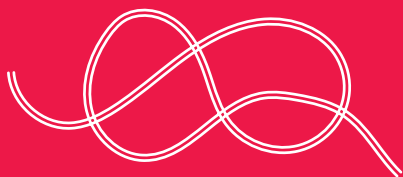

Loops in pull cords, chains, tapes and inner cords that operate the product can cause strangulation.



Keep cords out of the reach of young children.



Move beds, cots and furniture away from window covering cords




Do not tie cords together. Make sure cords do not twist and create a loop


Please note

All blinds should be installed by a person competent in DIY.
If in doubt, please consult a professional.


What you'll need

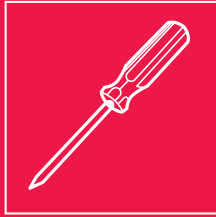

Screwdriver

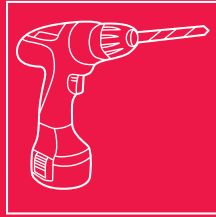

Drill

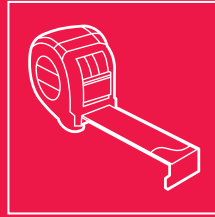

Measuring Tape




Pencil




Screws


What's in the box

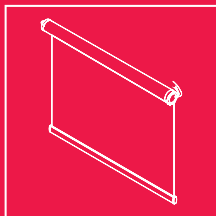


Roller Blind

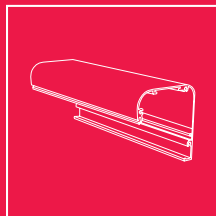

Cassette

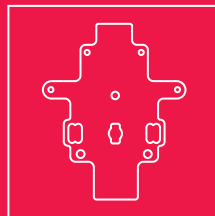

Transition Plate

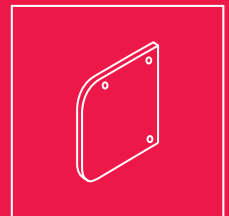

End Plate



Warning

All instructions must be read
before installing the blind.



Fitting Time

Approx. 15 minutes




Need Extra Help?


You can find a helpful installation video by simply
scanning this QR Code or visiting our website

www.yewdale.co.uk/videos-page

C20 Cassette blind

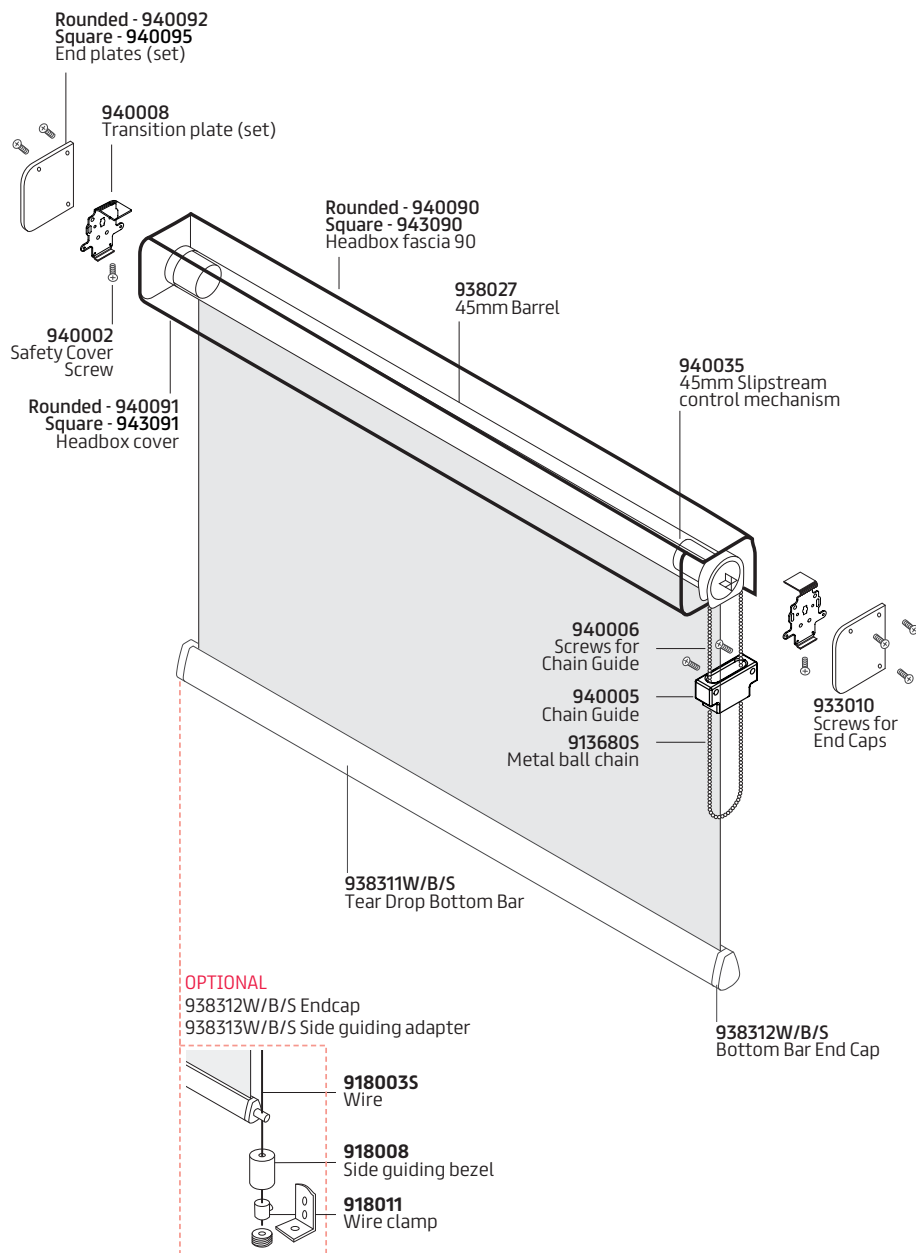


Side Guide Wires

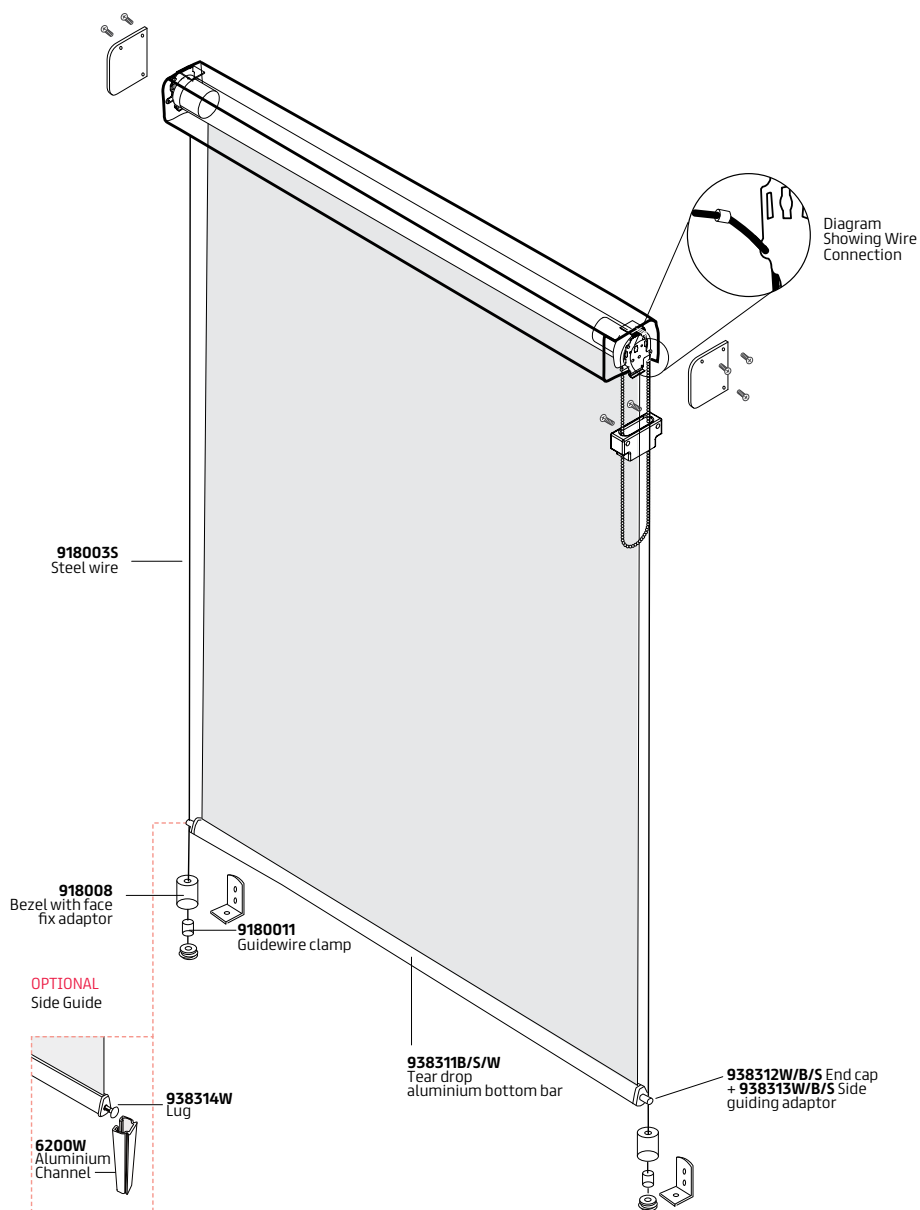


C40s

Cassette blinds


- 01** Remove the two safety screws in the underside of the headbox to enable the cover to open (if the blind is a sidewinder, also unscrew the chain guide).

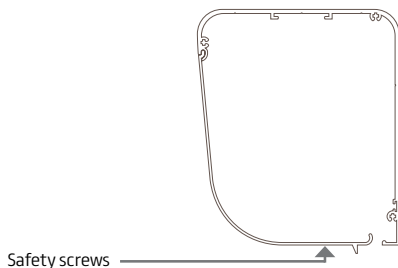

- 02** Drill 3.8mm holes using the indents in the head box—on the top for recess fix or back for face fix. Space holes evenly, no more than 1m apart, to ensure a level installation.

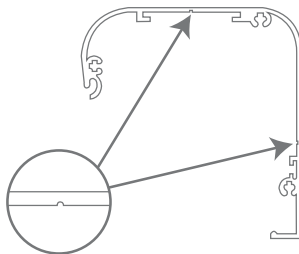

- 03** Lift the head box into place. For steel or concrete, mark and drill holes, insert plugs, then fix with suitable screws. For timber, fix directly using appropriate screws.

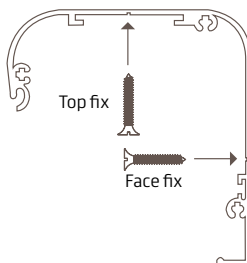


NB. To operate correctly, the blind **MUST** be fixed level.



C40s

Cassette blind


- 04** Insert the barrel and fabric into the headbox. If the blind is springcontrolled, go to point 5. If it is sidewinder controlled, go to point 7. If it is crank controlled, go to point 9. If it is electrically controlled, go to point 10 and refer to the motor instructions for setting limit stops.

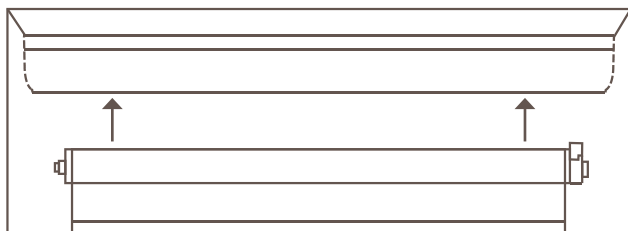

- 05** Insert/click the blind on to the back bar into the head box. The spring must be on the right-hand side unless fabric is reverse rolled.

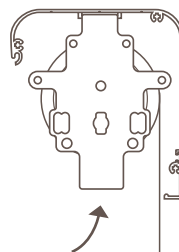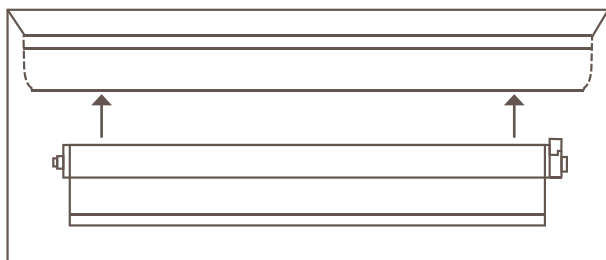

- 06** The spring would have been tensioned during the manufacturing process but the tension can be increased or decreased if required. If the fabric does not wind up completely when the blind is operated, greater spring tension can be applied as follows:

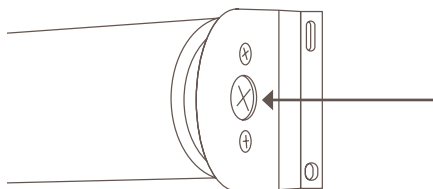


- Remove the blind and back bar from the head box.
- Use a flat head screwdriver through the hole in the bracket at the spring end to either increase or decrease the tension as desired.
- Insert/click the barrel and fabric back into the head box.
- Attach the pull cord onto the bottom bar


C40s

Cassette blinds


- 07** Fix the chain guide into position by threading the chain through the chain guide. Ensure that the chain is not twisted.

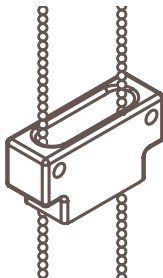

- 08** Re attach the chain guide using the screws provided.

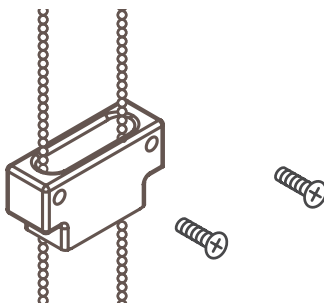

- 09** Insert the barrel and fabric into the head box.

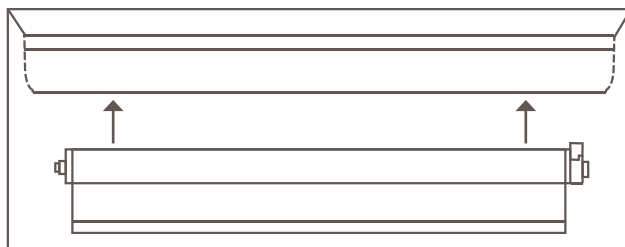

C40s

Cassetted blind


- 10** Drill an exit hole for the electric cable slide outlet grommet onto the motor cable, push the cable through the exit hole and fit the grommet into position and insert the fabric and barrel into the head box, making sure the supply cable is carefully threaded through.

-
- 11** For motor programming instructions, please refer to the enclosed leaflet


Instructions for Standard Face Fix Side Channels

- 01** Fix the side channels to the end cheeks with lugs using the supplied 3/16" screws. Drill a 2 mm hole through the channel to secure it to the headbox endplate lug. Align and fix the bottom angle with the headbox (optional for trackers).


It is important that the blind is in the headbox with the blind fully retracted when the side channels are being installed.

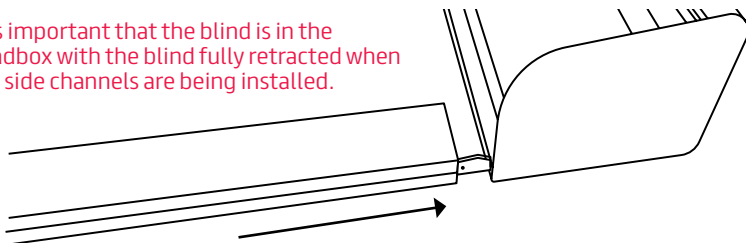

- 02** Fix the face-fixing side channel to the wall (fixings not supplied) by drilling 5 mm holes at max 1000 mm centres, with 9.5 mm access holes in front as shown.

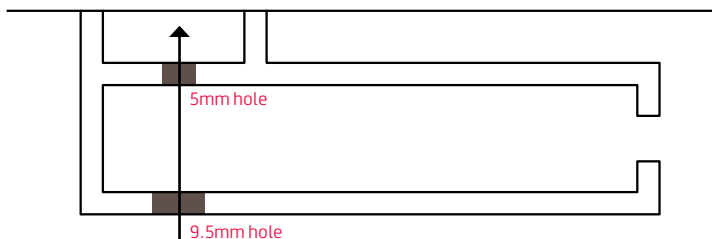


- 03** Run the blind up and down and close access holes with grommets supplied when you're confident that the blind operates correctly.

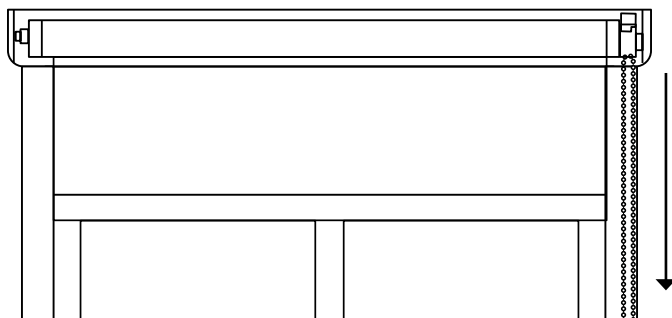


C40s

Instructions for Standard Face Fix Side Channels

- 04** Insert the cover into the headbox groove, swing closed, and press upward until it clicks into place.

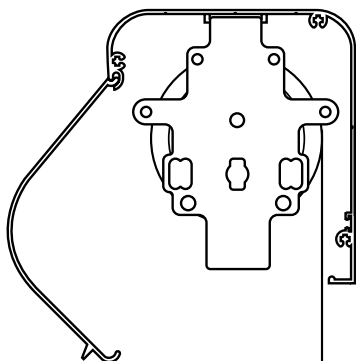

- 05** Fix the cover using the two safety screws provided.

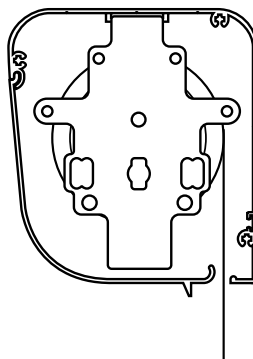


N.B Ignore steps 4 & 5 if you have followed the goalpost installation.


Instructions for Standard Recess Fix Side Channels

- 01** Fix the bottom angle (if required) in line with the headbox. Attach the side channels to the end cheeks using the supplied 3/16" screws. Drill a 2mm hole through the channel to secure it to the headbox endplate lug.


It is important that the blind is in the headbox with the blind fully retracted when the side channels are being installed.

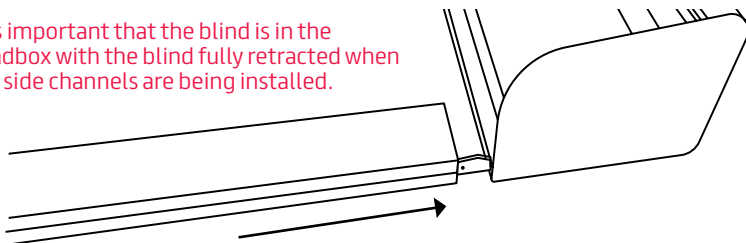

- 02** The recess-fixing side channel must be fixed to the ceiling using suitable fixing (Not Supplied) by drilling 5mm fixing holes at maximum 1000mm centre.

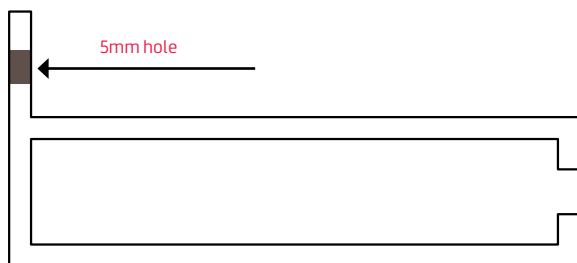


- 03** Run the blind up and down until you're confident the blind operates correctly.

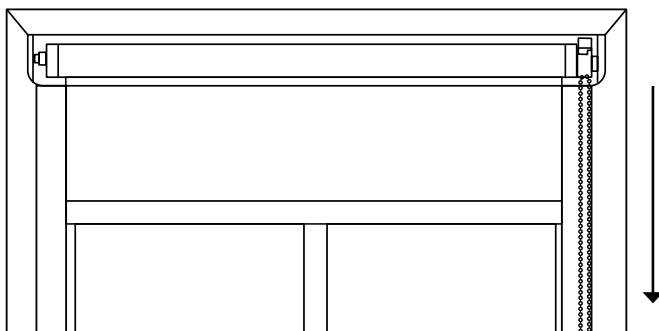


Instructions for Standard Recess Fix Side Channels

- 04** Insert the cover into the headbox groove, swing closed, and press upward until it clicks into place.

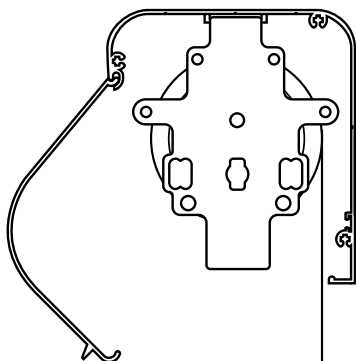

- 05** Fix the cover using the two safety screws provided.

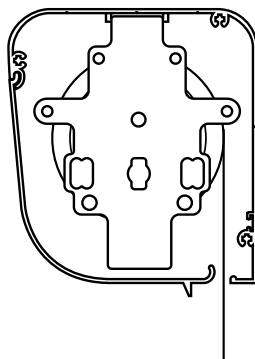


N.B Ignore steps 4 & 5 if you have followed the goalpost installation.
Side channels must be fixed square. Check by measuring diagonals.

C40s


Installing the Chain Tidy

The chain tidy will be attached to the chain when the blind arrives. The chain tidy should be at a maximum distance from the control mechanism, keeping the chain taut (not under excessive tension however as this could negatively affect the longevity and operation of the blind). Put the retaining device on the wall, mark fixing holes with a pencil, drill the holes and screw the device to the wall with suitable fixings

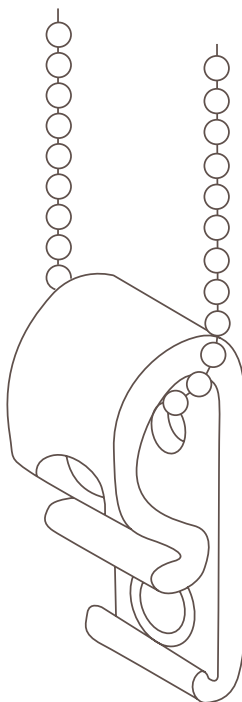


C40s Easy Break Chain Connectors

Two easy break chain connectors are connected to the operating chain 200mm apart. This ensures that at least one of them will be in the vertical position ensuring they perform as required. If excessive weight is applied within the loop a connector will come apart. If a connector comes apart and is undamaged then it will need to be re-connected by inserting the last ball on the end of the chain into the hole in the connector and pushed into place.

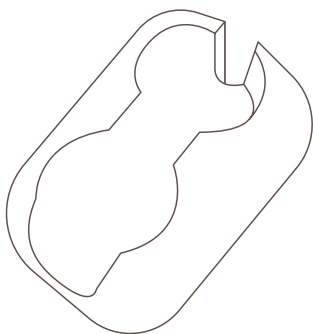

Easy break connector

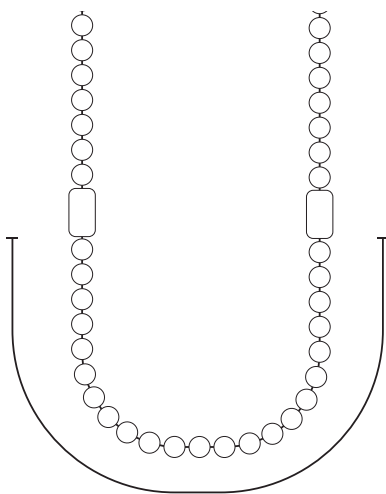

200mm apart




Ensure the relevant child safety device is used to comply with BS EN13120:2009+A1:2014, BS EN16433:2014 and BS EN16434:2014 as follows:
*You will have been provided with either a chain tidy or easy break chain connector

Instructions for Tracker Side Channels


01 Ensure that the blind is in the headbox and that it is fully retracted before the side channels are installed.

02 Align the bottom angle with the back and end of the headbox; optional for trackers.

03 Attach the side channels to the end cheeks using the supplied 3/16" screws. Drill a 2mm hole through the channel to secure it to the headbox endplate lug.

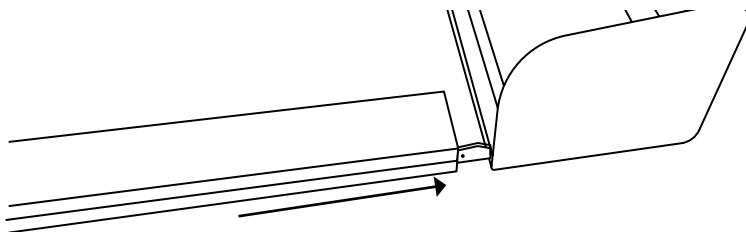


03 Run the blind up and down until you're confident the blind operates correctly.

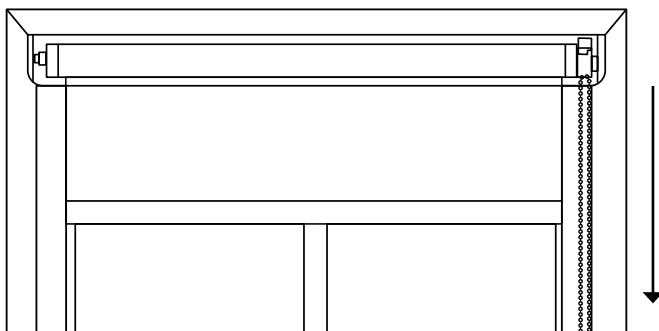


Instructions for Tracker Side Channels

- 04** Insert the cover into the headbox groove, swing closed, and press upward until it clicks into place.

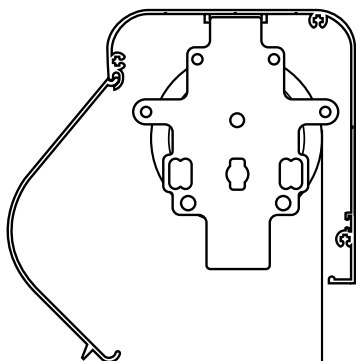

- 05** Fix the cover using the two safety screws provided.

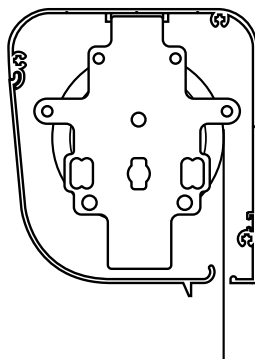

N.B Ignore steps 4 & 5 if you have followed the goalpost installation.
Side channels must be fixed square. Check by measuring diagonals.



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

For more information on all
Yewdale products, please call
the sales department.

