 


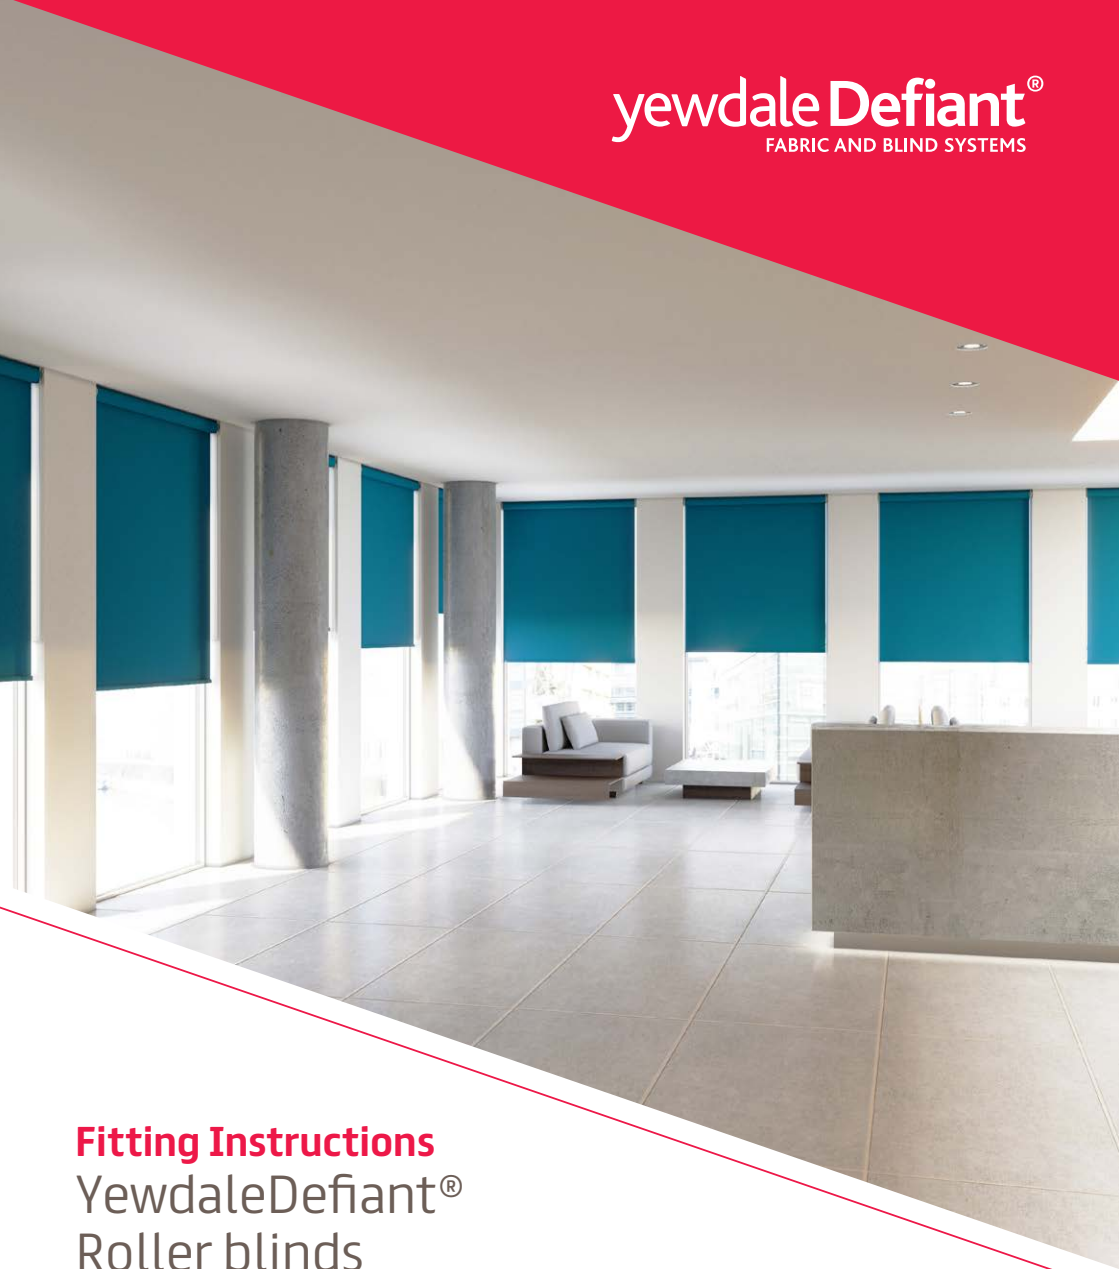

Fitting Instructions


YewdaleDefiant®

Roller blinds

(R20, Fascia, R20C, R20D, R20S, R20W)

Part no: 936

Safety Instructions

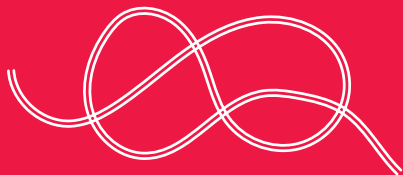

Loops in pull cords, chains, tapes and inner cords that operate the product can cause strangulation.



Keep cords out of the reach of young children.



Move beds, cots and furniture away from window covering cords



Do not tie cords together. Make sure cords do not twist and create a loop

Please note

All blinds should be installed by a person competent in DIY.
If in doubt, please consult a professional.

Fitting Instructions

 
YewdaleDefiant® Child Safety Devices

- 04** Sidewinder Control
R20
- 06** Fascia
R20
- 08** Crank Control
R20C
- 10** Double Roller
R20D
- 12** Spring Control
R20S
- 14** Light Duty Crank
R20W
- 16** Radio Control Battery Motor 7.4v DC
R20B
- 18** Electric 24v DC
R20M


R20

Roller Blind with Sidewinder Control


01 The pin-end is sprung for easy fitting.

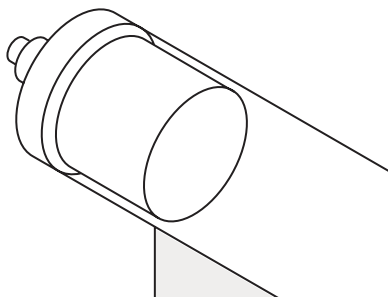


02

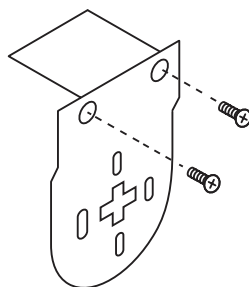 


03

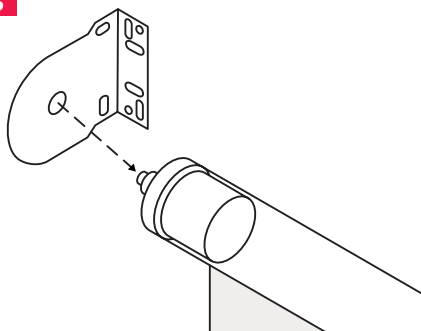 


04

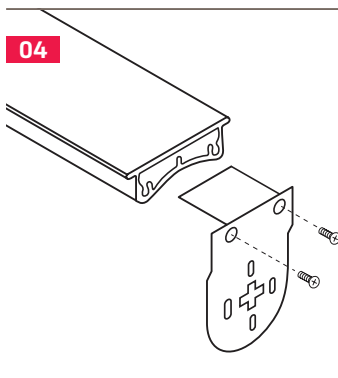 

05

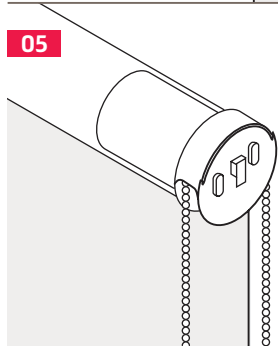 

 
R20 Roller Blind with Sidewinder Control

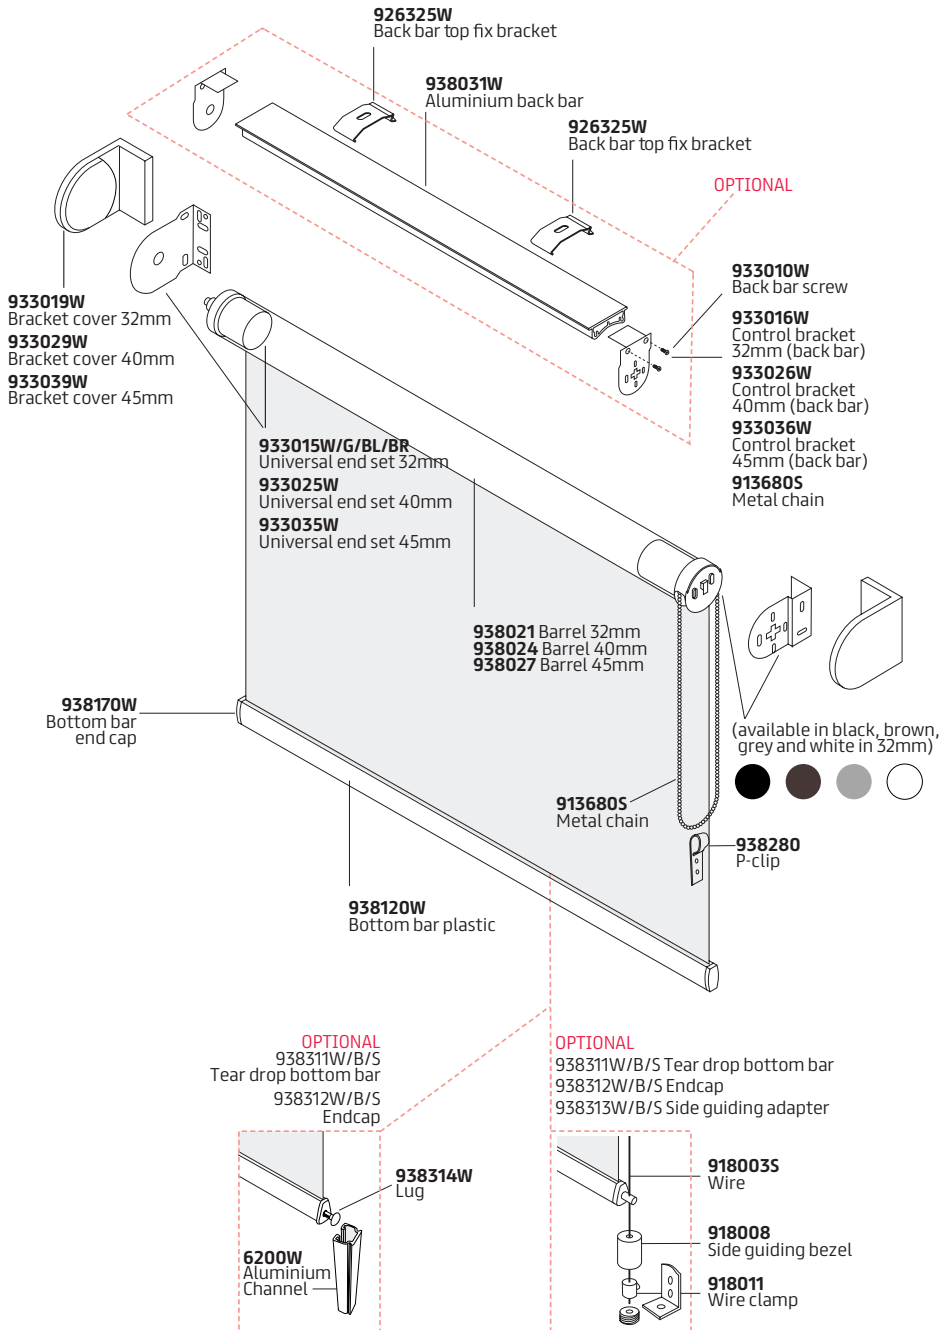


R20

Roller Blind with Fascia

 
01 For top fix, use the fascia profile.

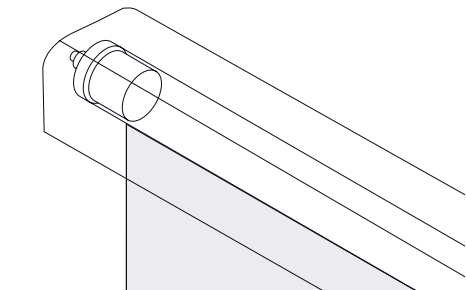

 
02 For face fix, use the fascia brackets.

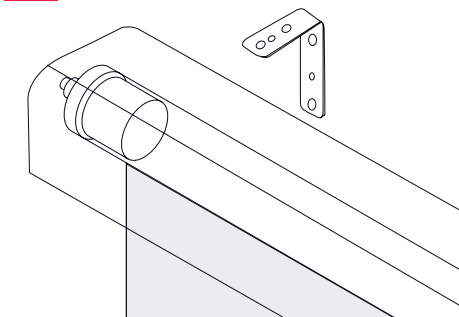

 
03 Remove the chain guide from the transition plate.

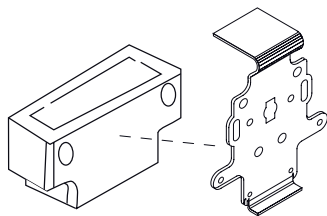


04

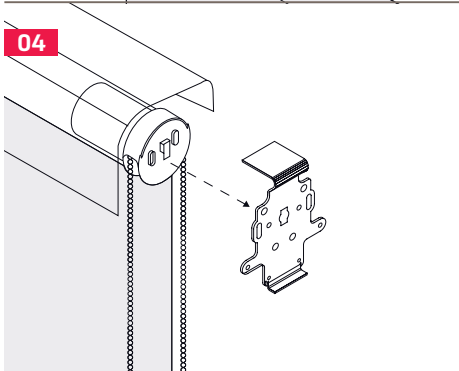 

05

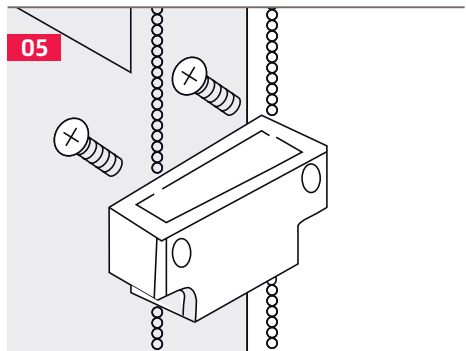 


R20 Roller Blind with Fascia

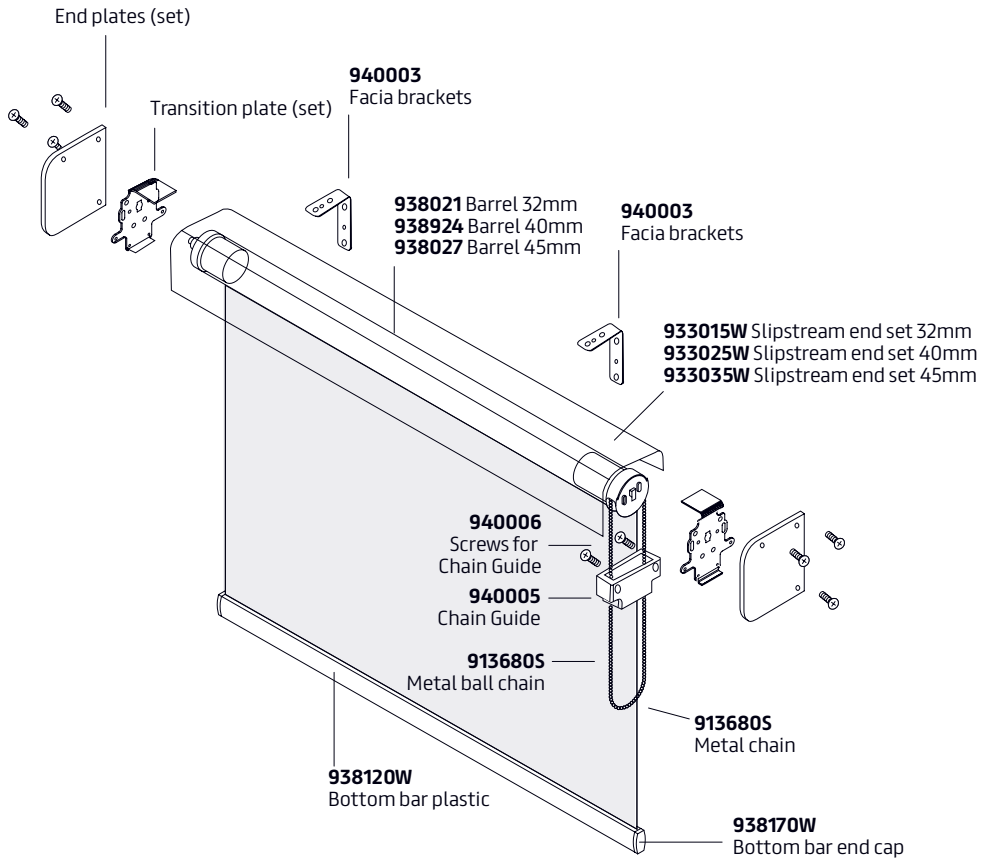 


R20

Roller Blind with Fascia 70

 
- 01** For face fixed, use the screws supplied to fix the brackets securely to the wall.

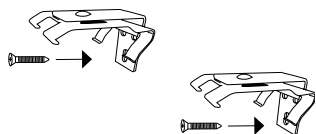


- 02** For top fixed, fix the brackets to the top of the recess using suitable screws.

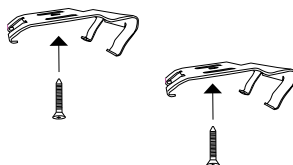


- 03** Attach the end caps to the fascia.

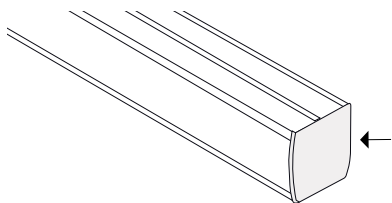


- 04** Hook the back of the fascia onto the bracket and push upwards until you hear a click, confirming it is securely in place.

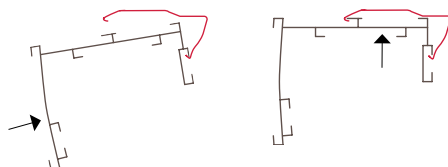


- 05** Lifting the blind into position, slot the barrel into each end of the fascia using the pin end side first.

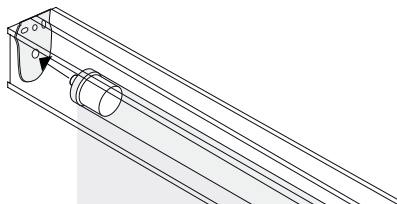

- 06** To detach the fascia, apply pressure to push it back, then pull down to remove it.

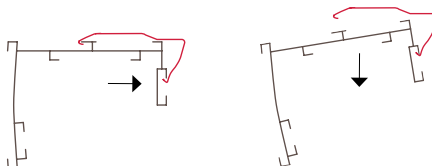


R20 Roller Blind with Fascia 70

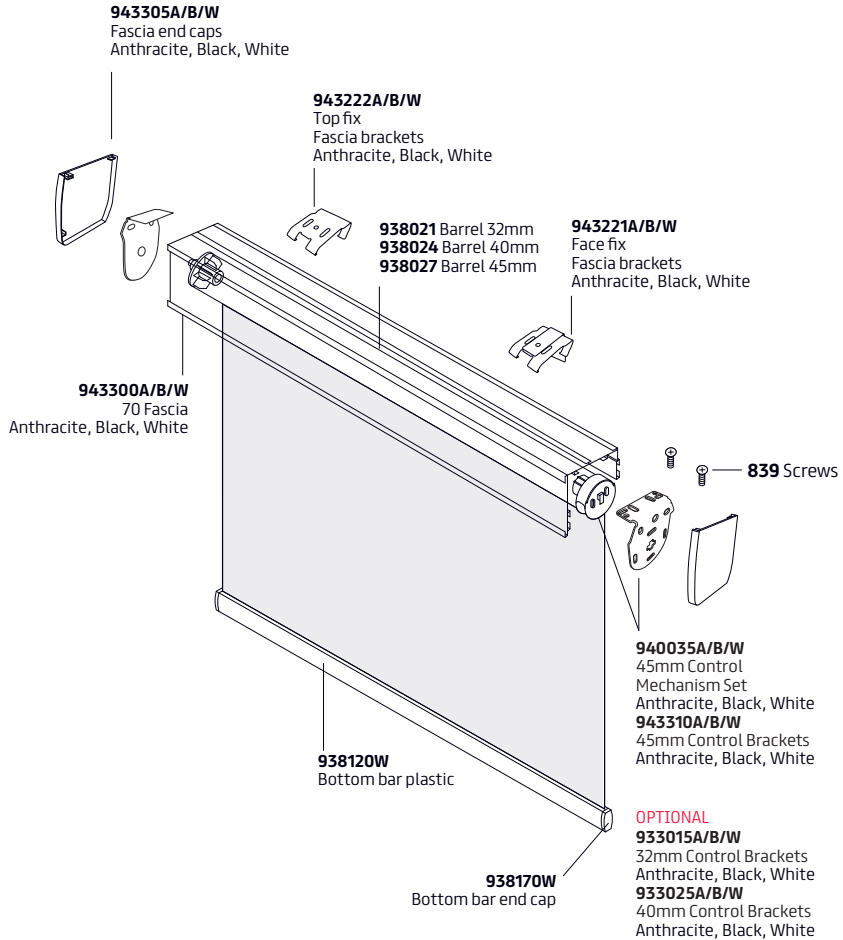


R20C

Roller Blind with Crank Control

 
01 The pin-end is sprung for easy fitting.

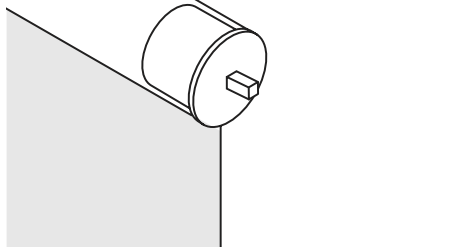


02

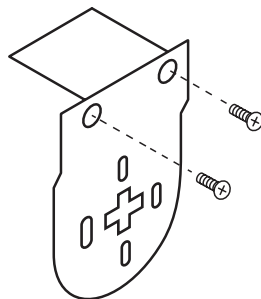 


03

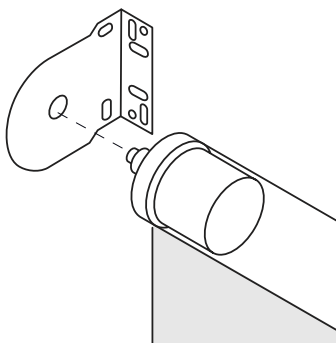 


04

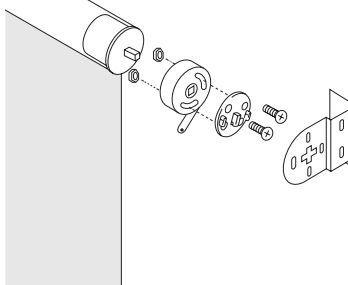 

 05 Extra screw to secure the crank control.

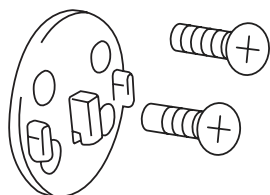


R20C Roller Blind with Crank Control

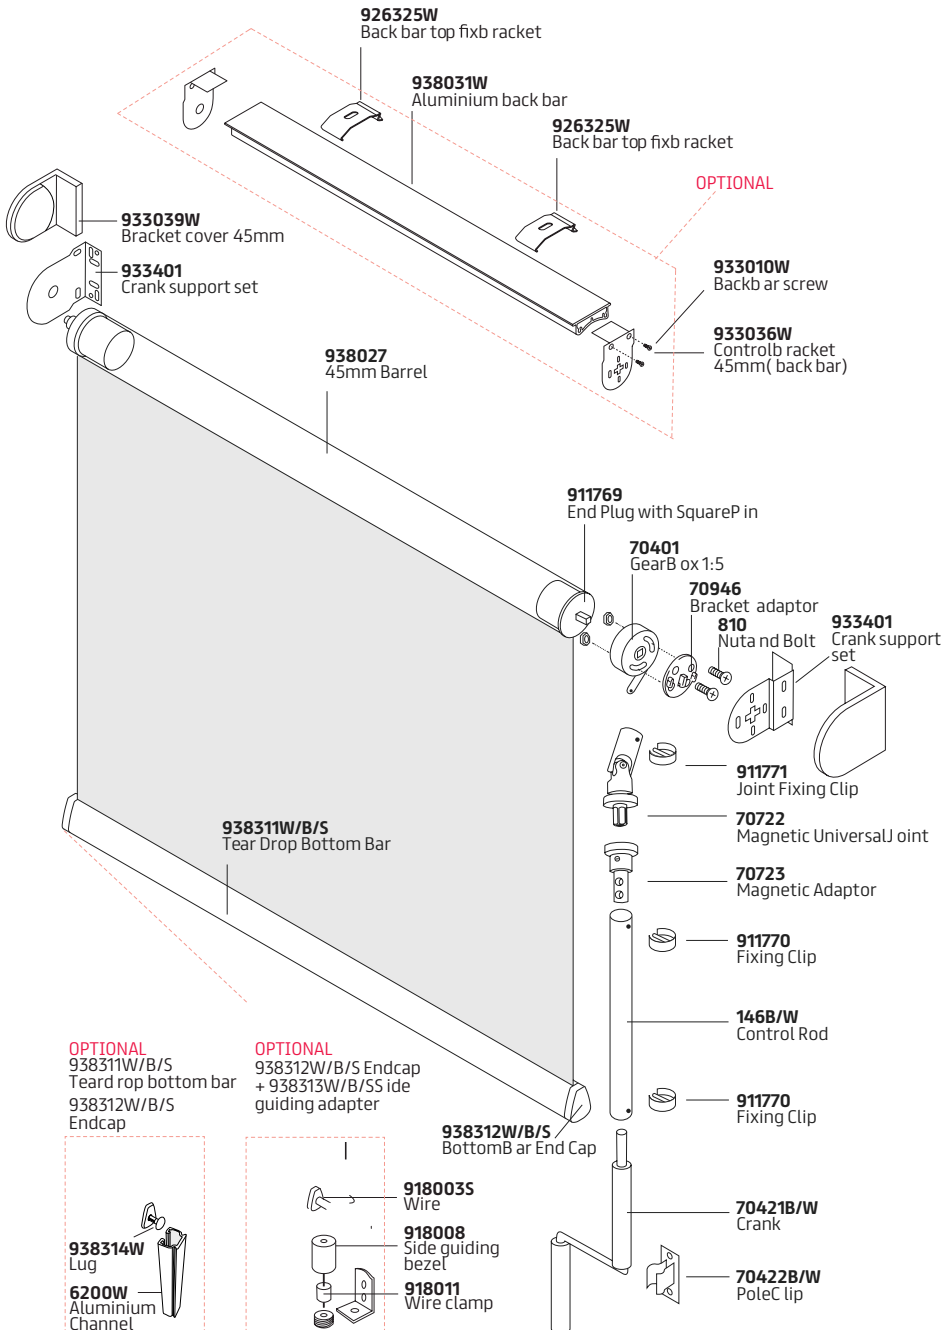 


R20D

Double Roller Blind

 
01 The pin-end is sprung for easy fitting.

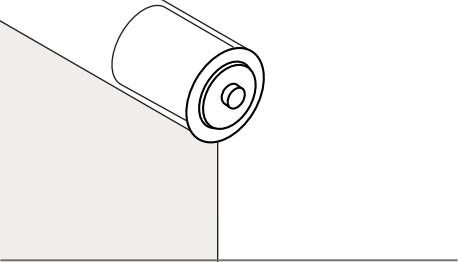


02

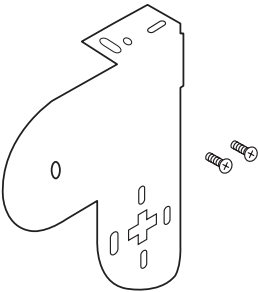 


03

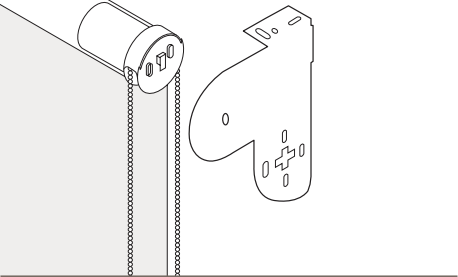 


04

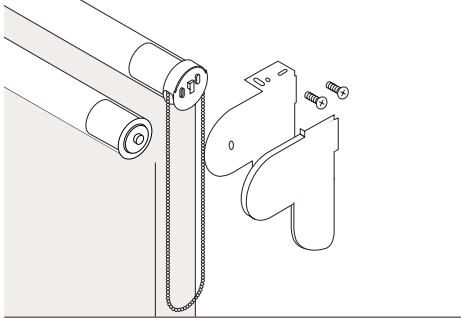 


R20D Double Roller Blind

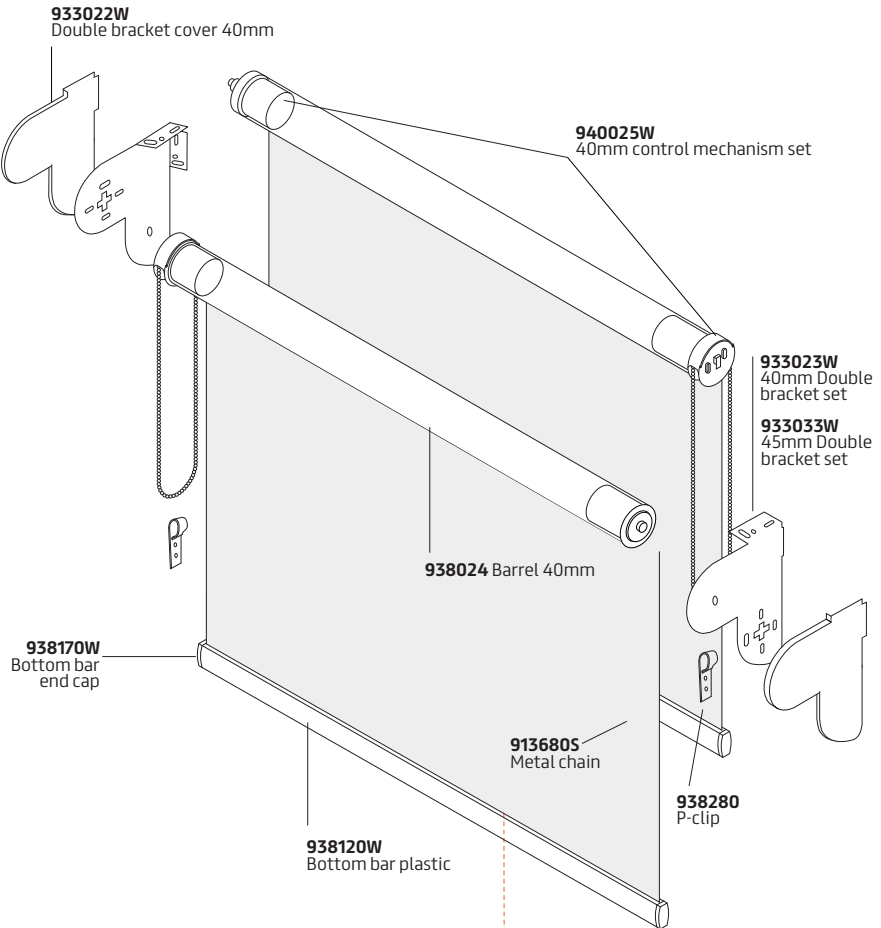 

 OPTIONAL
938311W/B/S
Tear drop bottom bar
938312W/B/S
Endcap





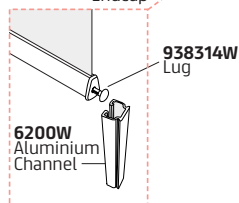


 OPTIONAL
938311W/B/S Tear drop bottom bar
938312W/B/S Endcap
938313W/B/S Side guiding adapter

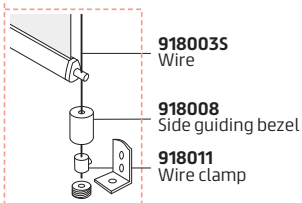


R20S

     Roller Blind with Spring Control

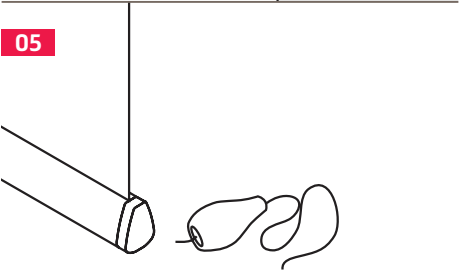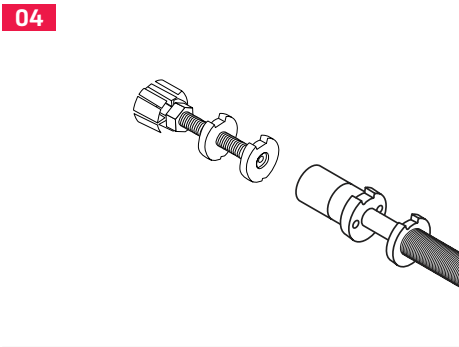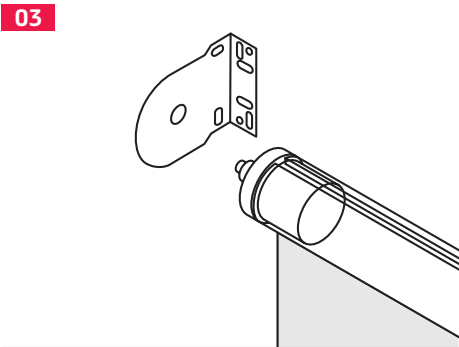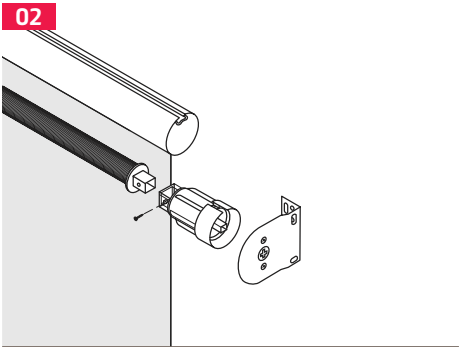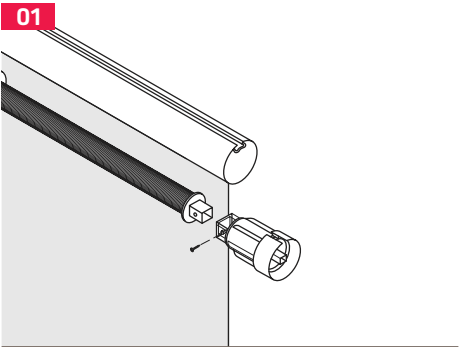


R20S Roller Blind with Spring Control

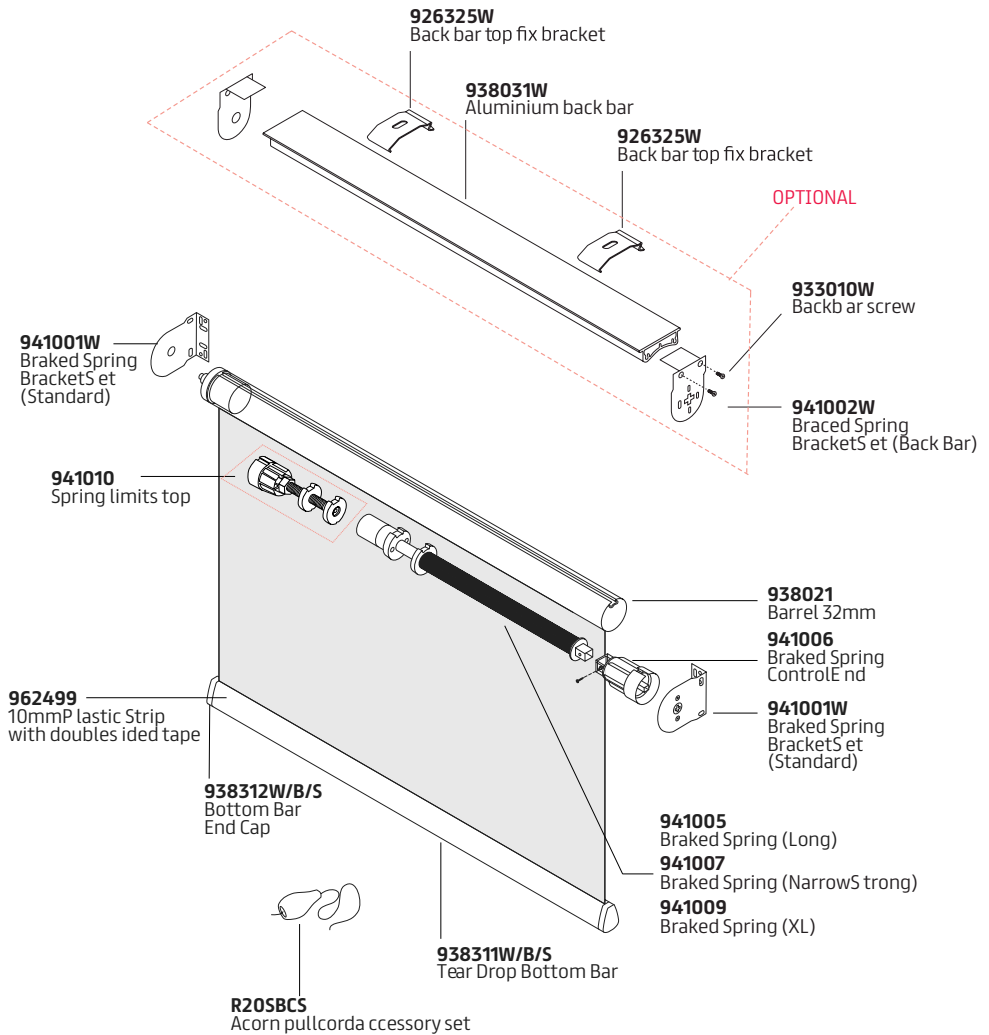 


R20W

Light Duty Crank Control

 
01 The pin-end is sprung for easy fitting.

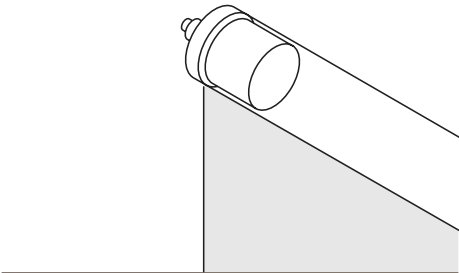


02

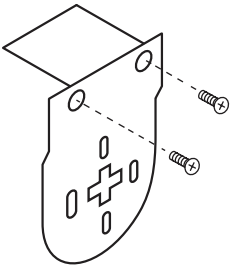 


03

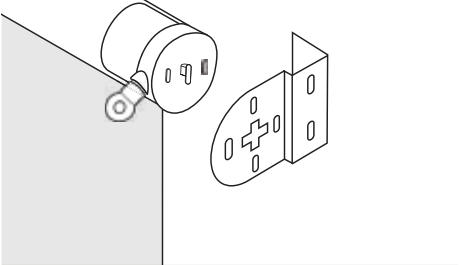 


04

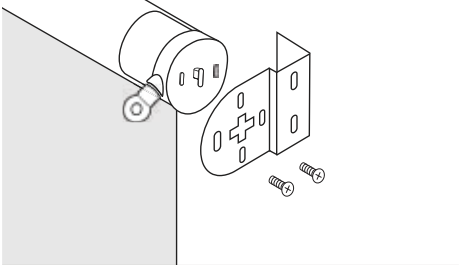 

05

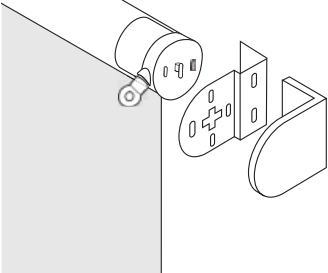 

R20W Light Duty Crank Control

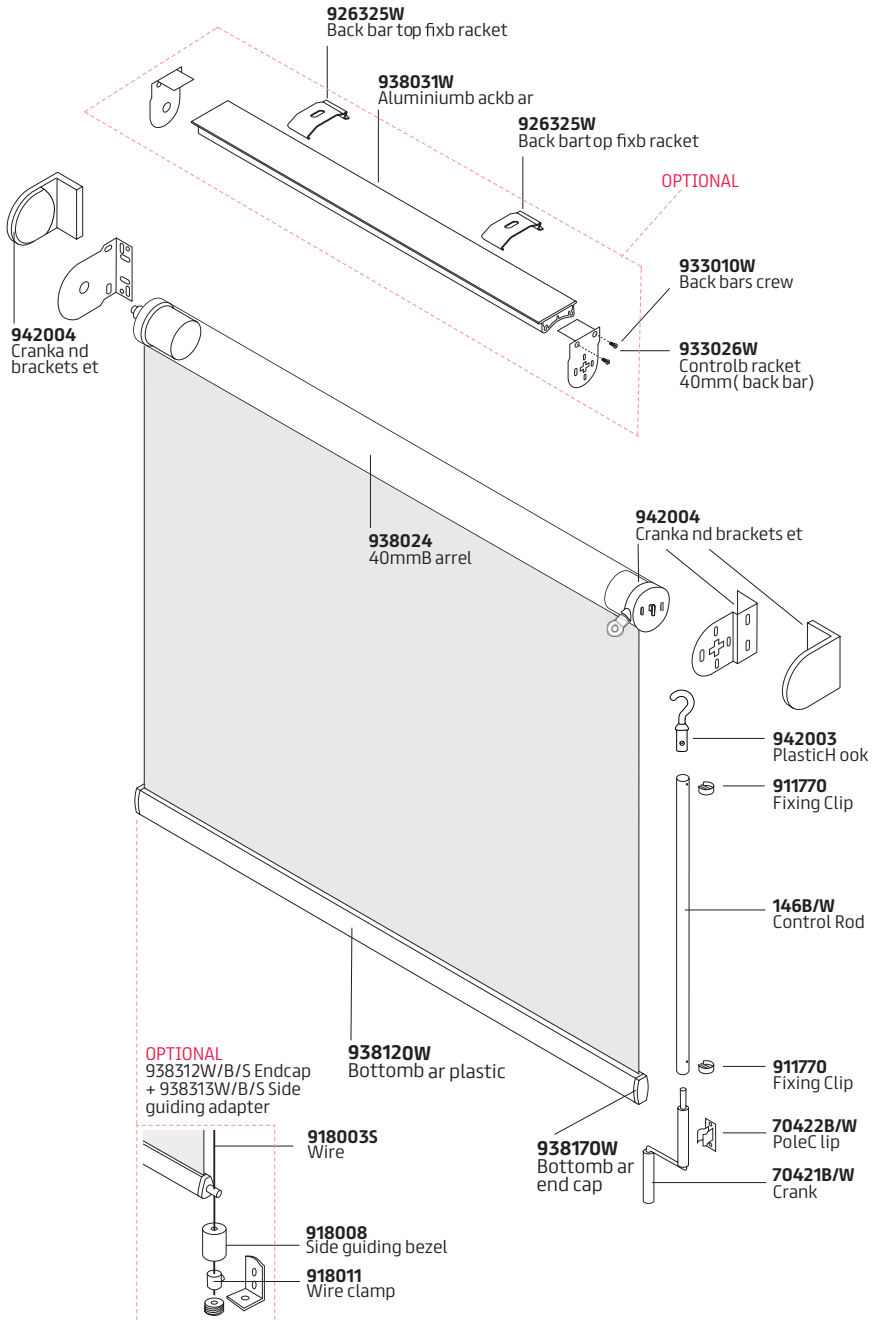 


R20B


Low Voltage Battery 7.4v DC

Radio Control Battery Motor

 
01

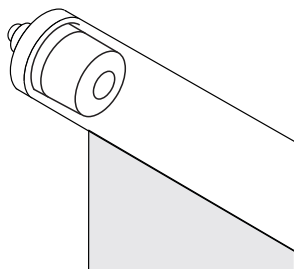


02

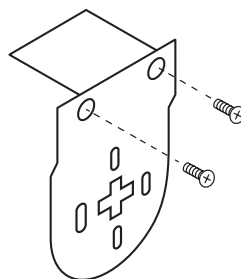 

03

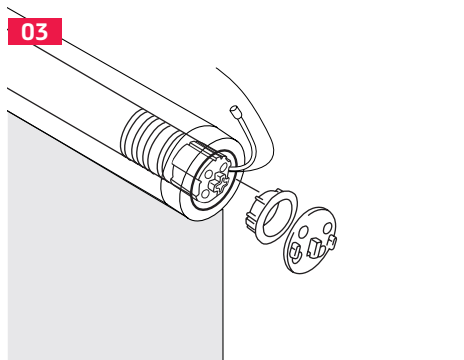 


04

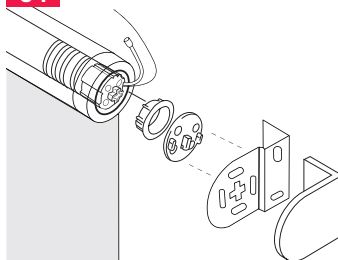 


R20B

 Low Voltage Battery 7.4v DC Radio Control Battery Motor

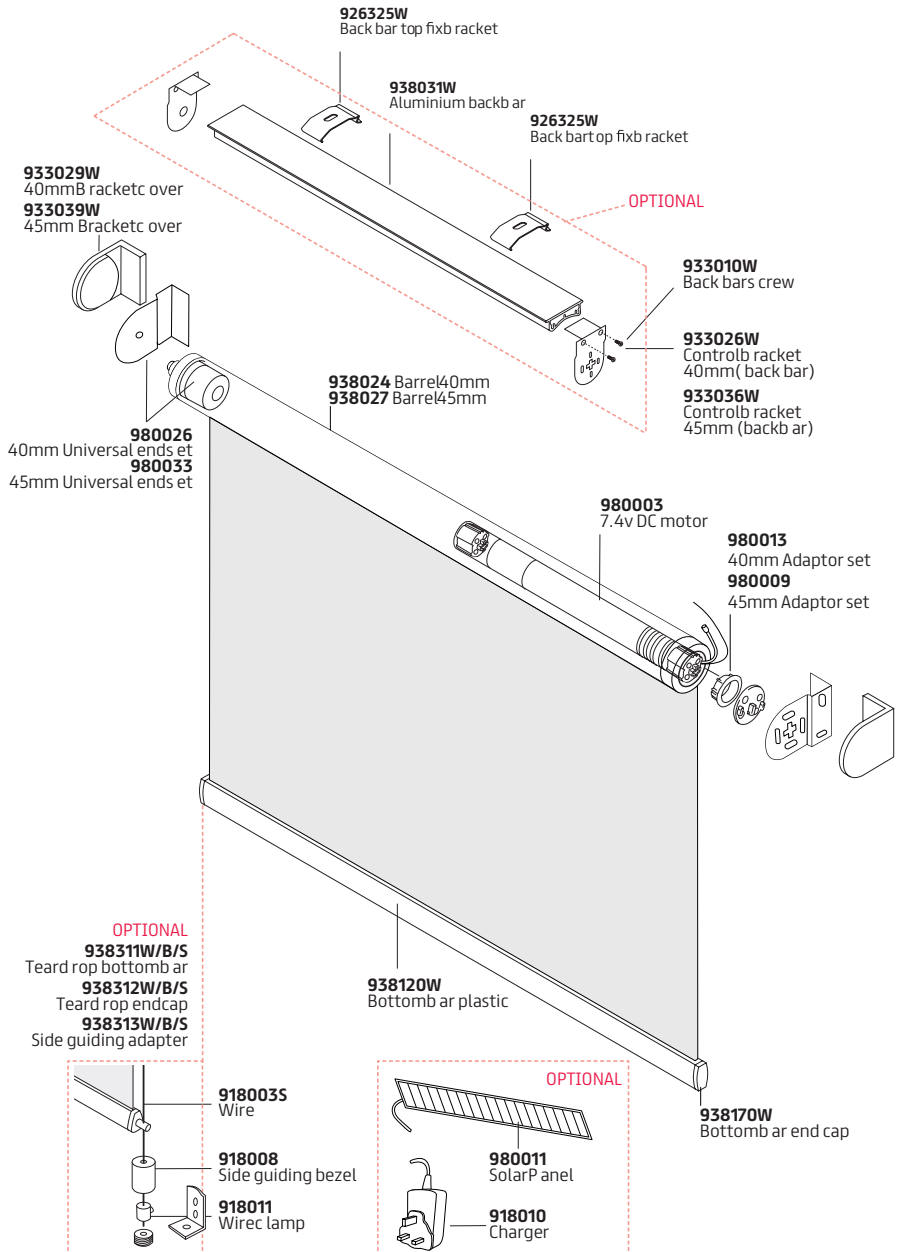


R20M
Electric 24v DC

 
01

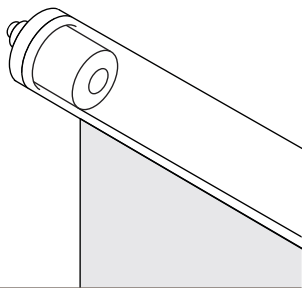


02

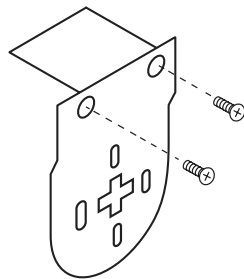 


03

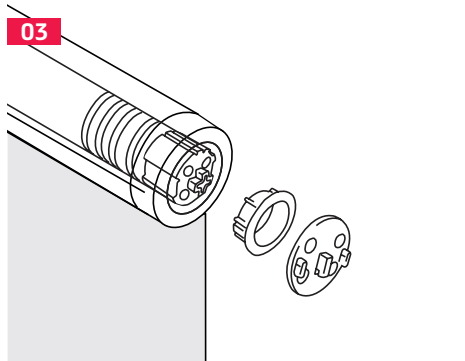 

04

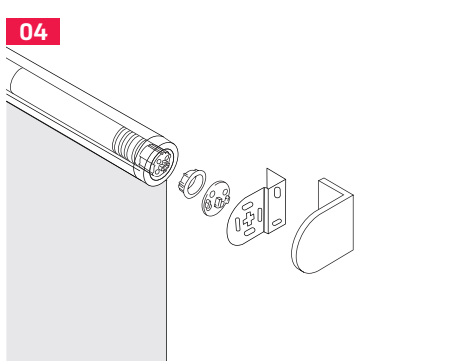 

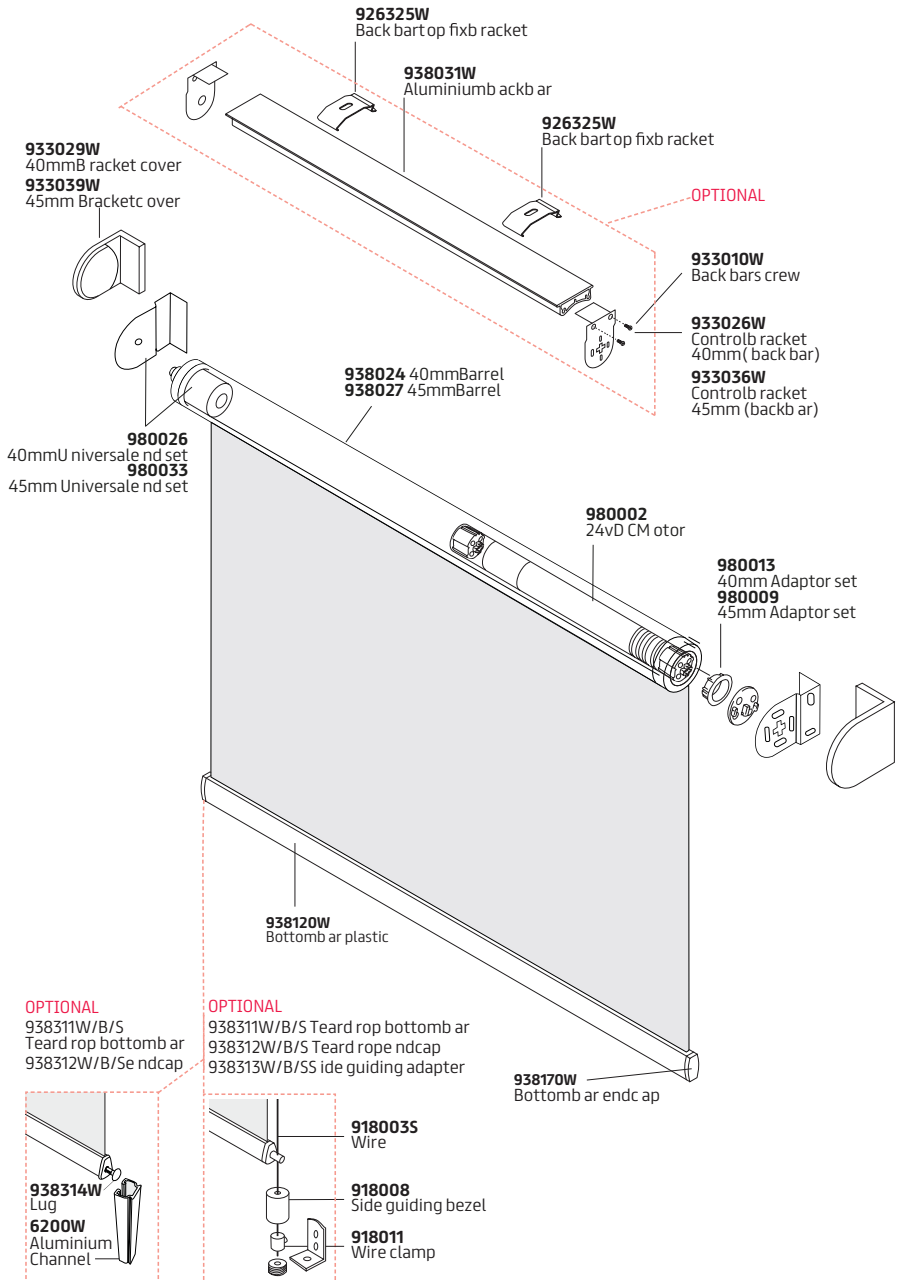 



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH

Call: +44 (0)1268 570900

Email: sales@yewdale.co.uk

For more information on all
Yewdale products, please call
the sales department.

