 


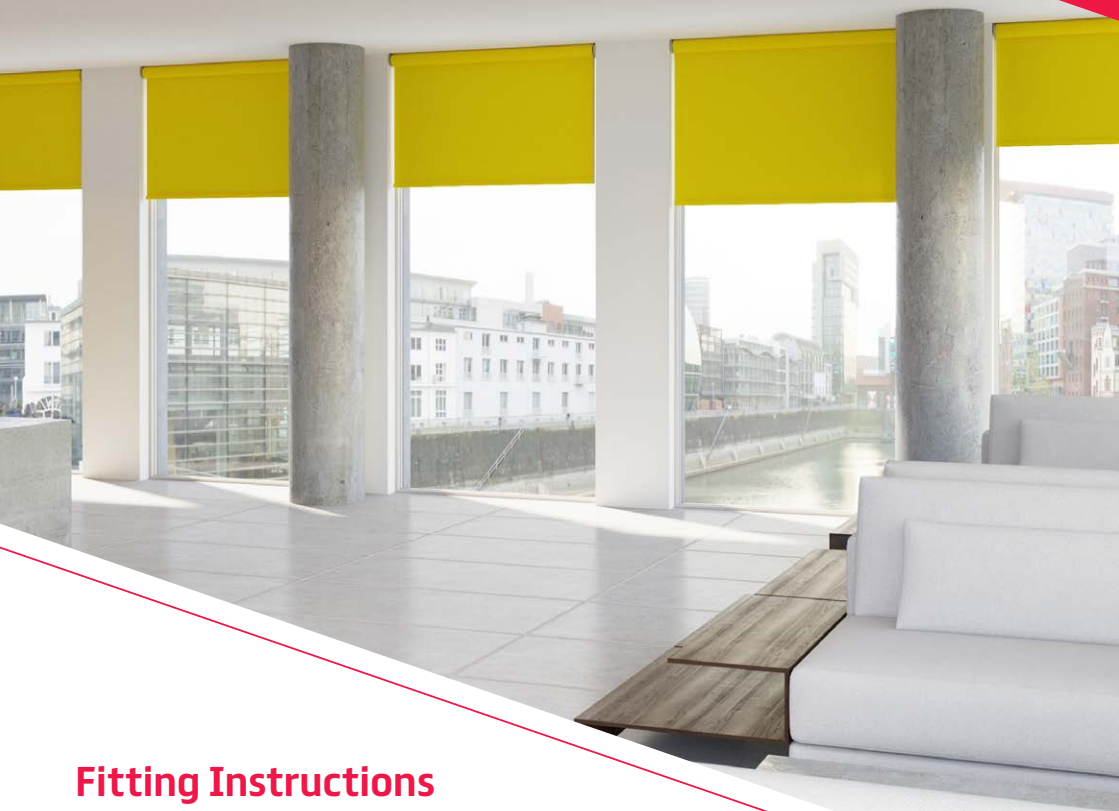


Fitting Instructions
YewdaleDefiant®
Roller blinds
(R20M)

Part no: 939

Please note

All blinds should be installed by a person competent in DIY.
If in doubt, please consult a professional.

 Safety Instructions

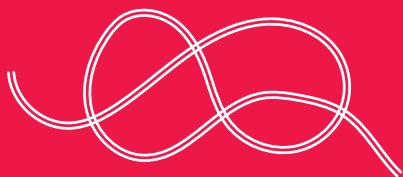

Loops in pull cords, chains, tapes and inner cords that operate the product can cause strangulation.



Keep cords out of the reach of young children.



Move beds, cots and furniture away from window covering cords

 


Do not tie cords together. Make sure cords do not twist and create a loop


Please note

All blinds should be installed by a person competent in DIY.
If in doubt, please consult a professional.


What you'll need

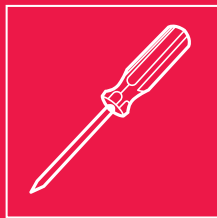


Screwdriver

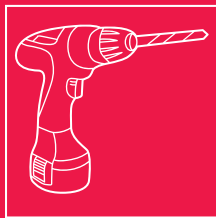 


Drill

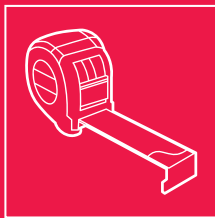 

Measuring Tape

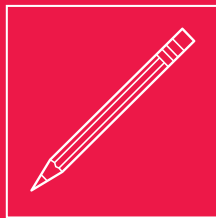 

Pencil

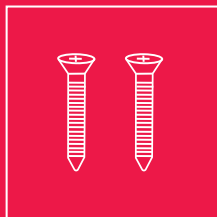 


Screws

What's in the box



 Roller Blind

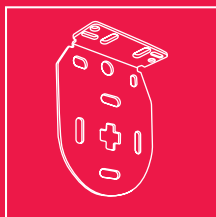

Universal Bracket



Bracket Cover



Warning

All instructions must be read
before installing the blind.



Fitting Time

Approx. 15 minutes

 


Need Extra Help?


You can find a helpful installation video by simply
scanning this QR Code or visiting our website

www.yewdale.co.uk/videos-page

R20M
Electric 24v DC

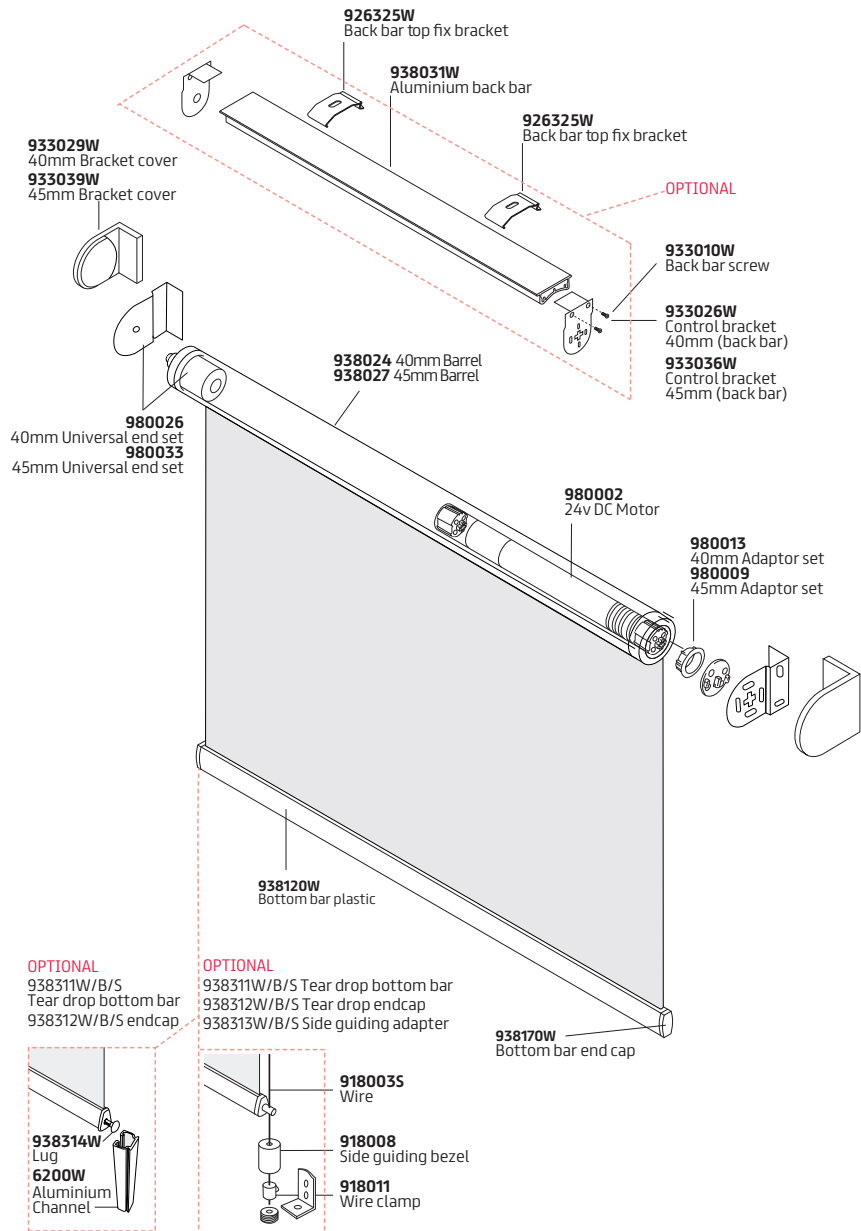


R20M
with 70 Fascia

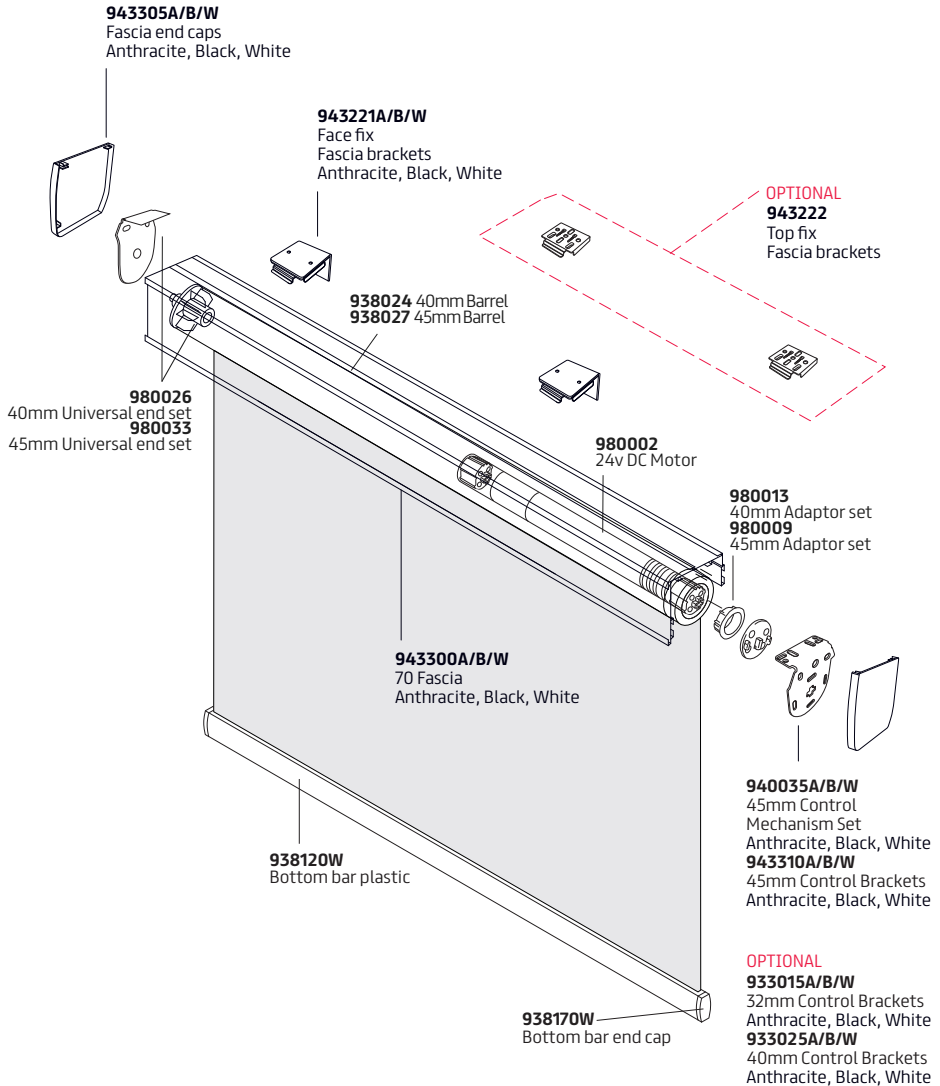 


R20M

Electric 24v DC

 
- 01** The standard universal metal brackets supplied with the blind may be top, face or side-fixed. Fix brackets in place using the appropriate screws/plugs.

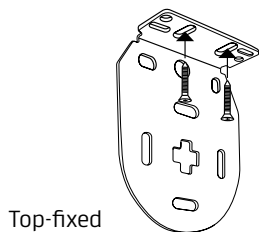

Top-fixed


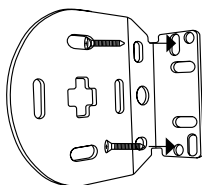 


Face-fixed

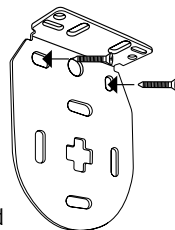 


Side-fixed

  
- 02** Check that the blind fits correctly. The pin-end is sprung for easy fitting, but the pin should be depressed once in place. The fabric should roll off the back of the barrel, unless ordered as reverse-roll.

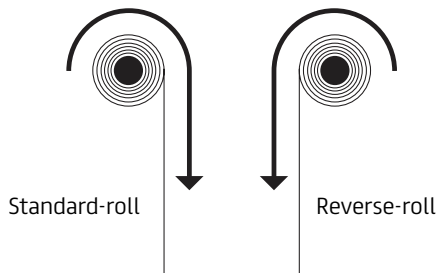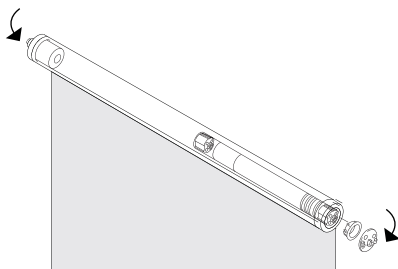

 - 03** Fix the control-end bracket using appropriate screws/plugs.

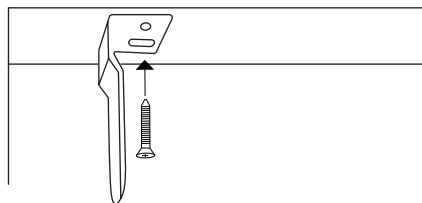

 
- 04** Locate the blind into the control-end bracket, and mark the position of pinend bracket.




R20M

Electric 24v DC

 - 05** Remove the blind and fix the pin-end bracket using appropriate screws/ plugs.

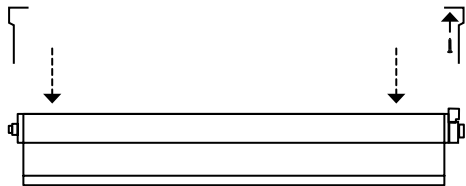


 - 06** Secure the bracket covers onto the brackets.

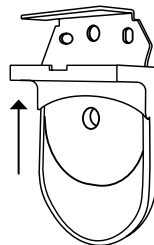


NB. To operate correctly, the blind **MUST** be fixed level.

 - 07** Insert the pin-end of the blind into the bracket. Press the blind against the bracket to depress the sprung pin, and insert the lug on the control-end into its bracket until it drops into place.

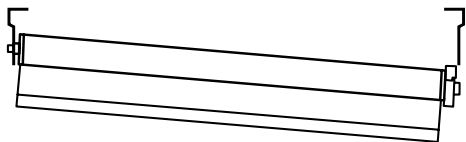

 - 08** Ensure the relevant child safety device is used to comply with BS EN13120:2009+A1:2014, BS EN16433:2014 and BS EN16434:2014.




- 09** For programming instructions, please refer to enclosed leaflet (sheet 1023).

N.B. Large blinds are heavy and it is important that the correct fixings are used. If unsure, seek expert advice.


R20M

Roller Blind with Fascia 70

 
- 01** For face fixed, use the screws supplied to fix the brackets securely to the wall.

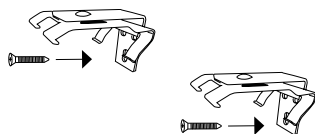

 
- 02** For top fixed, fix the brackets to the top of the recess using suitable screws.

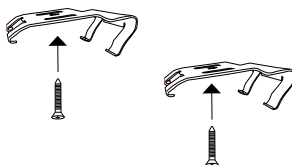

 
- 03** Attach the end caps to the fascia.

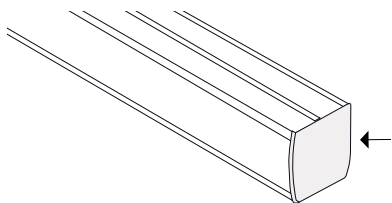

 
- 04** Hook the back of the fascia onto the bracket and push upwards until you hear a click, confirming it is securely in place.

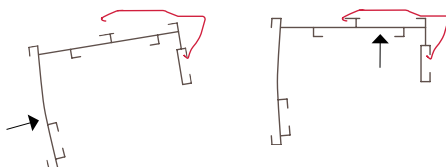

 
- 05** Lifting the blind into position, slot the barrel into each end of the fascia using the pin end side first.

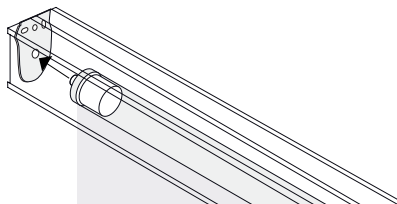

 - 06** To detach the fascia, apply pressure to push it back, then pull down to remove it.

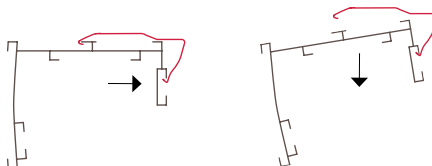

R20M Roller Blind with Fascia 70

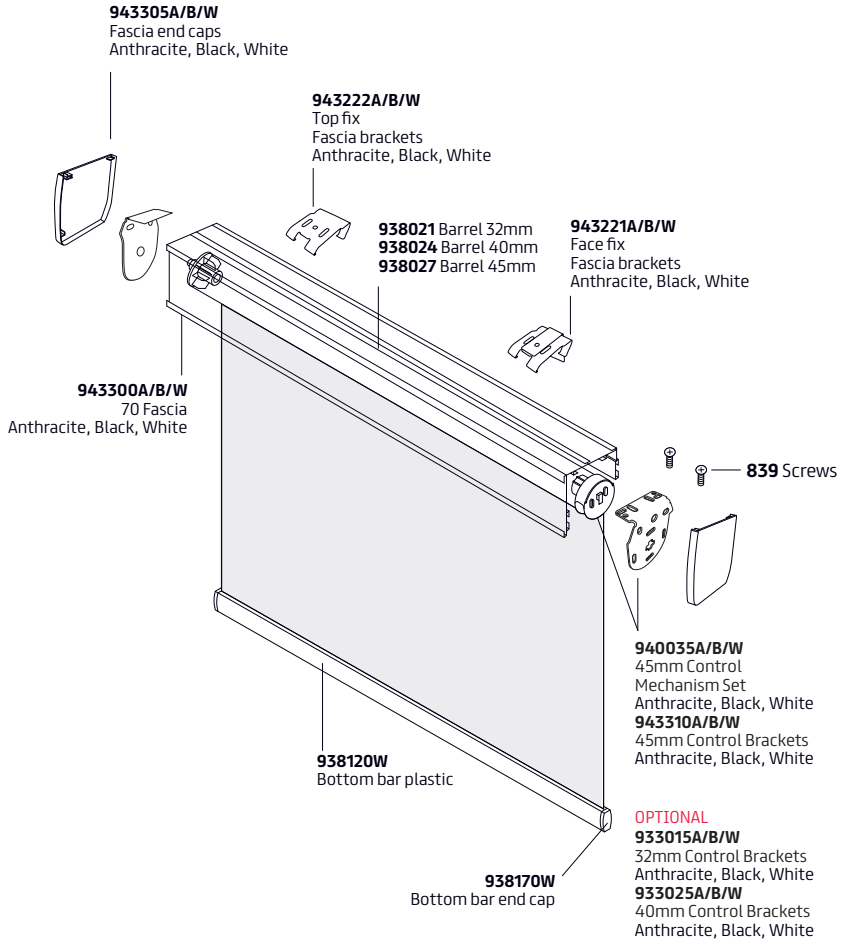 



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.

