

Fitting Instructions

for YewdaleDefiant[®] roller blinds
(R26)



Fitting Instructions


YewdaleDefiant[®] roller blinds
(R26)

Part no: 948


yewdale.co.uk

Fitting Instructions

YewdaleDefiant® roller blinds (R26)

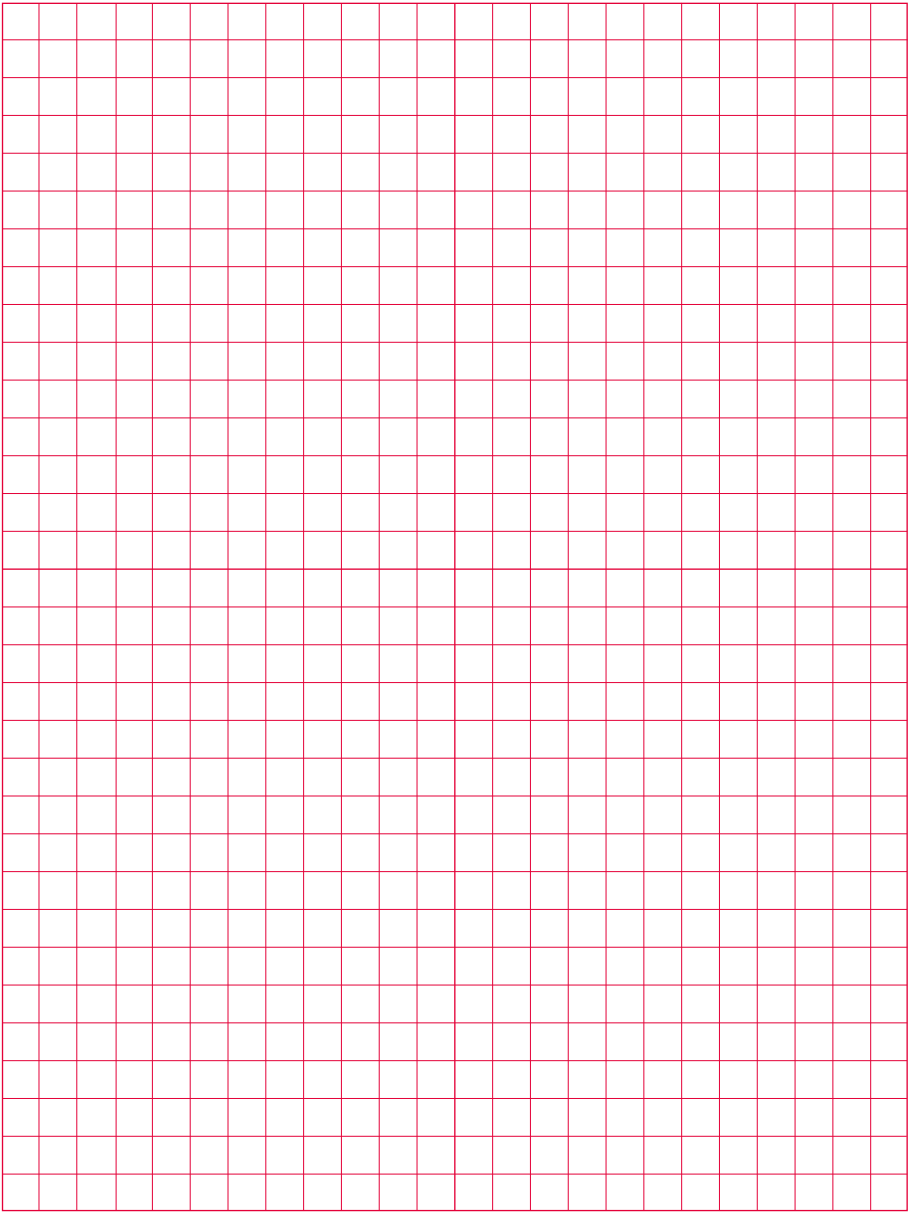

R26 Overhead Corded Control:

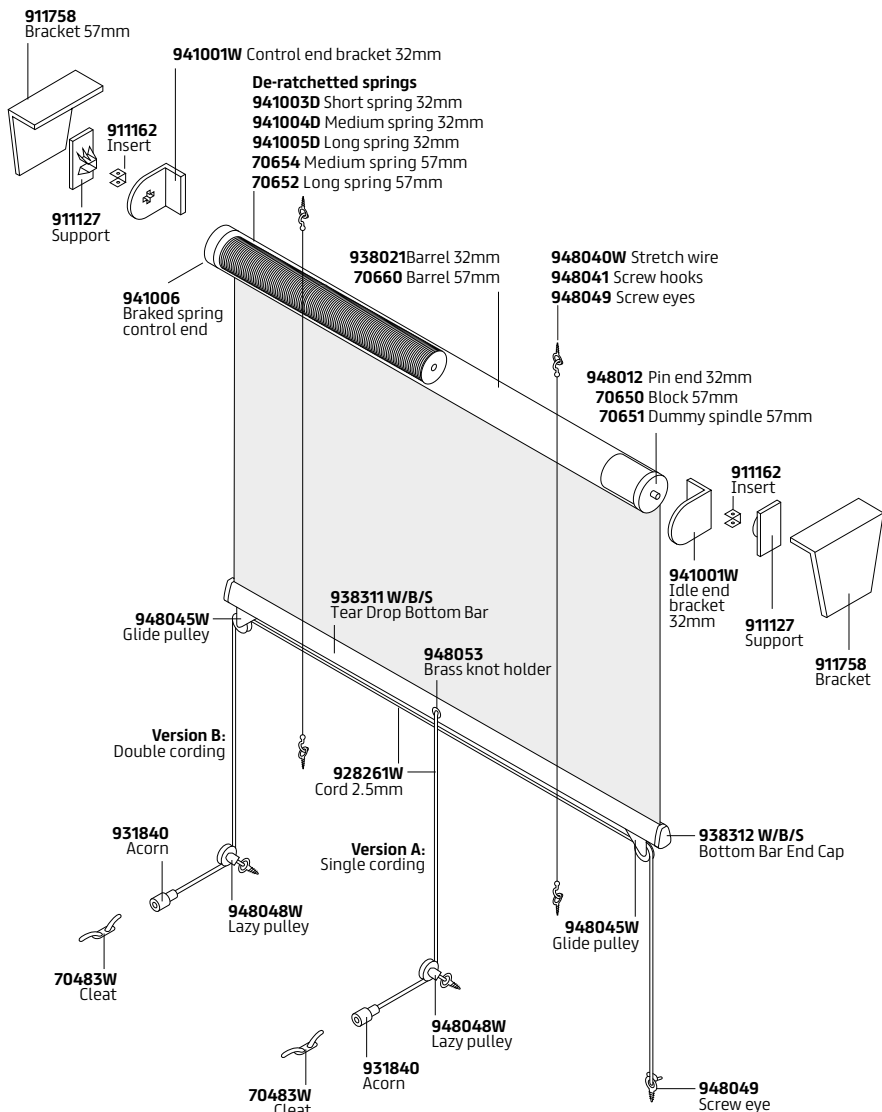

Fitting Instructions

YewdaleDefiant® roller blinds (R26)

R26 Overhead Corded Control:

1. This blind is supplied with all components for single or double cording.
2. The standard brackets are suitable for face, top and side-fixing.
3. Check that the blind fits correctly. The spring mechanism should always be to the left, with the fabric rolling off the BACK of the barrel, unless ordered as a reverse-roll.
4. Fix the spring-end bracket using appropriate screws/plugs.
5. Locate the blind in the spring-end bracket, and mark the position of the pin-end bracket, allowing approximately 2mm of free-play between the brackets and blind.

NB. To operate correctly, the blind MUST be fixed level.



6. Remove the blind and fix the pin-end bracket using the appropriate screws/ plugs.
7. Before fitting the blind, the spring must be tensioned. The simplest way to do this is to use the spring-end bracket as the tensioning tool. Undo the screws fixing the spring-end bracket and place it on the lug at the spring-end of the blind. Turn the bracket six full turns, then hold the bracket and blind tightly together.
8. Locate the pin-end of the blind into its bracket then, still holding bracket and blind tightly, re-fix the spring-end bracket.
9. Close the blind and check that it retracts fully. If more tension is needed, repeat steps 7 and 8.
10. For single cording. Tie a knot in the end of the cord, insert it in the brass knot-holder, and fix centrally on the front of the bottom bar.
11. Pilot holes will need to be drilled in the bottom bar to take the screws supplied. Fix pulleys and cleats as necessary (see drawing), cut the cord to the required length and attach the acorn. Fix the cleat in a suitable position.

Fitting Instructions


YewdaleDefiant® roller blinds (R26)

12. For double cording. Fix the guide pulleys at each end of the bottom of the bottom bar. Pilot holes will need to be drilled in the bottom bar to take the screws supplied. Fix a screw-eye at one bottom corner of the window and a lazy pulley (948048W) at the other (see drawing). Tie one end of the cord to the screw-eye, thread it through the two pulleys on the bottom bar, then down and through the lazy pulley. Cut the cord to the required length and attach the acorn. Fix cleat in suitable position.

Stretch wire option:

1. When the blind is in position, fix the stretch wire directly beneath the blind to support the blind fabric and bottom bar when in use. To do this, screw two screw eyes into the reveals at the top and bottom of the blind (four in total). Using the stretch wire provided cut two lengths, each slightly shorter than the distance between the top and bottom screw eye to ensure the stretch wire is under tension when installed. Winding the screw hook into both ends of the stretch wire, hook these onto the screw eyes.

NB. Large blinds are heavy and it is important that the correct fixings are used. If unsure, seek expert advice.

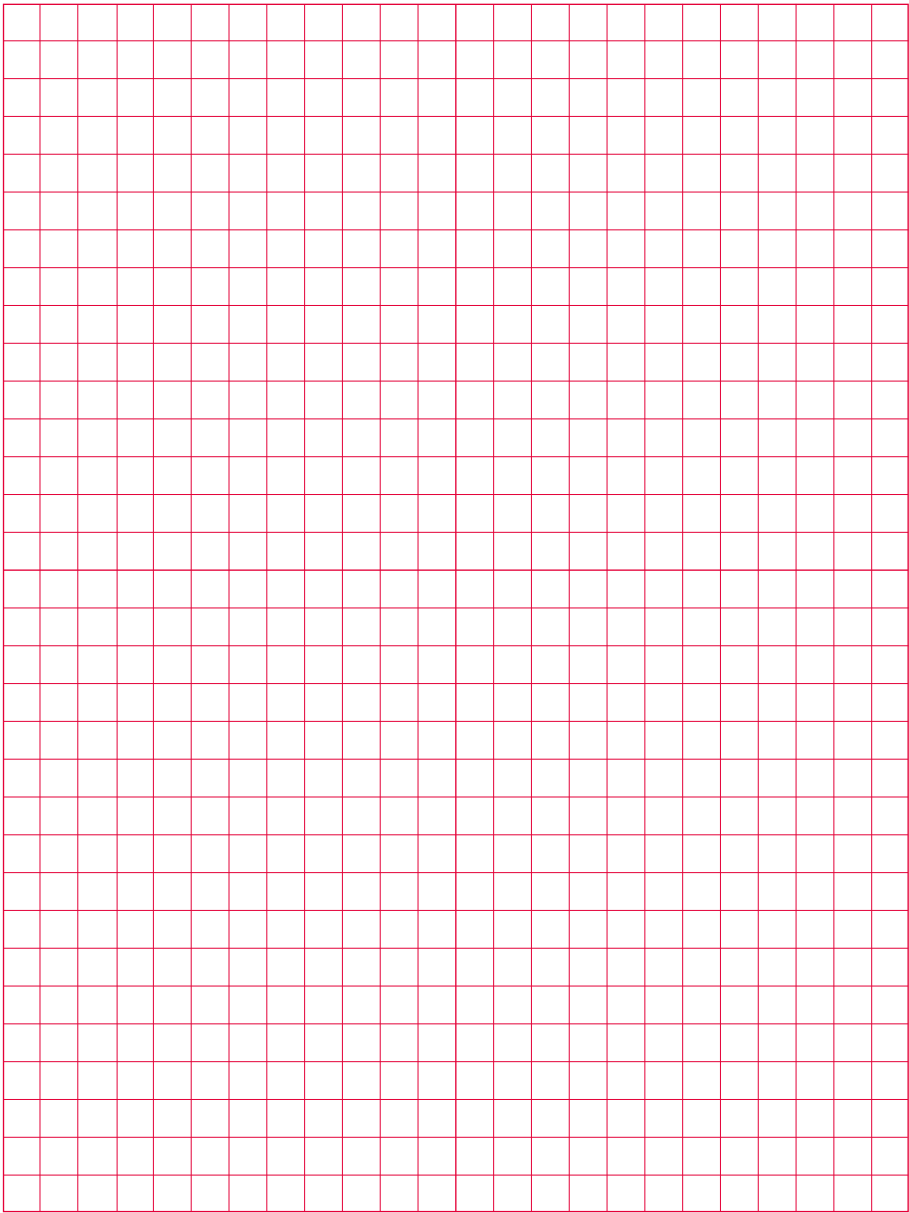



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.



yewdale **Defiant**[®]
FABRIC AND BLIND SYSTEMS



yewdale **Kestrel**[®]
MAGNETIC ANTI-LIGATURE SYSTEM



yewdale **Movatrack**[®]
CURBLE AND TRACK SYSTEMS



yewdale **Harrier**[®]
CURBLE AND SHOWER CURTAINS



yewdale **Vitesse**[®]
CURTAIN TRACK SYSTEMS