

Fitting Instructions

for YewdaleDefiant[®] blackout blinds
(C74)



Fitting Instructions

YewdaleDefiant[®] blackout blinds
(C74)


Part no: 960

yewdale.co.uk

Fitting Instructions


YewdaleDefiant® blackout blinds (C74)

C74 Crank control:

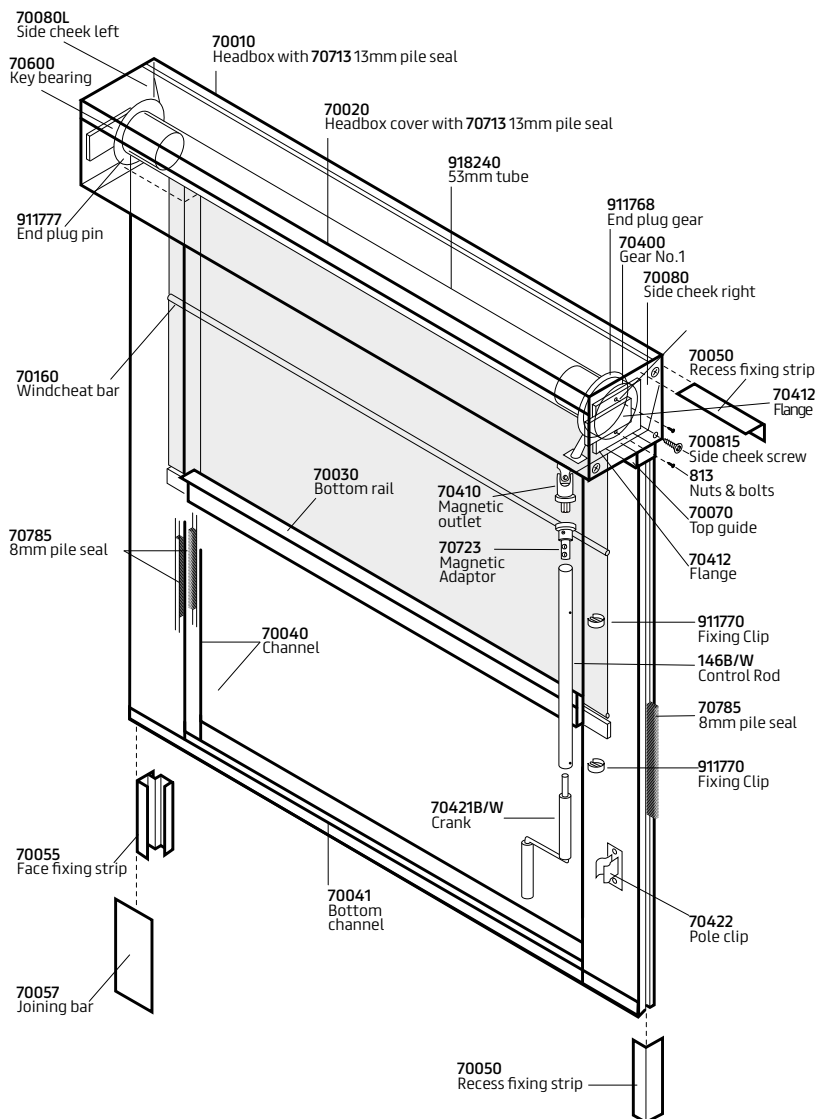


C74 Crank control:

1. Remove the front cover from the headbox.
2. Slide the barrel out of the headbox, complete with the key bearings as shown.

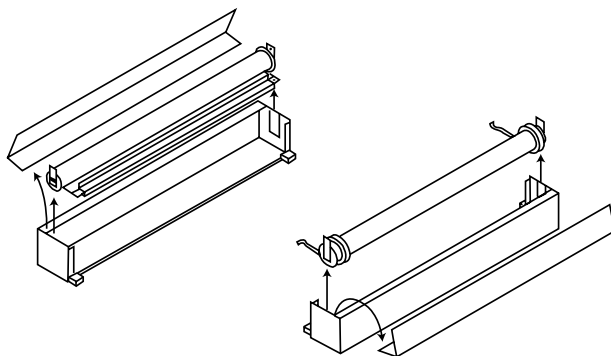

3. Assemble the headbox, top guides, side channels and bottom channel (if supplied) as shown.

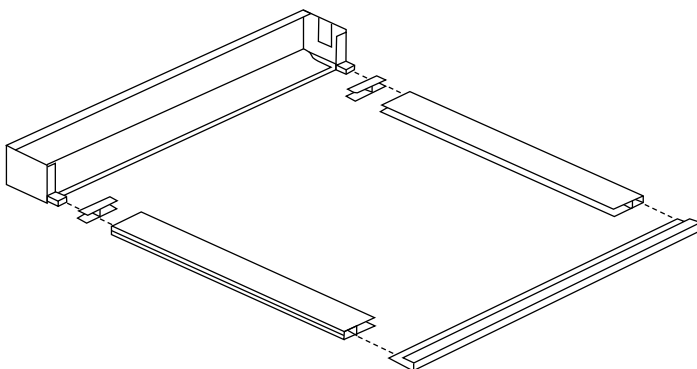


Fitting Instructions

YewdaleDefiant® blackout blinds (C74)


C74 Crank control - face fix:

1. Drill fixing holes into the appropriate positions in the back of the headbox. (These may have been pre-drilled at the factory.)
- NB. The headbox must be independently supported. Do not rely on the connection with side channels for support.
2. Press the face fixing strips into the groove in the edge of the side and bottom channels as shown, ensuring that the pre-drilled fixing holes are aligned. It may help to temporarily tape them in position.

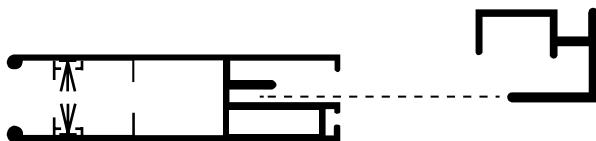

3. Apply additional light sealing material (foam or mastic) to the back of the headbox and face fixing strips if required.
 4. Fix complete unit into position using appropriate screws/plugs.
- NB. The frame must be firmly fixed, and square. Check this by measuring diagonals.

Now go to point 7 on page 7

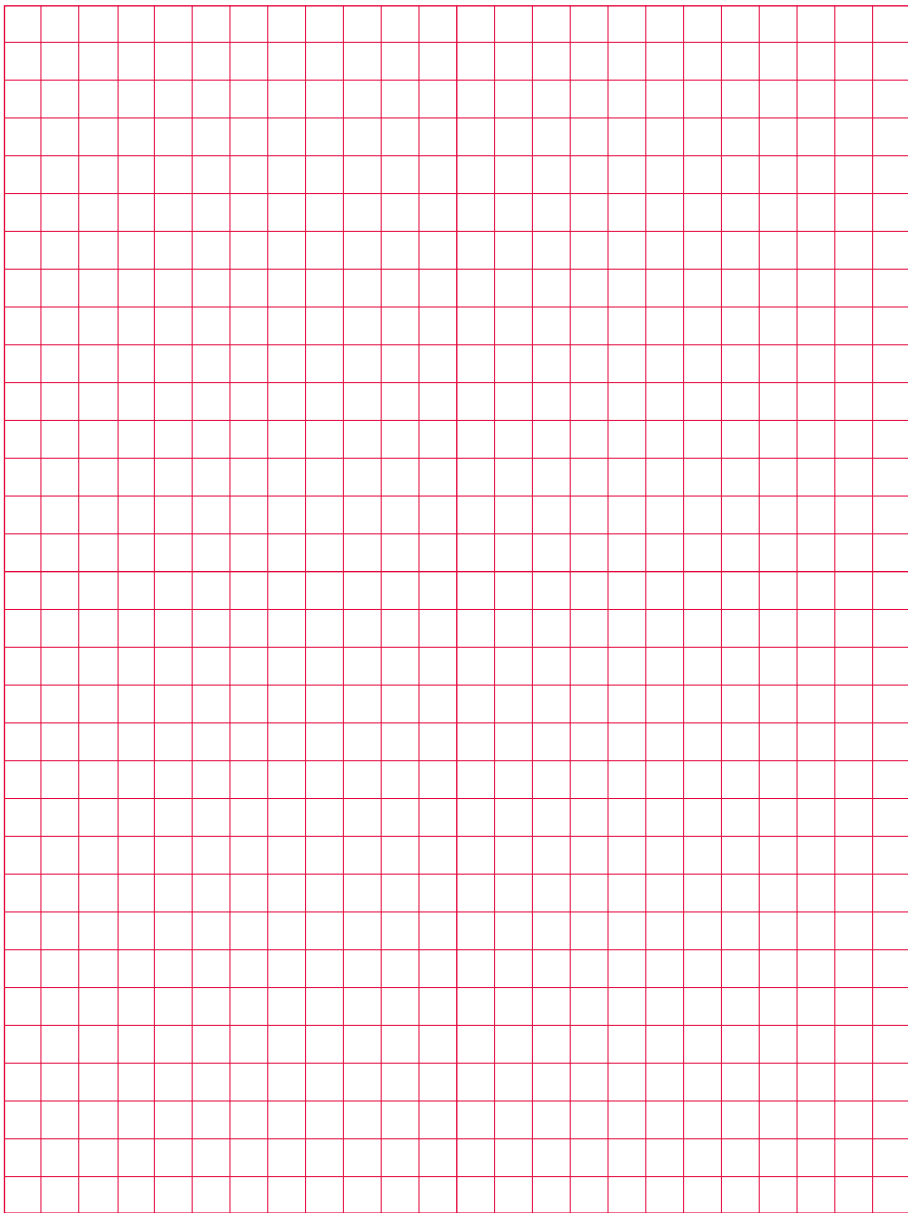


Fitting Instructions

YewdaleDefiant® blackout blinds (C74)

C74 Crank control - recess fix:

1. Drill fixing holes in the appropriate positions in the recess fixing strips.
2. Press the recess fixing strips into the groove in the edge of the side and bottom channels as shown.

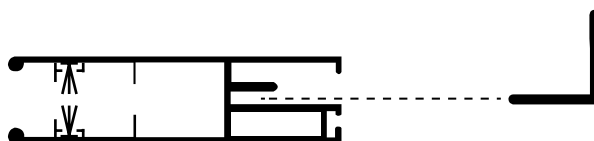

3. Press the headbox recess fixing strip into the groove in the top of the headbox. Check that the pre-drilled clearance holes in the headbox align with the fixing holes in the recess fixing strip.
4. Ensure the brush seals are in position in the slots on the side channel edges and headbox top.
5. Hold the complete unit in position and fix the recess fixing strips all round using appropriate screws/plugs.
6. Unit should now have some slight movement on its recess fixing strips. Check that the unit is correctly positioned and square, then drill pilot holes in the recess fixing strip through the clearance holes in the side channels. Fix with self-tapping screws.

NB. Frame must be firmly fixed, and square. Check by measuring diagonals.

- 
7. Replace barrel in headbox by sliding key bearings into housings in the side cheeks. At the same time feed the bottom rail and fabric into the top of the side channels.
 8. Attach the headbox cover and fix with single screw at the opposite end to the gearbox.
 9. Insert universal outlet (jointed control rod) through hole in underside of headbox cover so that the square rod engages with the gearbox. Fix to headbox cover with four screws.
 10. Fix the pole clip in a convenient location. If fixing to side channel, ensure that the screws do not impede movement of the fabric or bottom rail.
 11. Fit grommets in the side channel clearance holes.
 12. Close the blind and check for any light leakage around the frame. Rectify using extra foam or mastic.
 13. Affix any warning stickers where they will be clearly visible.



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.



yewdale **Defiant**[®]
FABRIC AND BLIND SYSTEMS



yewdale **Kestrel**[®]
MAGNETIC ANTI-LIGATURE SYSTEM



yewdale **Movatrack**[®]
CURBLE AND TRACK SYSTEMS



yewdale **Harrier**[®]
CURBLE AND SHOWER CURTAINS



yewdale **Vitesse**[®]
CURTAIN TRACK SYSTEMS