

Fitting Instructions

for YewdaleDefiant[®] blackout blinds
(C75)



Fitting Instructions

YewdaleDefiant[®] blackout blinds
(C75)


Part no: 961

yewdale.co.uk

Fitting Instructions


YewdaleDefiant® blackout blinds (C75)

C75 230v Electric Control:

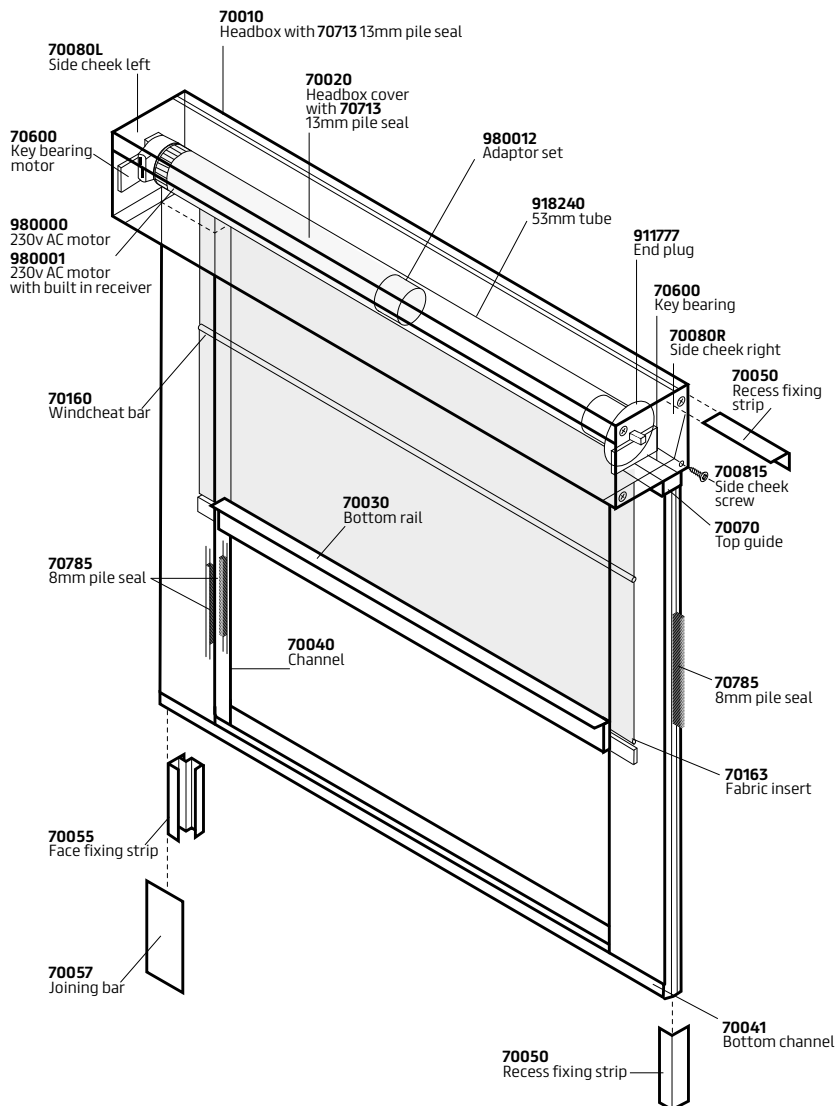


C75 230v Electric Control:

1. Remove the front cover from the headbox.
2. Slide the barrel out of the headbox, complete with the key bearings as shown.

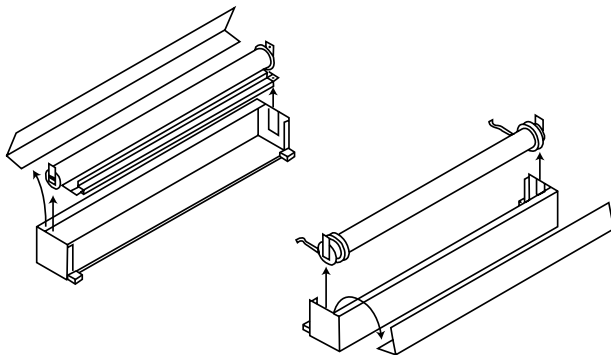

3. Assemble the headbox, top guides, side channels and bottom channel (if supplied) as shown.

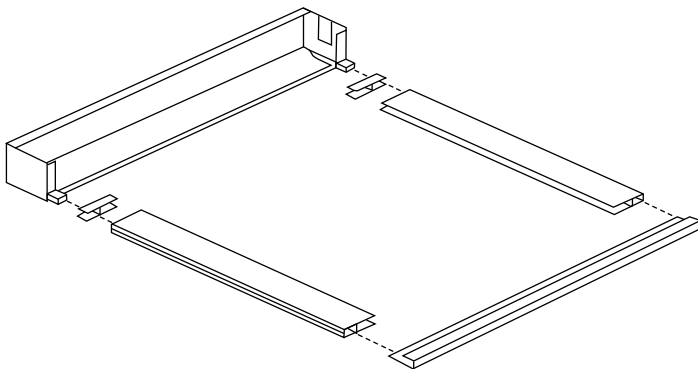

Fitting Instructions


YewdaleDefiant® blackout blinds (C75)

C75 230v Electric Control - face fix:

1. Drill fixing holes in appropriate positions in the back of the headbox.
(These may have been pre-drilled at the factory.)

NB. Headbox must be independently supported. Do not rely on connection with side channels for support.


2. Press face fixing strips into the groove in the edge of the side and bottom channels as shown, ensuring that pre-drilled fixing holes are aligned. It may help to temporarily tape them in position.

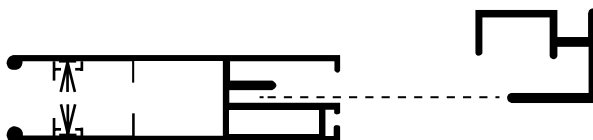

3. Apply additional light sealing material (foam or mastic) to the back of the headbox and face fixing strips if required.
4. Fix the complete unit into position using appropriate screws/plugs.

NB. Frame must be firmly fixed and square. Check by measuring diagonals.

Now go to point 7 on page 7

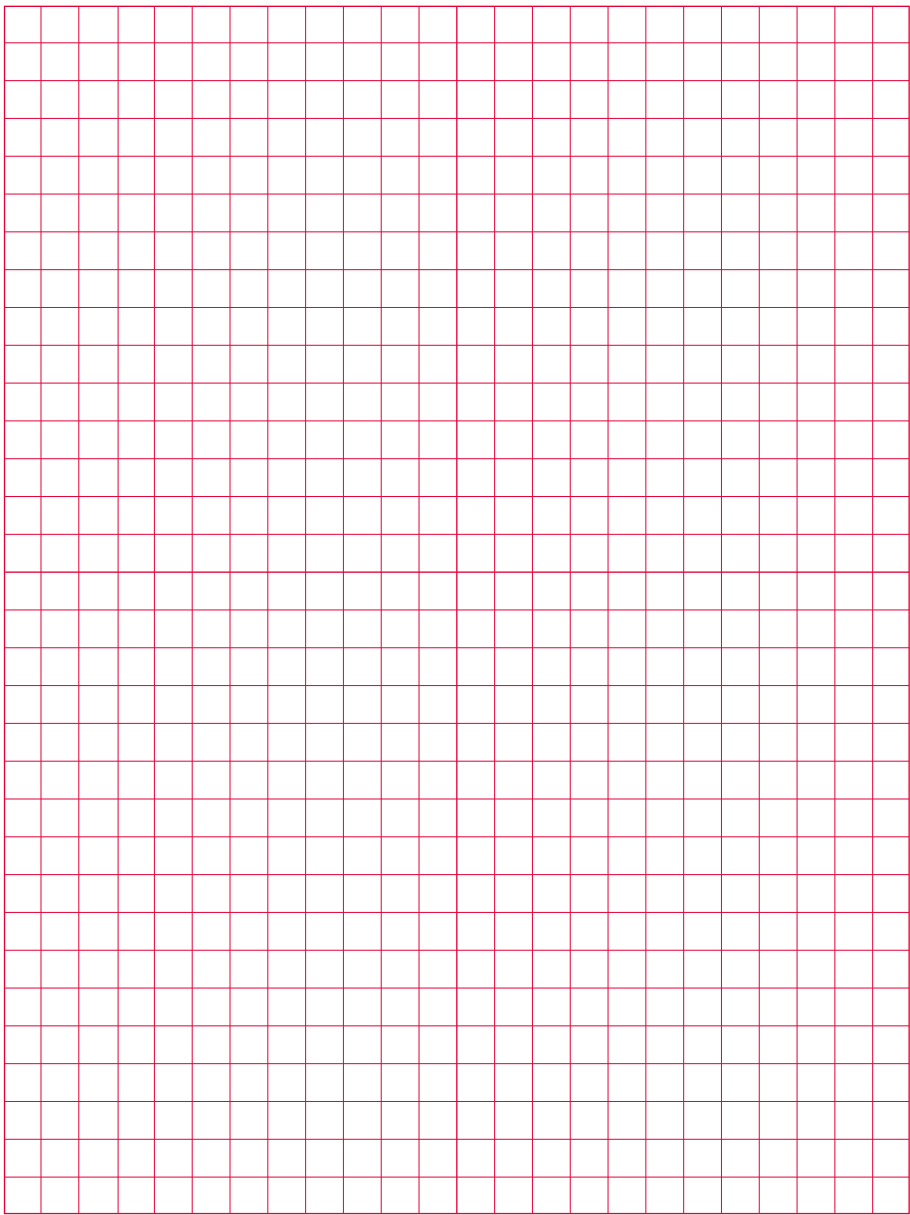


Fitting Instructions

YewdaleDefiant® blackout blinds (C75)

C75 230v Electric Control - recess fix:

1. Drill fixing holes in appropriate positions in recess fixing strips.
2. Press recess fixing strips into the groove in the edge of the side and the channels as shown:

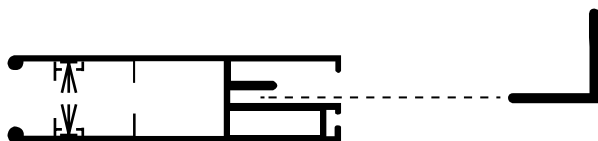

3. Press the headbox recess fixing strip into the groove in the top of the headbox. Check that the pre-drilled clearance holes in the headbox align with the fixing holes in the recess fixing strip.
4. Ensure the brush seals are in position in the slots on the side channel edges and the headbox top.
5. Hold the complete unit in position and fix recess fixing strips all round using appropriate screws/plugs.
6. The unit should now have some slight movement on its recess fixing strips. Check that the unit is correctly positioned and square, then drill pilot holes in recess fixing strip through clearance holes in the side channels. Fix with self-tapping screws.

NB. Frame must be firmly fixed, and square. Check by measuring diagonals.



7. Drill a 10mm cable exit hole in the appropriate position in the back or the top of the headbox.
8. Replace the barrel in the headbox by sliding key bearings into the housings in the side cheeks. At the same time feed the bottom rail and fabric into the top of the side channels. NB. The fabric must be coming off the back of the barrel.
9. Slide outlet grommet onto the motor cable, push the cable through the exit hole and fit the grommet into position.
10. For setting limit stops, refer to the motor instructions.



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.



yewdale **Defiant**[®]
FABRIC AND BLIND SYSTEMS



yewdale **Kestrel**[®]
MAGNETIC ANTI-LIGATURE SYSTEM



yewdale **Movatrack**[®]
CURBLE AND TRACK SYSTEMS



yewdale **Harrier**[®]
CURBLE AND SHOWER CURTAINS



yewdale **Vitesse**[®]
CURTAIN TRACK SYSTEMS