


Fitting Instructions

YewdaleDefiant[®] Perfect Fit[®] blinds (PFR20, PFP20, PFC20, PFV20)


Part no: 1026

Guide to measuring **Perfect Fit®** Blinds


- 01** Check if it has a rubber beading between the window frame and the glass.

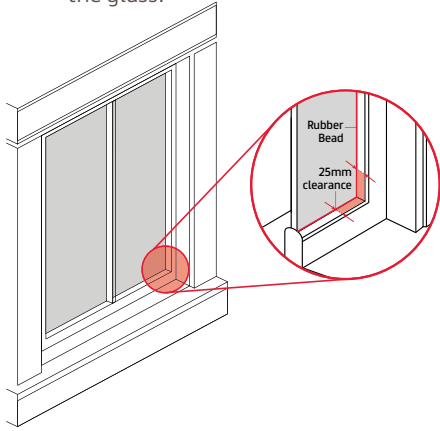

- 02** Measure the width and height of the visible glass pane.

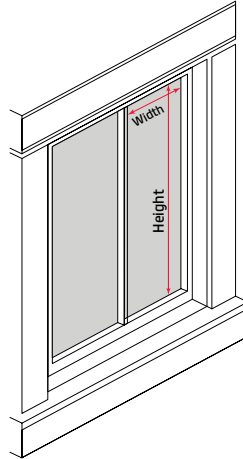


- 03** The bead depth measurement typically ranges from 18mm to 30mm.

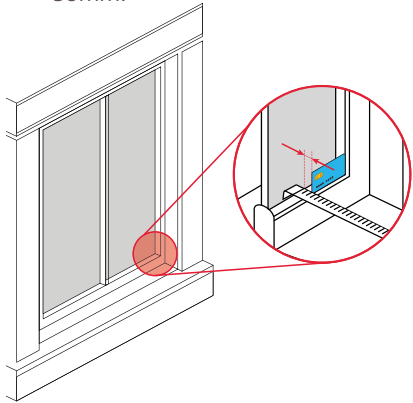


Roller, Pleated, Pleated Cellular, and Venetian **Perfect Fit®** Blinds


- 01** If the frame needs connecting together use the corner connector.

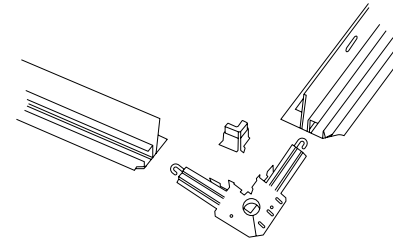


- 02** Firmly push the Push Fit Corner Joint into place until it clicks and locks securely.

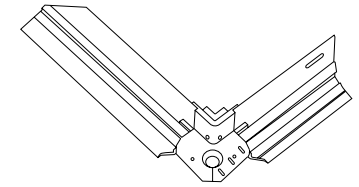


- 03**

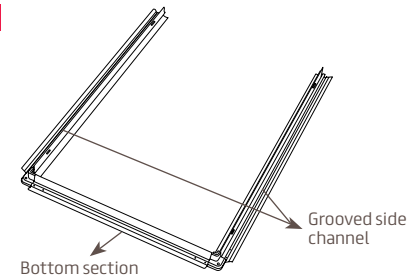


- 04**

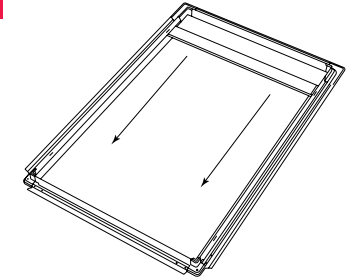

- 05** Turn anti-clockwise to add tension until the blind starts to lift

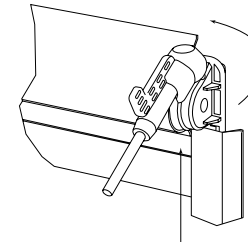


- 06** Push the worm retaining clip into the hexagon slot to secure the tension

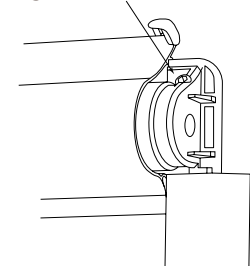


Roller, Pleated, Pleated Cellular, and Venetian Perfect Fit® Blinds

07

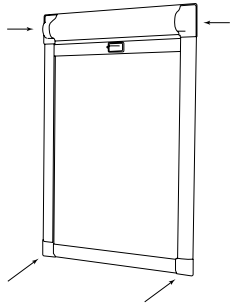


08

Use a credit card to ensure all brackets are in the correct position

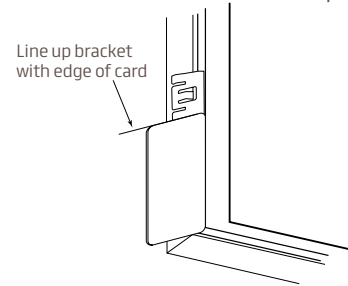


09

Firmly press the frame down to each bracket.

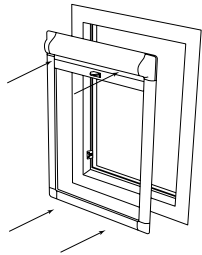


10

To release the blind, rock the handle forwards.

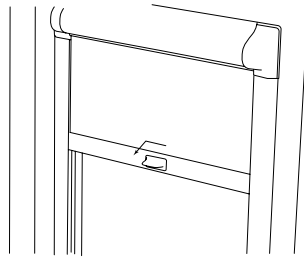


11


To lock the blind into position, rock the handle backwards.

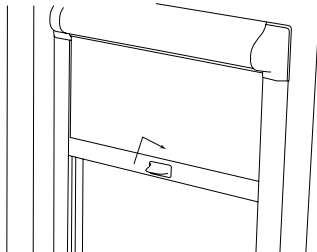


Perfect Fit® blinds:

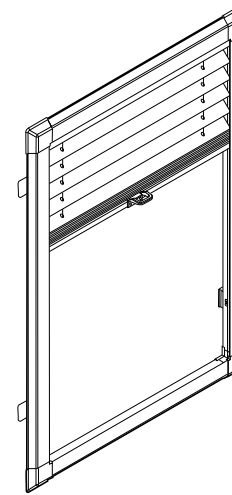


Perfect Fit® pleated

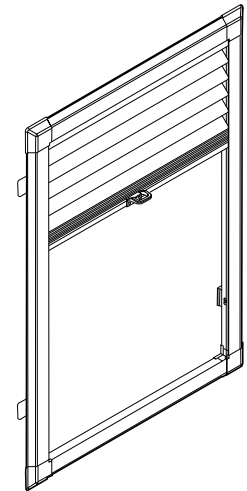

Perfect Fit® pleated cellular

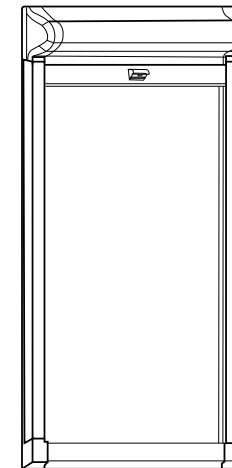

Perfect Fit® roller

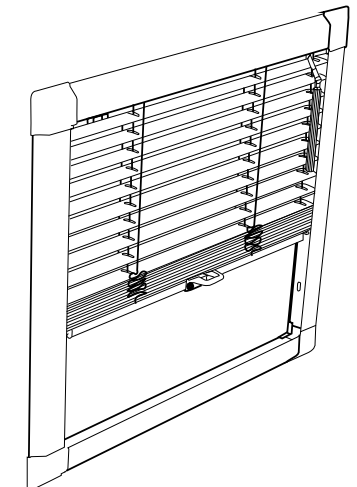

Perfect Fit® venetian



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.

