



Fitting Instructions

YewdaleMovatrack[®]


Shower Track (600-609)

Part no: 920


What you'll need



Screwdriver

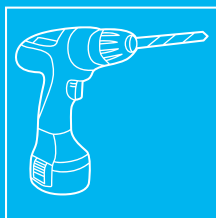


Drill

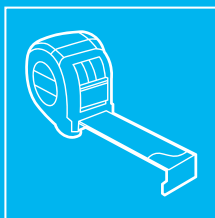


Measuring Tape



Pencil

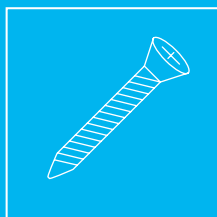

Screws

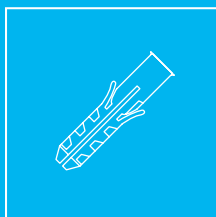


Wall Plugs


What's in the box




Pre-assembled Track

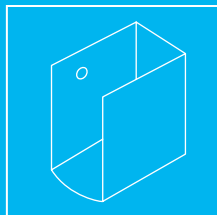

Wall Shoe

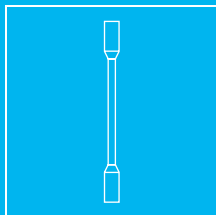

Ceiling Hanger
(optional if L shape or
over 2500mm wide)

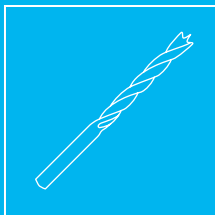

3mm Drill Bit



Warning


All instructions must be read before installing.



Fitting Time

Approx. 20 minutes


Shower Track Instructions

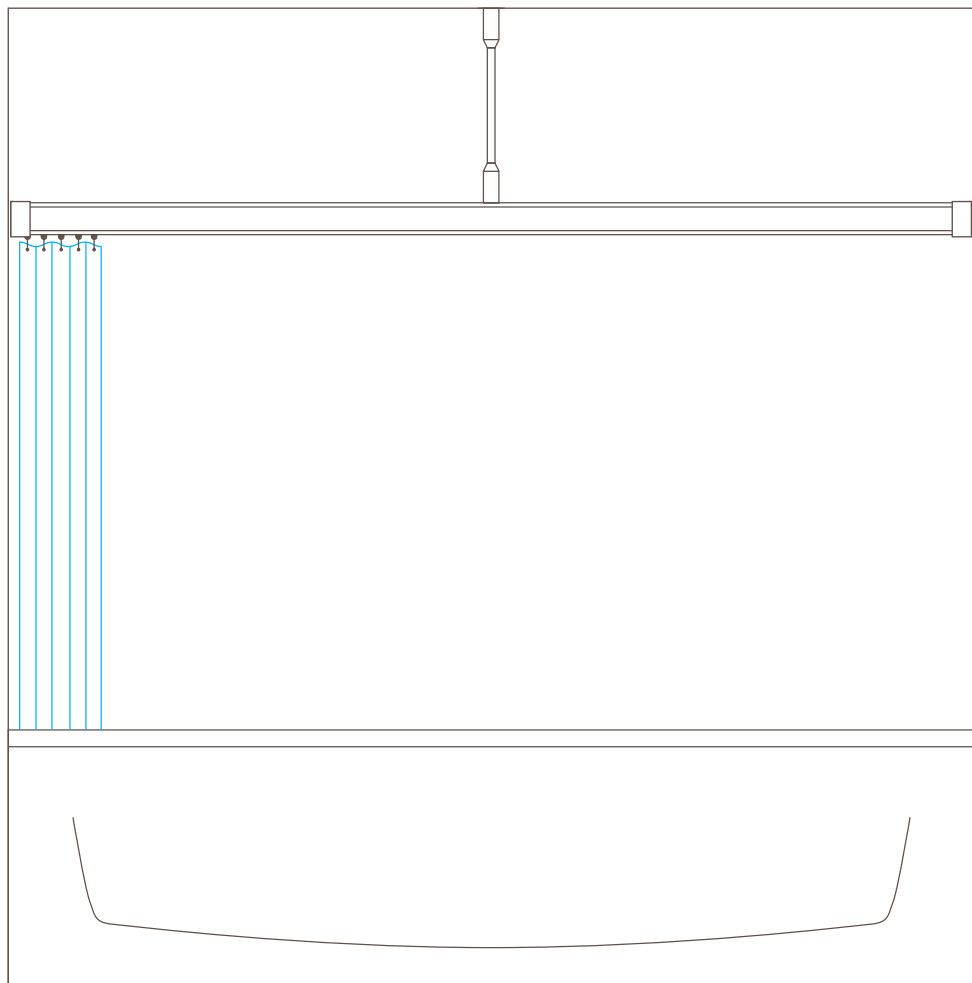

Before Installation

Check the position and height of the track ensuring that the curtain will hang inside the bath or shower tray. The track may be trimmed with a hacksaw if necessary.

Shower Track Instructions

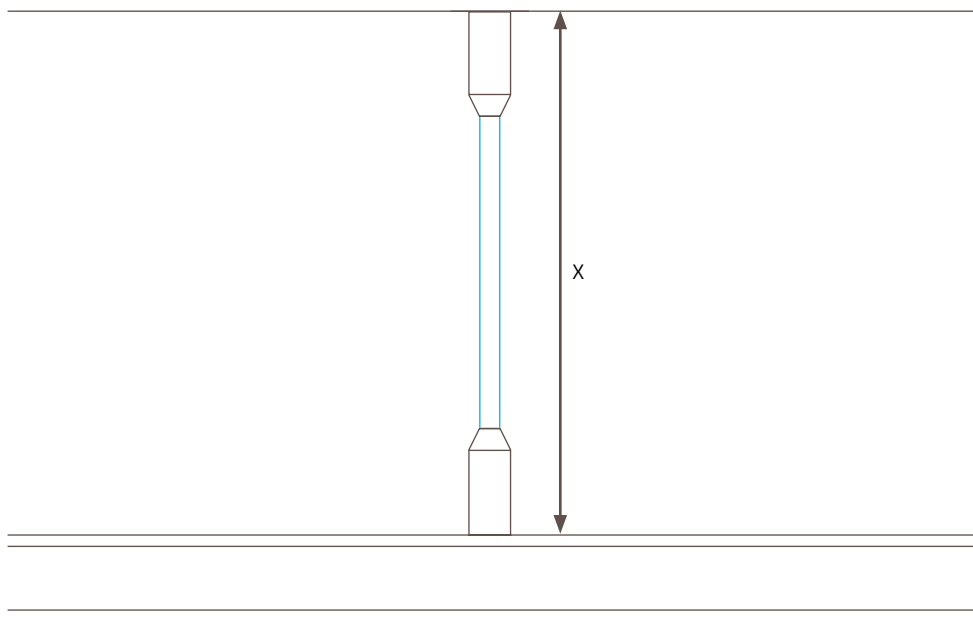


Before Installation

For the correct tube length, you will need to minus (-) 30mm from the overall length of the track to the ceiling (x).


Shower Track

Instructions

- 01** Check position and height of track.

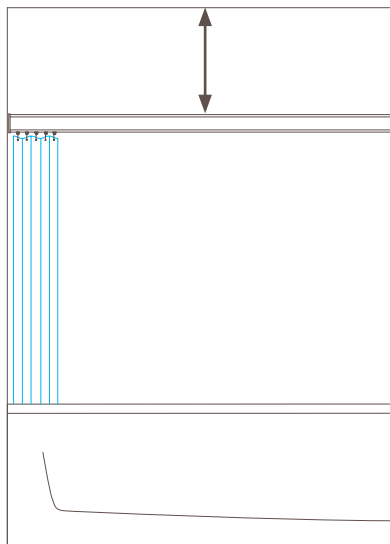


- 02** Mark the position of the wall shoes and fix them using suitable screws.

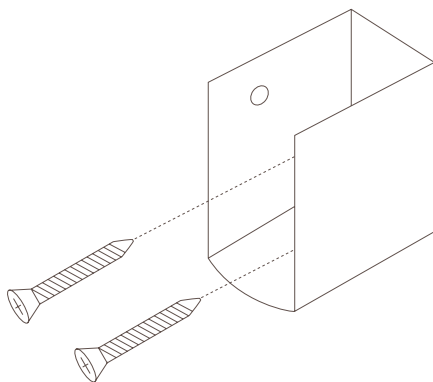


Shower Track

Instructions


- 03** Fit in accordance with the drawing by using a plumb line to determine the ceiling hanger position.

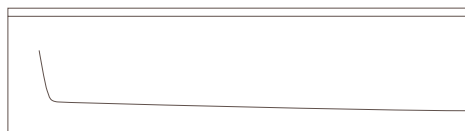


- 04** In case of the U-shape track, one hanger assembled centrally between the two bends is sufficient.

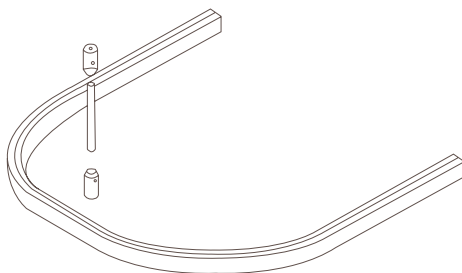

- 05** Ensure the track is level and cut the hanger tube to the correct length.

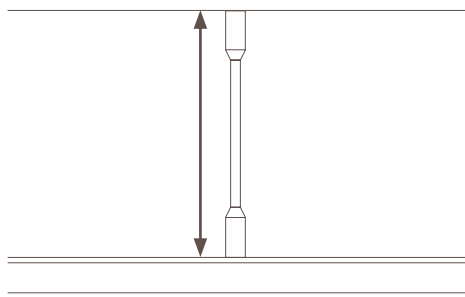

- 06** To allow the curtain to stack neatly at one end, a captive curtain hook is retained by a self-tapping screw. This can be repositioned if necessary by drilling another hole in the underside of the track using the 3mm drill bit provided.

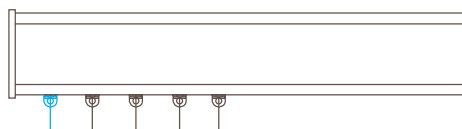



Head Office:

Enterprise Way,
Wickford, Essex, SS118DH

Call: +44 (0)1268 570900

Email: sales@yewdale.co.uk

For more information on all
Yewdale products, please call
the sales department.

