


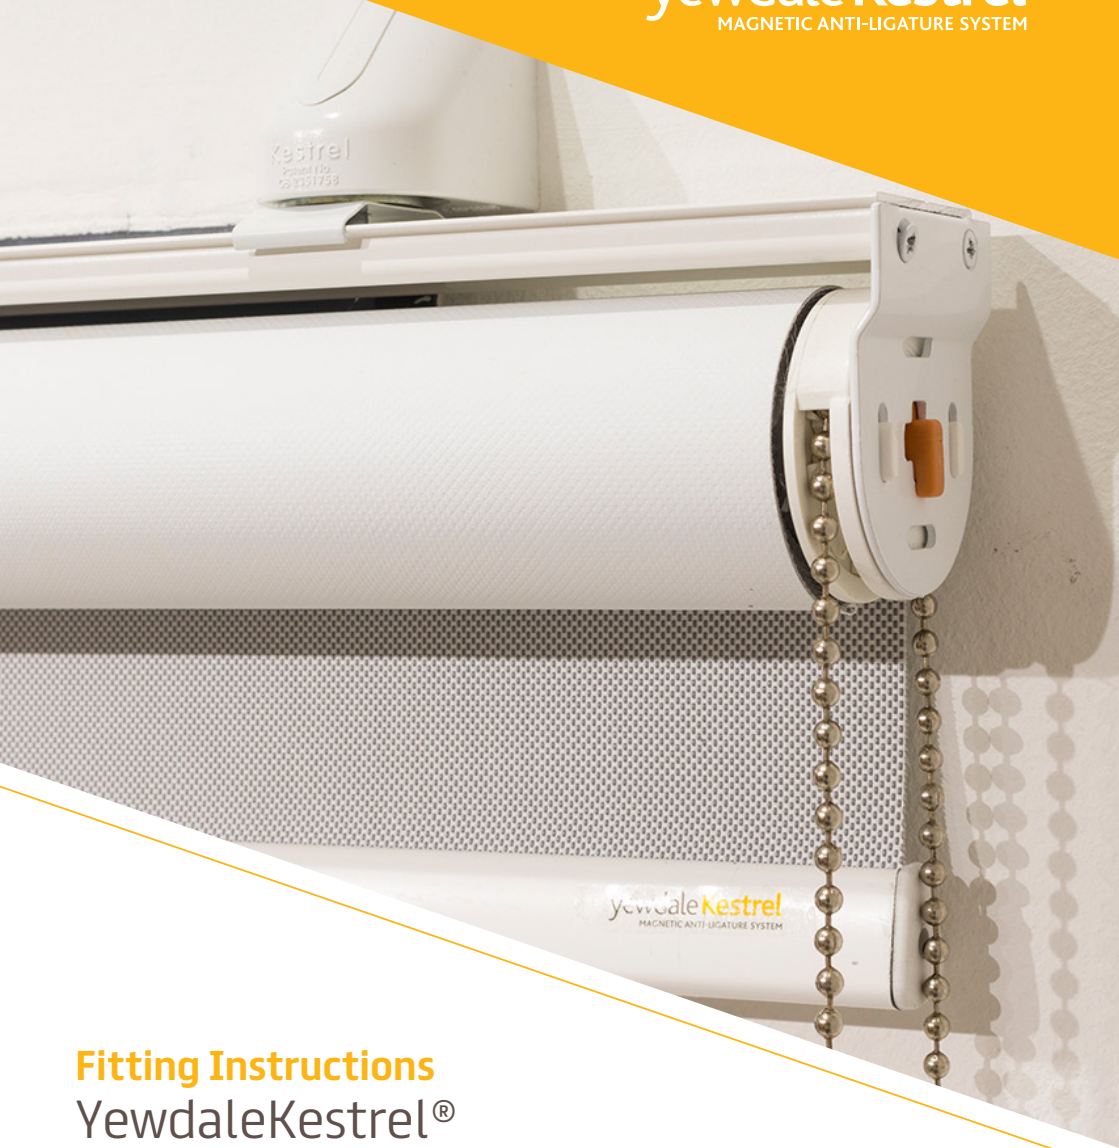

Fitting Instructions

YewdaleKestrel®

Roller Blinds (KR20 / KR20S)

Part no: 927


What you'll need



Screwdriver



Drill

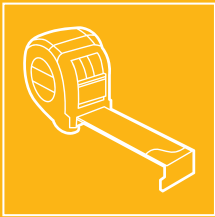

Measuring Tape



Pencil



Screws



Wall Plugs

What's in the box




Roller Blind



Spring Clip with Disc

Face Fix Bracket

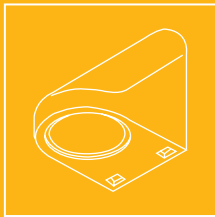


Magnet Housing




Screw Cover

Top Fix Bracket

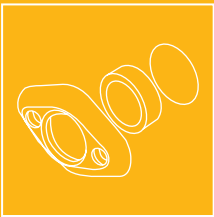

Magnet Housing

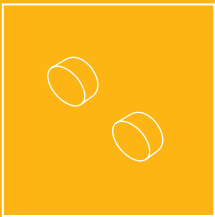

Screw Cover

or



Warning

All instructions must be read before installing.




Fitting Time

Approx. 20 minutes

Roller Blinds

Instructions

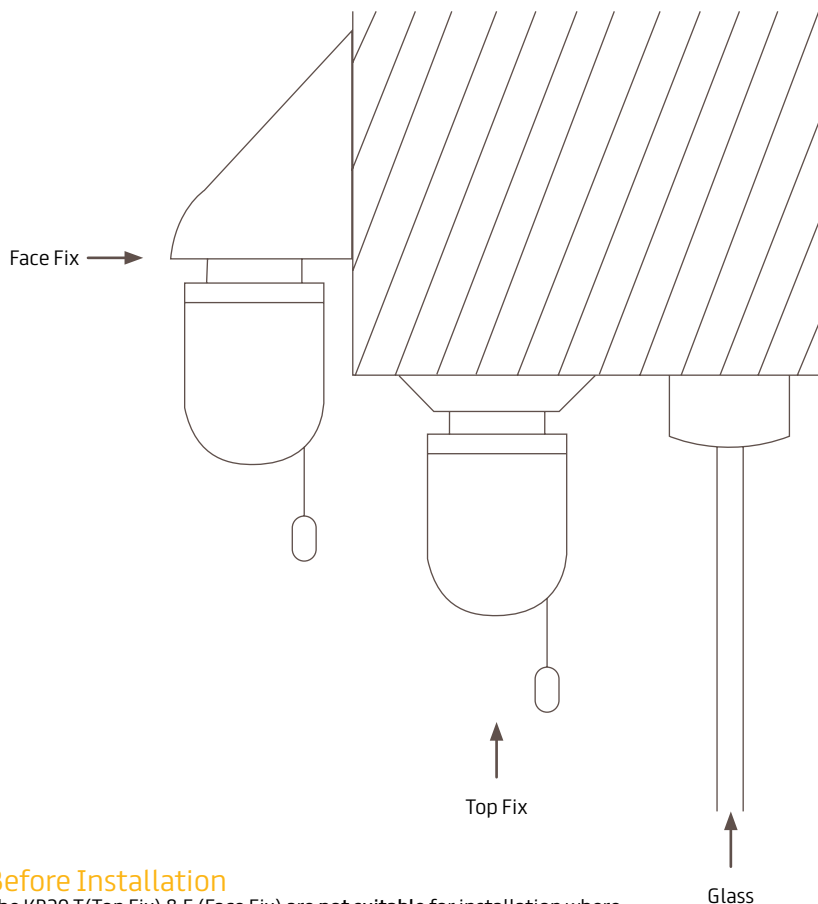

Before Installation

The KR20 T (Top Fix) & F (Face Fix) are **not suitable** for installation where there are unsupervised children **under the age of 42 months** (3.5 years).

Check the position and height of the blind, ensuring it hangs correctly and that nothing will prevent the blind from collapsing if it needed to.


Fit securely to substrate in accordance with drawings, ensuring the correct size and quantity of fixing screws are used. Ensure no ligature points are left once installation is completed.

Roller Blinds


Instructions

Installation Option


For an easier installation, remove the blind from the back bar brackets. Once back bar is installed, add the blind back onto the back bar.

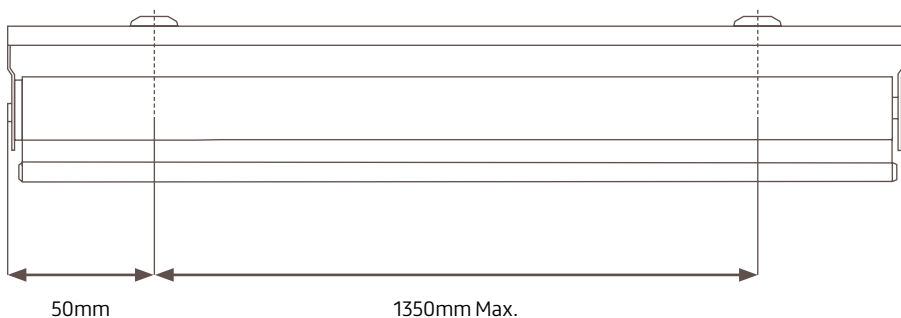

01 Check the position and height of the blind.

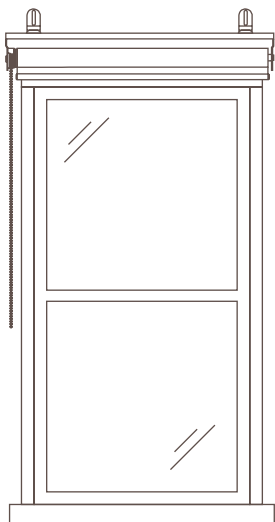

02 Attach spring clip to back bar and then mark where the brackets will need to be located on the wall.

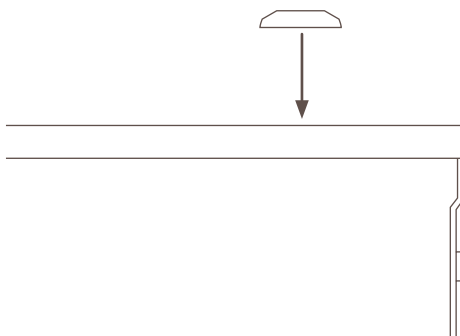


Roller Blinds

Instructions - Face Fix




DO NOT fit this
bracket to a door


- 01** Mark the position of the brackets using the centre of the disc.

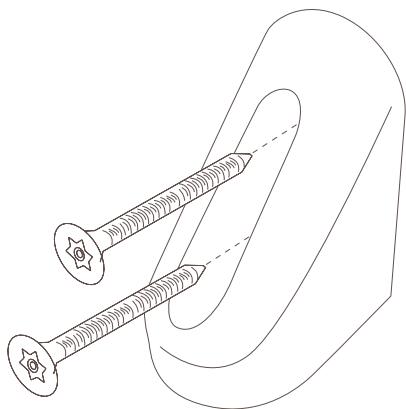

- 02**

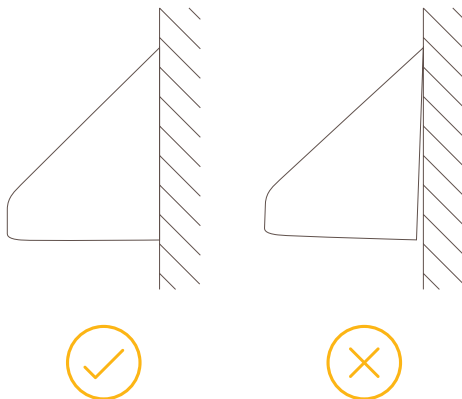

- 03** The push screw covers **MUST** be fitted ensuring they are flush with the bracket body.

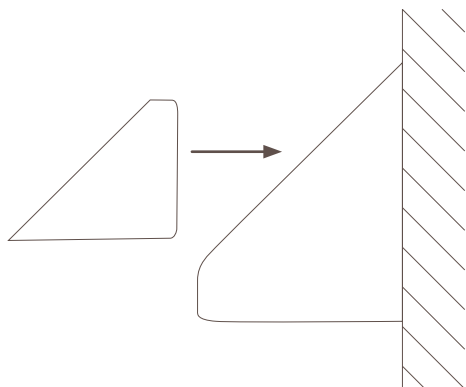


- 04**




Roller Blinds

Instructions - Top Fix


- 01** Mark the position of the brackets using the centre of the disc.

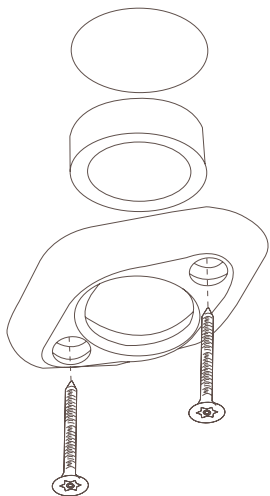

- 02** Screws must not be proud, ensuring no ligature points are left exposed.

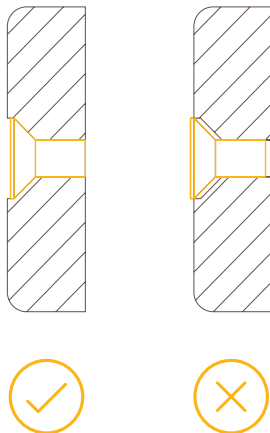

- 03** The push screw covers **MUST** be fitted ensuring they are flush with the bracket body.

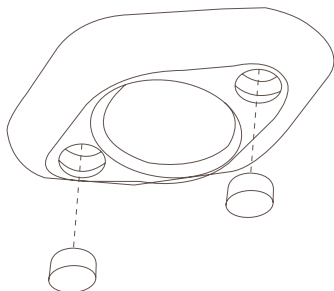

- 04**



Roller Blinds


Instructions - Broken Spring

If the fabric does not wind up completely when the blind is operated, greater spring tension can be applied as follows.

If the tension is too much, follow the steps in reverse, i.e. remove the blind from the brackets and unroll the fabric by hand off the roller.

Ensure the blind is not over tensioned as this will result in the bottom bar crashing into the blind and potentially jamming.


- 01** Bring the blind down 250mm from its upper most position.

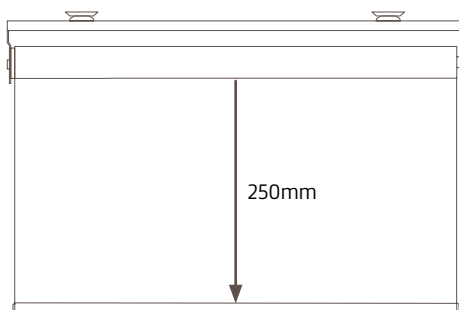

- 02** Remove the blind from the brackets and roll the fabric by hand onto the roller.



- 03** Replace the blind in the brackets

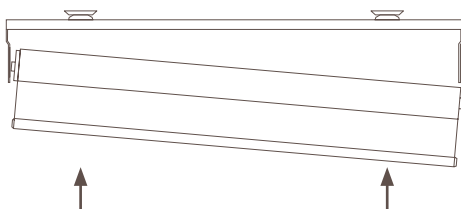


Roller Blinds

Instructions - Easy Break Connector


One easy break chain connector is supplied with each KR20 blind (not available with the KR20S Broken Spring Blind), which can be connected to the blind's chain to act as a break in the loop if required.

The easy break chain connector is design to work by connecting the two ends of a single piece of chain together to form a loop.


01 Break the blind's chain loop.

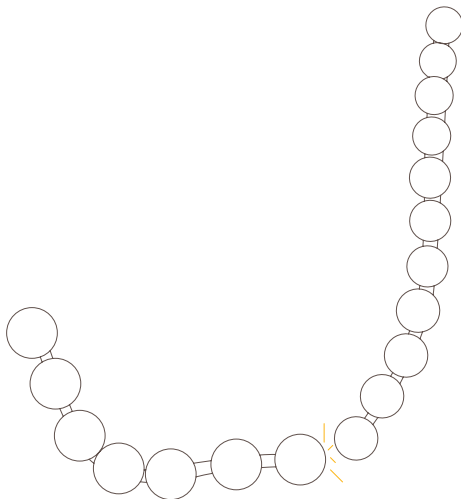

02 Push the last ball on the end of the chain into the hole in the connector. Repeat on other side.

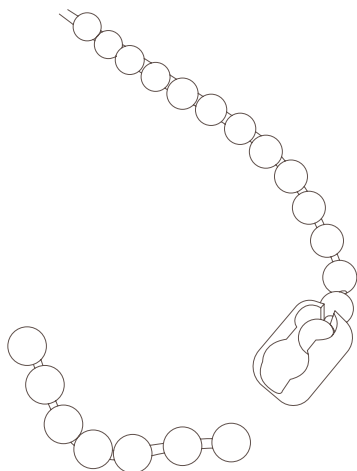

03 If a connector comes apart and is undamaged, it will need to be re-connected following the same process.

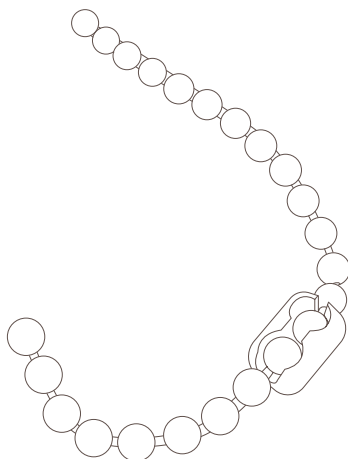

Roller Blinds

Testing

Testing







Discs should be horizontal and the centre of the gravity of the load should be directly beneath the centre-line of the discs. Test the completed installation. The downward force needed to part the brackets should never be more than 400N (40kg static load) at any point.

Please Note

Care must be taken to ensure that no ligature points are left once the installation has been completed. The push-in screw cover is intended to be tight fit to prevent unauthorized access to fixings.

YewdaleKestrel® Packers (K557PC)

If needed, YewdaleKestrel® Packers (K557PC) can be used. Do Not use any other items to replicate this.

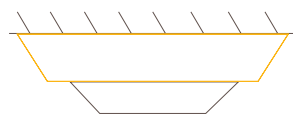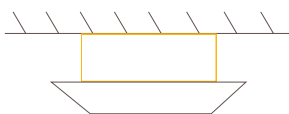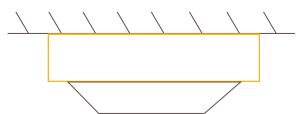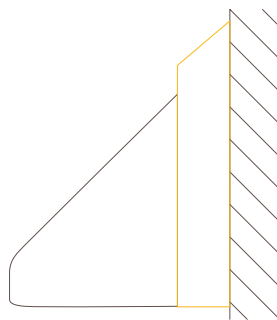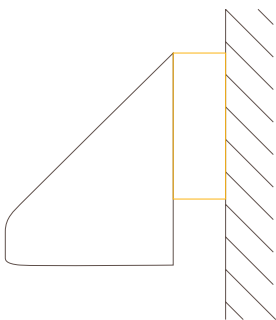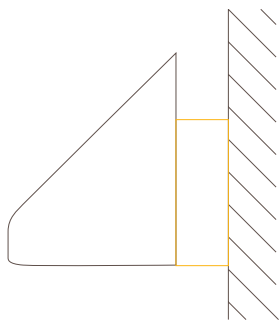

Roller Blinds



Warning

The magnetic element of the YewdaleKestrel® bracket is POWERFUL. Handle with care. If attached to a flat steel surface it may be difficult to remove the magnet. DO NOT PLACE NEAR SENSITIVE ELECTRONIC EQUIPMENT.

YewdaleKestrel® products are designed as standalone products only. Care should be taken when assessing or arranging a room to ensure that YewdaleKestrel® products cannot be misused in conjunction with any other item, furniture or fixings in the room.

It is the responsibility of the end user or client to ensure the product is suitable for the environment it is being installed in. YewdaleKestrel® products must be fitted by a qualified professional with an up to date training certificate and in accordance with the manufacturer's instructions. Failure to do so could jeopardise the product's effectiveness as an anti-ligature system. All installations must be checked and commissioned on completion to ensure the downward forces does not exceed the maximum nor that it is breaking away below the normal force. It is highly recommended that sign off proof that the product is installed and commissioned correctly is issued to the client after installation.



For more information on installations, using the systems safely, load testing and maintenance, please scan the QR code to read our YewdaleKestrel® Policy.



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.

