



Fitting Instructions

YewdaleKestrel®

Flexible Window Curtain Tracks (K9500PC)

Part no: 930


What you'll need



Screwdriver




Drill

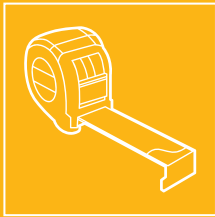

Measuring Tape



Pencil

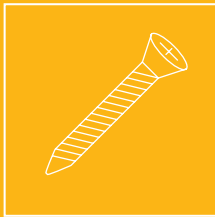

Screws




Wall Plugs

What's in the box



Pre-assembled Track

Face Fix Bracket

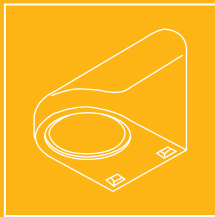


Magnet Housing




Screw Cover

Top Fix Bracket

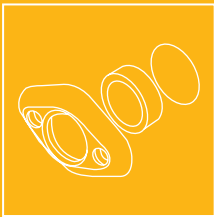

Magnet Housing

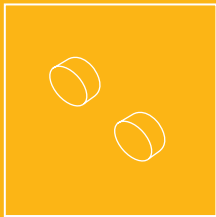

Screw Cover

or



Warning

All instructions must be read before installing.




Fitting Time

Approx. 20 minutes


Flexible Window Curtain Tracks

Instructions

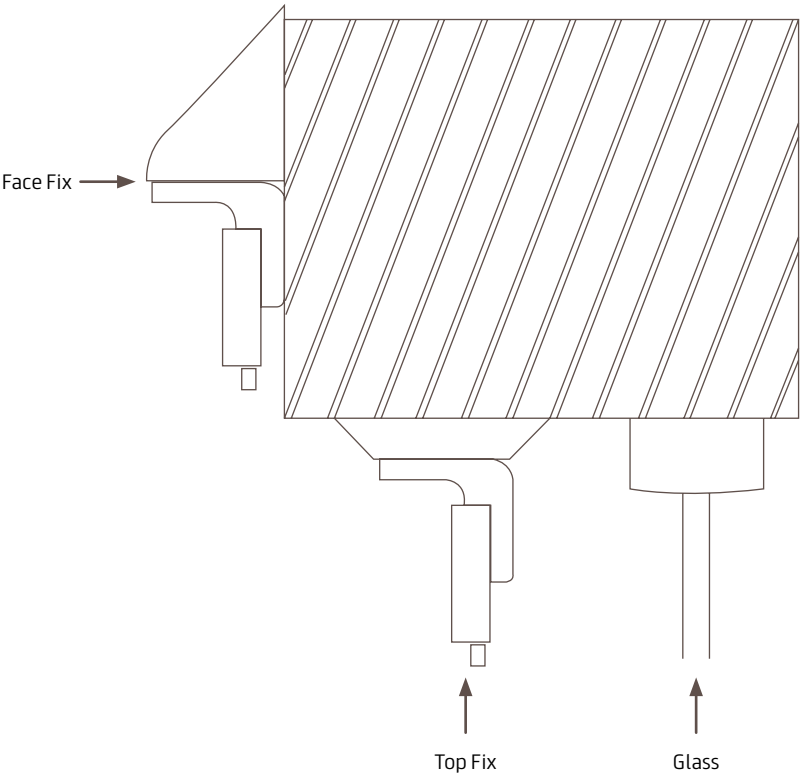

Flexible Window Curtain Tracks

Instructions

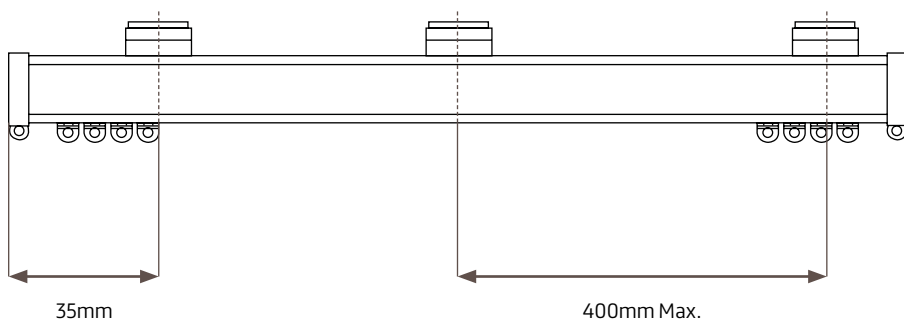

Before Installation

Check the position and height of the blind, ensuring it hangs correctly and that nothing will prevent the blind from collapsing if it needed to.

Fit securely to substrate in accordance with drawings, ensuring the correct size and quantity of fixing screws are used. Ensure no ligature points are left once installation is completed.


Flexible Window Curtain Tracks

Instructions


Before Installation

Each track bracket is made up of three parts: bracket main body, track insert which slides into track profile and cover cap. To move the bracket position, follow the instructions below.


01

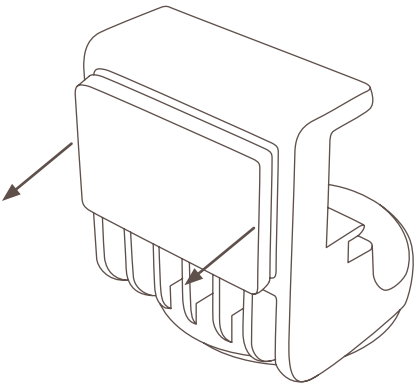

02 Loosen the screws that clamp against the curtain track.

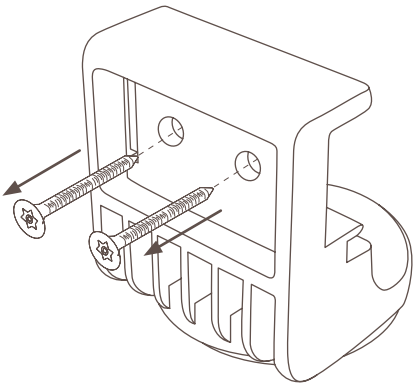


03

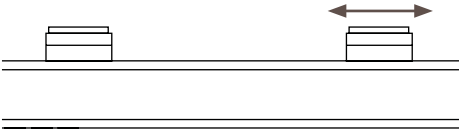


Flexible Window Curtain Tracks

Instructions


04 Retighten screws.

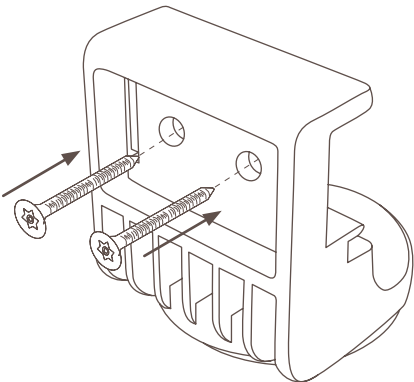

05

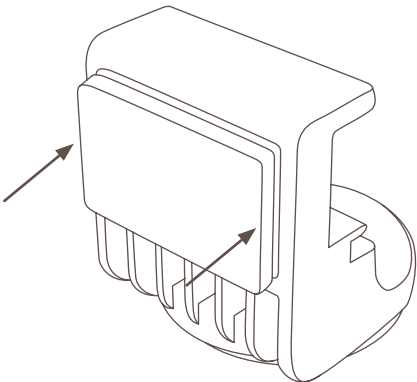

06

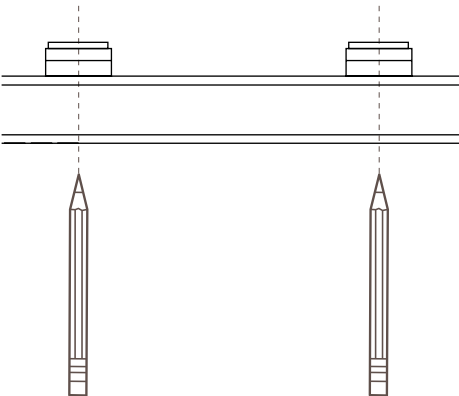


Once the bracket location has been marked using a pencil, continue with instructions on the following pages. If the track is large, just mark the centre bracket position at this stage.


Flexible Window Curtain Tracks

Instructions - Face Fix


- 01** All tracks come pre-assembled with discs, fitted to the track. Mark the position of the brackets using the centre of the disc.

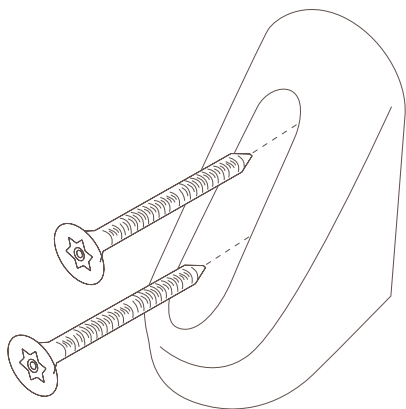


02

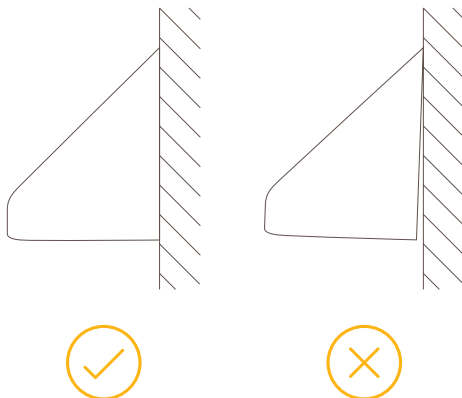

- 03** The push screw covers **MUST** be fitted ensuring they are flush with the bracket body.

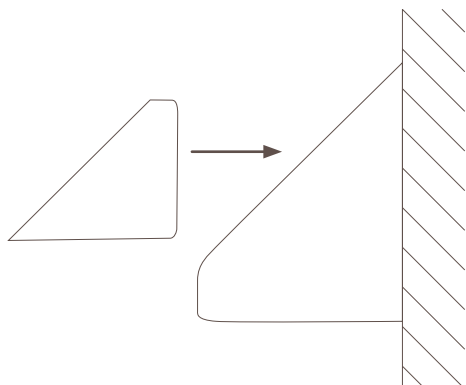

04

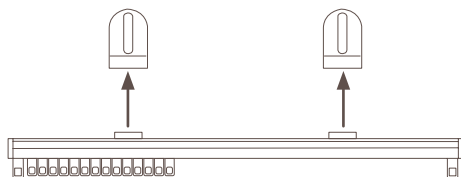


Magnetic discs are positioned 35mm from each end and a maximum of 400mm between each magnetic disc.


Flexible Window Curtain Tracks

Instructions - Top Fix


- 01** All tracks come pre-assembled with discs, fitted to the track. Mark the position of the brackets using the centre of the disc.

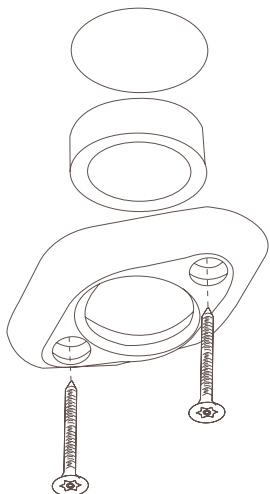

- 02** Screws must not be proud, ensuring no ligature points are left exposed.

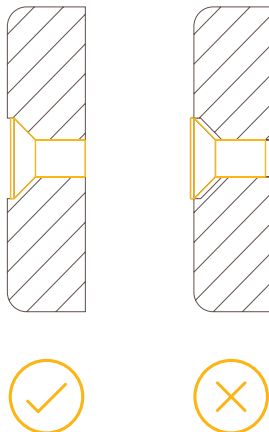

- 03** The push screw covers **MUST** be fitted ensuring they are flush with the bracket body.

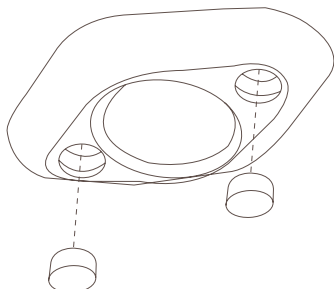

- 04**



Magnetic discs are positioned 35mm from each end and a maximum of 400mm between each magnetic disc.

Flexible Window Curtain Tracks

Testing

Testing







Discs should be horizontal and centre of gravity of load should be directly beneath centre-line of discs. Test completed installation. The downward force needed to part the brackets should never be more than 400N (40kg static load) at any point.

Please Note

Care must be taken to ensure that no ligature points are left once the installation has been completed. The push-in screw cover is intended to be tight fit to prevent unauthorized access to fixings.

YewdaleKestrel® Packers (K557PC)

If needed, YewdaleKestrel® Packers (K557PC) can be used. Do Not use any other items to replicate this.

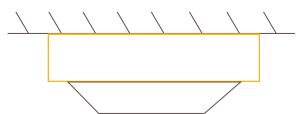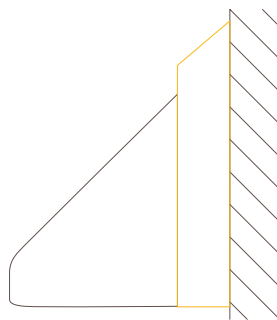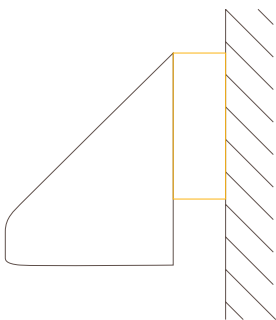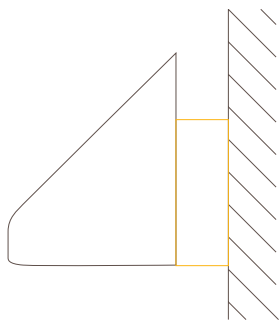

Flexible Window Curtain Tracks

Warning

The magnetic element of the YewdaleKestrel® bracket is POWERFUL. Handle with care. If attached to a flat steel surface it may be difficult to remove the magnet. DO NOT PLACE NEAR SENSITIVE ELECTRONIC EQUIPMENT.

YewdaleKestrel® products are designed as standalone products only. Care should be taken when assessing or arranging a room to ensure that YewdaleKestrel® products cannot be misused in conjunction with any other item, furniture or fixings in the room.

It is the responsibility of the end user or client to ensure the product is suitable for the environment it is being installed in. YewdaleKestrel® products must be fitted by a qualified professional with an up to date training certificate and in accordance with the manufacturer's instructions. Failure to do so could jeopardise the product's effectiveness as an anti-ligature system. All installations must be checked and commissioned on completion to ensure the downward forces does not exceed the maximum nor that it is breaking away below the normal force. It is highly recommended that sign off proof that the product is installed and commissioned correctly is issued to the client after installation.



For more information on installations, using the systems safely, load testing and maintenance, please scan the QR code to read our YewdaleKestrel® Policy.



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.

