



Fitting Instructions

YewdaleKestrel®

Flexible Coat Hook (K508)

Part no: 932


What you'll need




Screwdriver



Drill

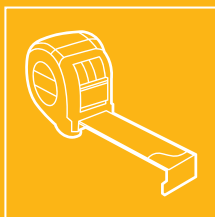

Measuring Tape

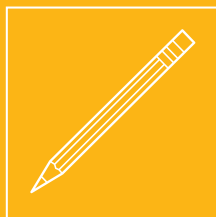


Pencil

What's in the box




Cover

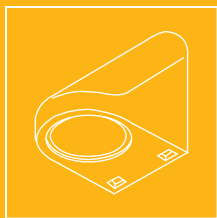

Magnet Housing



Coat Hook

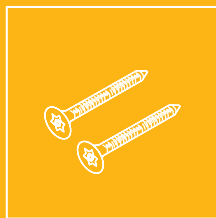

Fixing Screws



Please Note
DO NOT fit this product to a door.



Warning

All instructions must be read
before installing.




Fitting Time

Approx. 5 minutes


Flexible Coat Hook

Instructions


01

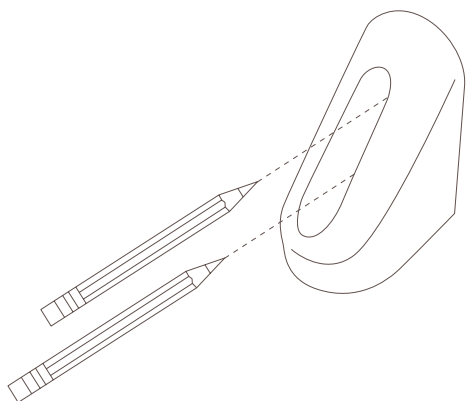

02

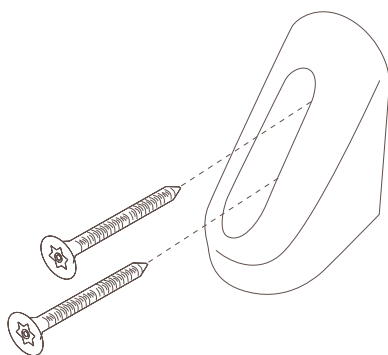


03

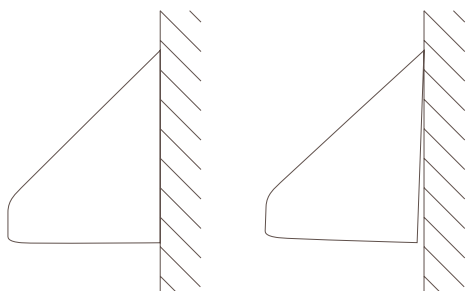

04


Push screw covers MUST be fitting ensuring that it is flush with the bracket body.

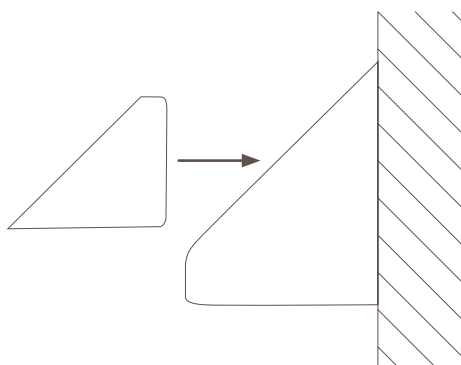

Flexible Coat Hook


Instructions

05



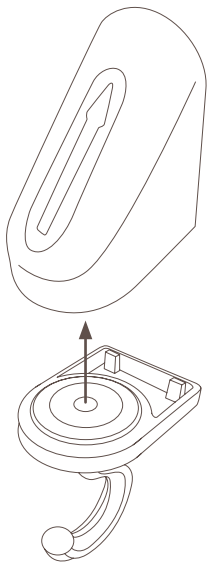


06

Assembly complete

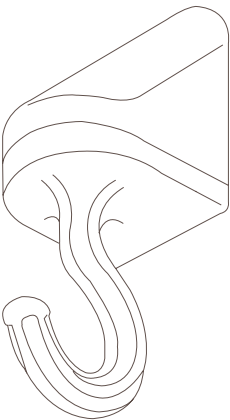

If needed, YewdaleKestrel® Packers (924) can be used. Do Not use any other items to replicate this.

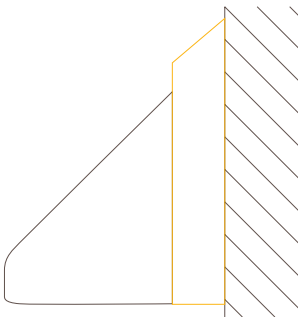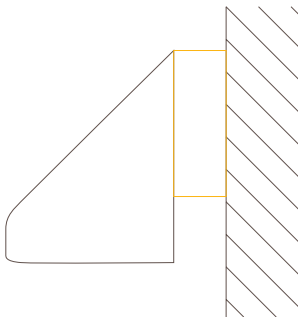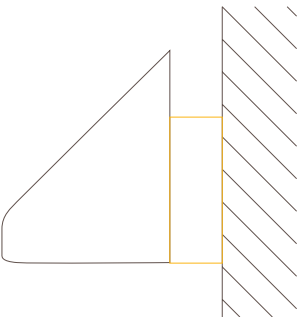

Flexible Coat Hook

Testing & Accessories

Testing

Discs should be horizontal and centre of gravity of load should be directly beneath centre-line of discs. Test completed installation. The downward force needed to part the brackets should never be more than 400N (40kg static load) at any point.



Please Note
DO NOT fit this product to a door.

Flexible Coat Hook

Warning

The magnetic element of the YewdaleKestrel® bracket is POWERFUL. Handle with care. If attached to a flat steel surface it may be difficult to remove the magnet. DO NOT PLACE NEAR SENSITIVE ELECTRONIC EQUIPMENT.

YewdaleKestrel® products are designed as standalone products only. Care should be taken when assessing or arranging a room to ensure that YewdaleKestrel® products cannot be misused in conjunction with any other item, furniture or fixings in the room.

It is the responsibility of the end user or client to ensure the product is suitable for the environment it is being installed in. YewdaleKestrel® products must be fitted by a qualified professional with an up to date training certificate and in accordance with the manufacturer's instructions. Failure to do so could jeopardise the product's effectiveness as an anti-ligature system. All installations must be checked and commissioned on completion to ensure the downward forces does not exceed the maximum nor that it is breaking away below the normal force. It is highly recommended that sign off proof that the product is installed and commissioned correctly is issued to the client after installation.



For more information on installations, using the systems safely, load testing and maintenance, please scan the QR code to read our YewdaleKestrel® Policy.



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.

