





Fitting Instructions
YewdaleDefiant®
Side Guide Wire

Part no: 946


What you'll need

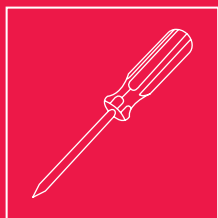


Screwdriver

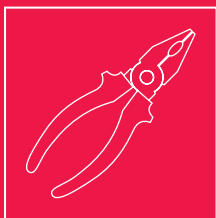


Pliers

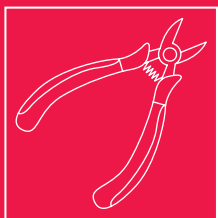

Wire Cutters

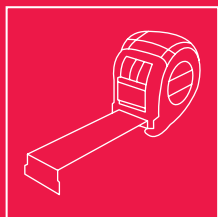


Measuring Tape

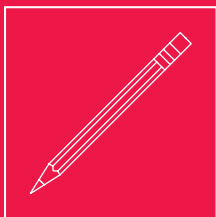


Pencil


What's in the box

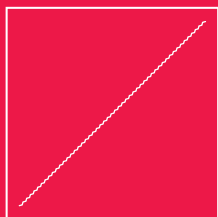

Side Wire

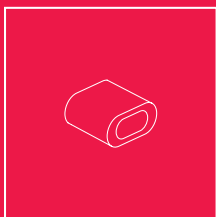


Guide Wire Crimp

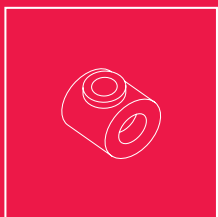

Guide Wire Clamp



Guide Wire Holder

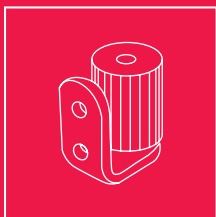

Bezel



Side Guiding Adaptor



Warning

All instructions must be read before installing the blind.




Fitting Time

Approx. 15 minutes


Please note

All blinds should be installed by a person competent in DIY.
If in doubt, please consult a professional.

R20, R20B, R20C, R20M, R20W Side Guide Wires

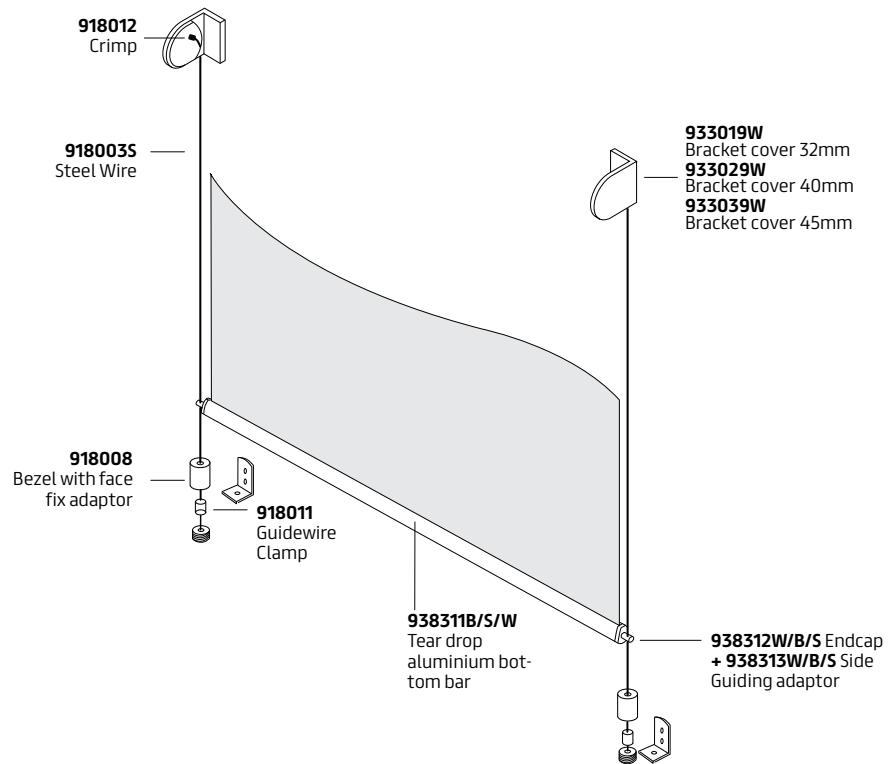


R20S, R26, R40, R54, R55, R56, R57 Side Guide Wires

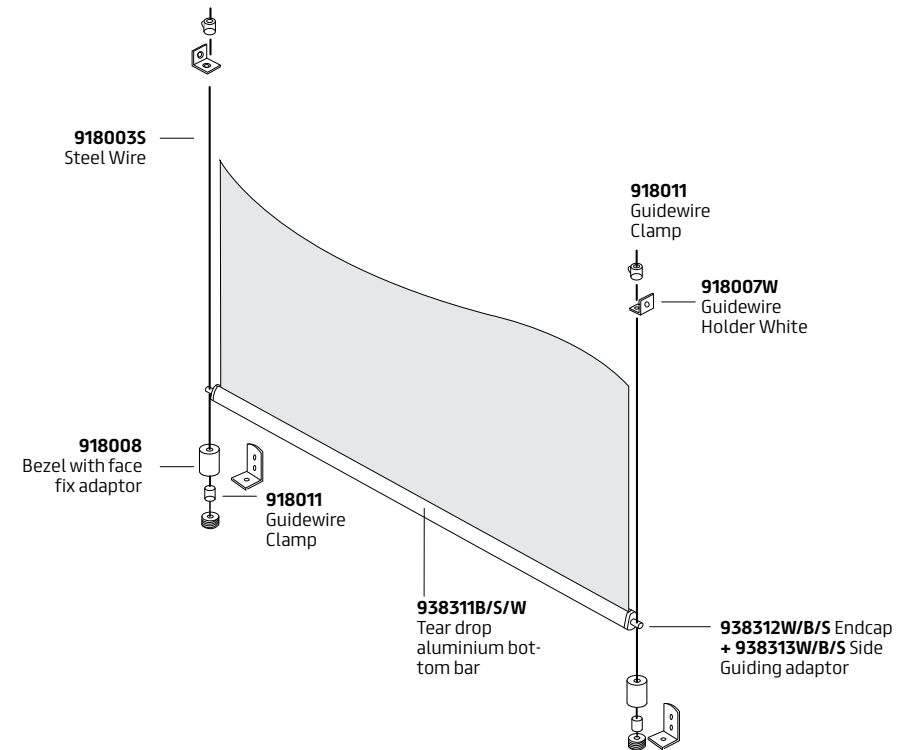


R20, R20B, R20C, R20M, R20W Side Guide Wires


- 01** Attach the crimp to the top of the guide wire by using pliers to squeeze the crimp tight to the wire.

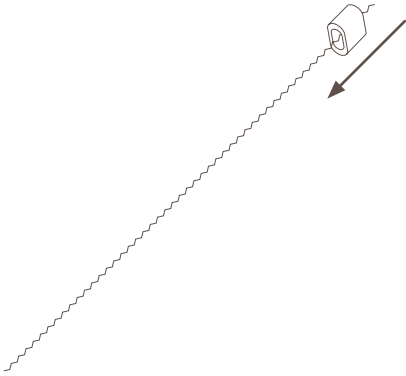

- 02** Feed the wire through the hole in the bracket cover from the inside, so that the crimp holds the wire in place inside the bracket cover. Then push the bracket over into place.

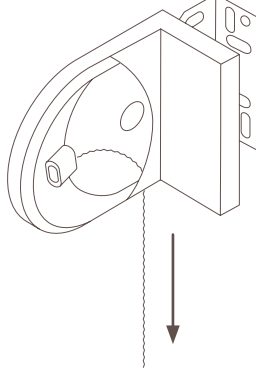

- 03** Thread the wire through the guide holes in the side guiding adaptor.

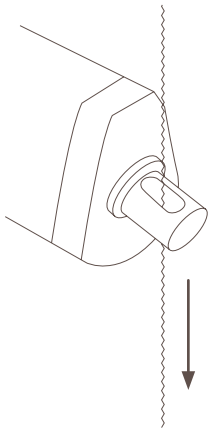


- 04** Unscrew the cover of the bezels. Then fix the bezel directly below the guidewire clamp. Then, thread the wire through the bezel cover from the top.




R20, R20B, R20C, R20M, R20W Side Guide Wires


- 05** Holding the covers in line with the home position, calculate the length of wire and trim to size.

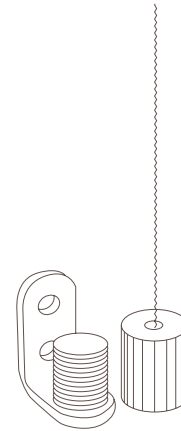


- 06** Cut the wire to length and securely fasten the wire clamps to the end of the wire. By holding the clamp with pliers, it is important that the screw in this product is tightened firmly against the wire.

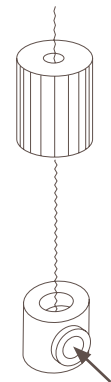

- 07** Screw the cover caps onto the bezel until the wire is taught.

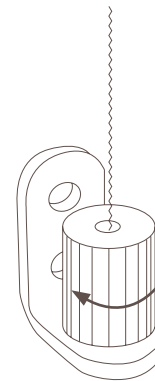


- 08** Ensure that when the blind is travelling up or down, the cable or bottom bar are not being pulled out of line.

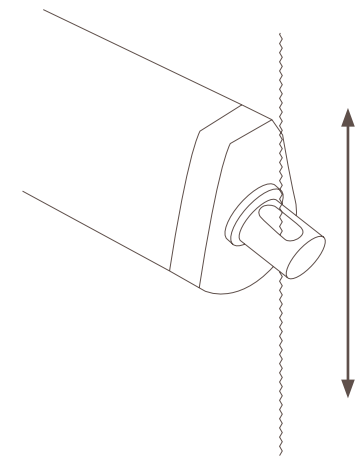


R20S, R26, R40, R54, R55, R56, R57 Side Guide Wires


- 01** Fix guide wire clamps to the blind brackets with the fixings used to secure the brackets to the fixing surface. If the blind is fitted to a back bar, the clamps will need to be fitted directly to the fixing surface and not the back bar.

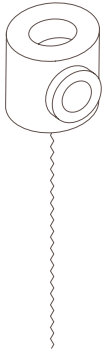

- 02** Cutting two lengths of wire (Blind drop + 100mm) attach the guide wire clamp to the end of the wire.

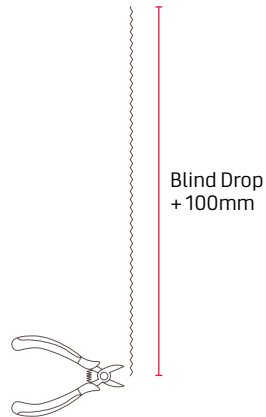


- 03** Thread the wire through the side guiding adaptor.

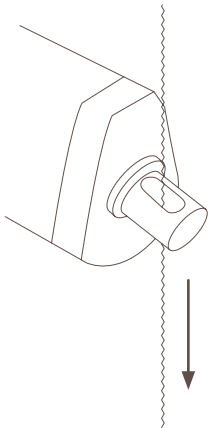


- 04** Unscrew the bezel. Fix the bezel directly below the guide wire clamp. If it is for face fixing, use the face fix adaptor.




- 05** Holding the covers in line with the home position, calculate the length of wire and trim to size.

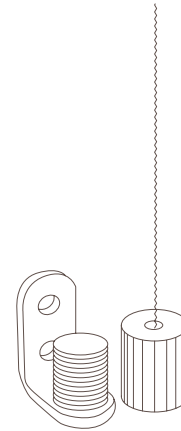


- 06** Cut the wire to length and securely fasten the wire clamps to the end of the wire. By holding the clamp with pliers, it is important that the screw in this product is tightened firmly against the wire.

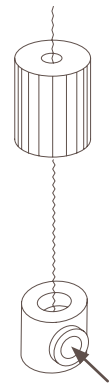


- 07** Screw the cover caps onto the bezel until the wire is taught.

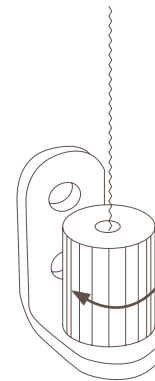


- 08** Ensure that when the blind is travelling up or down, the cable or bottom bar are not being pulled out of line.

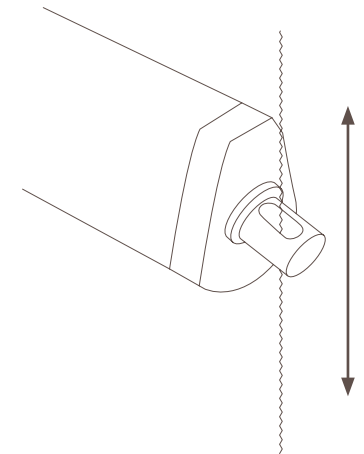

Part no: 956
Side Guide Wires

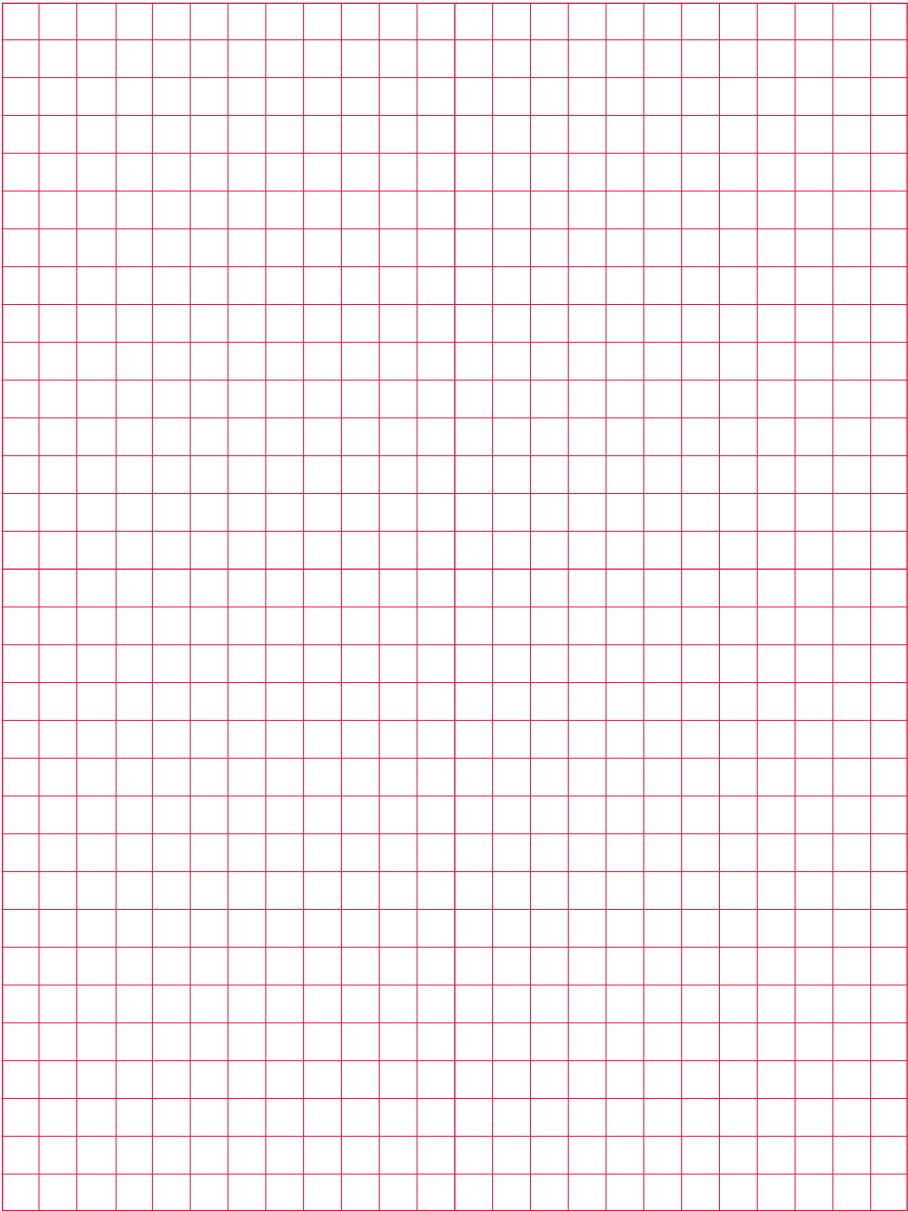

Part no: 956
Side Guide Wires

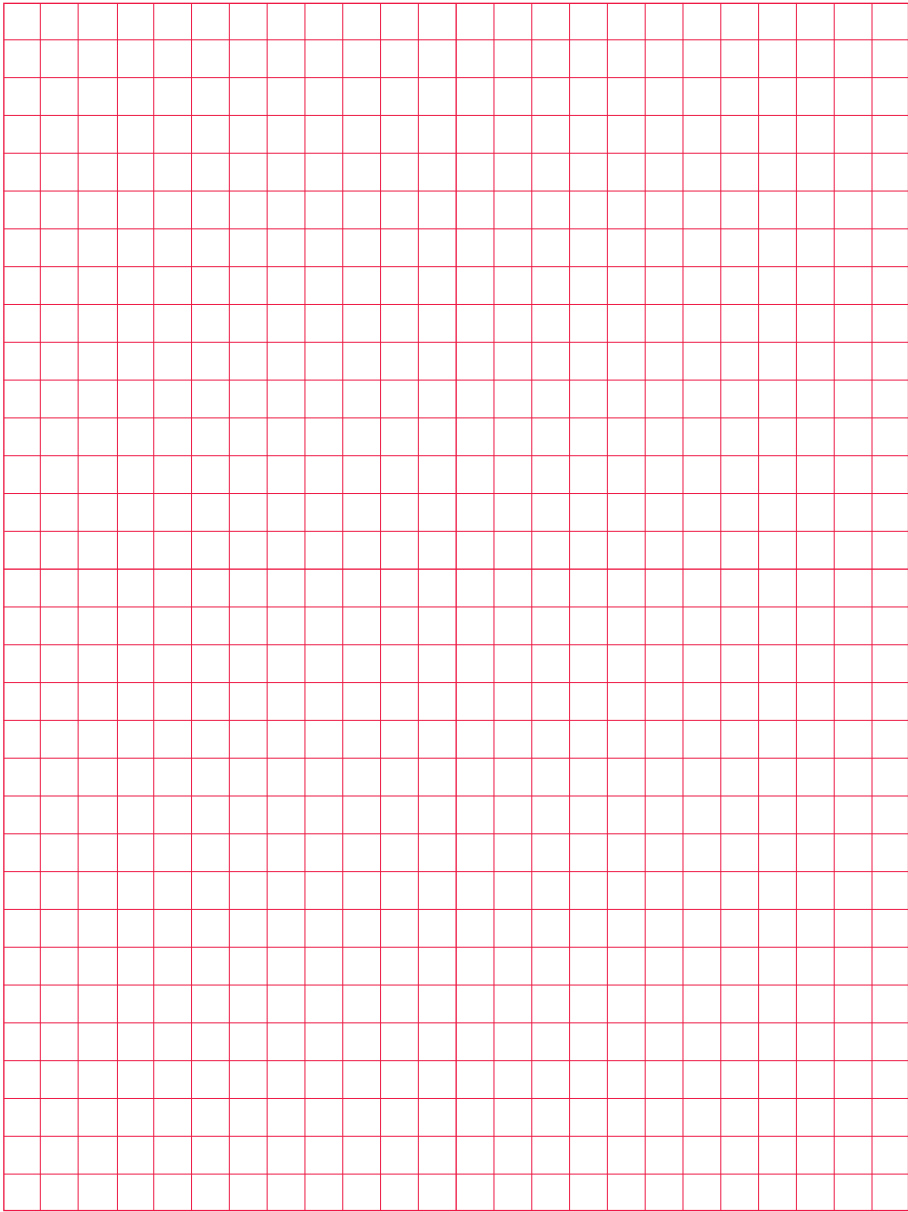



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.

