


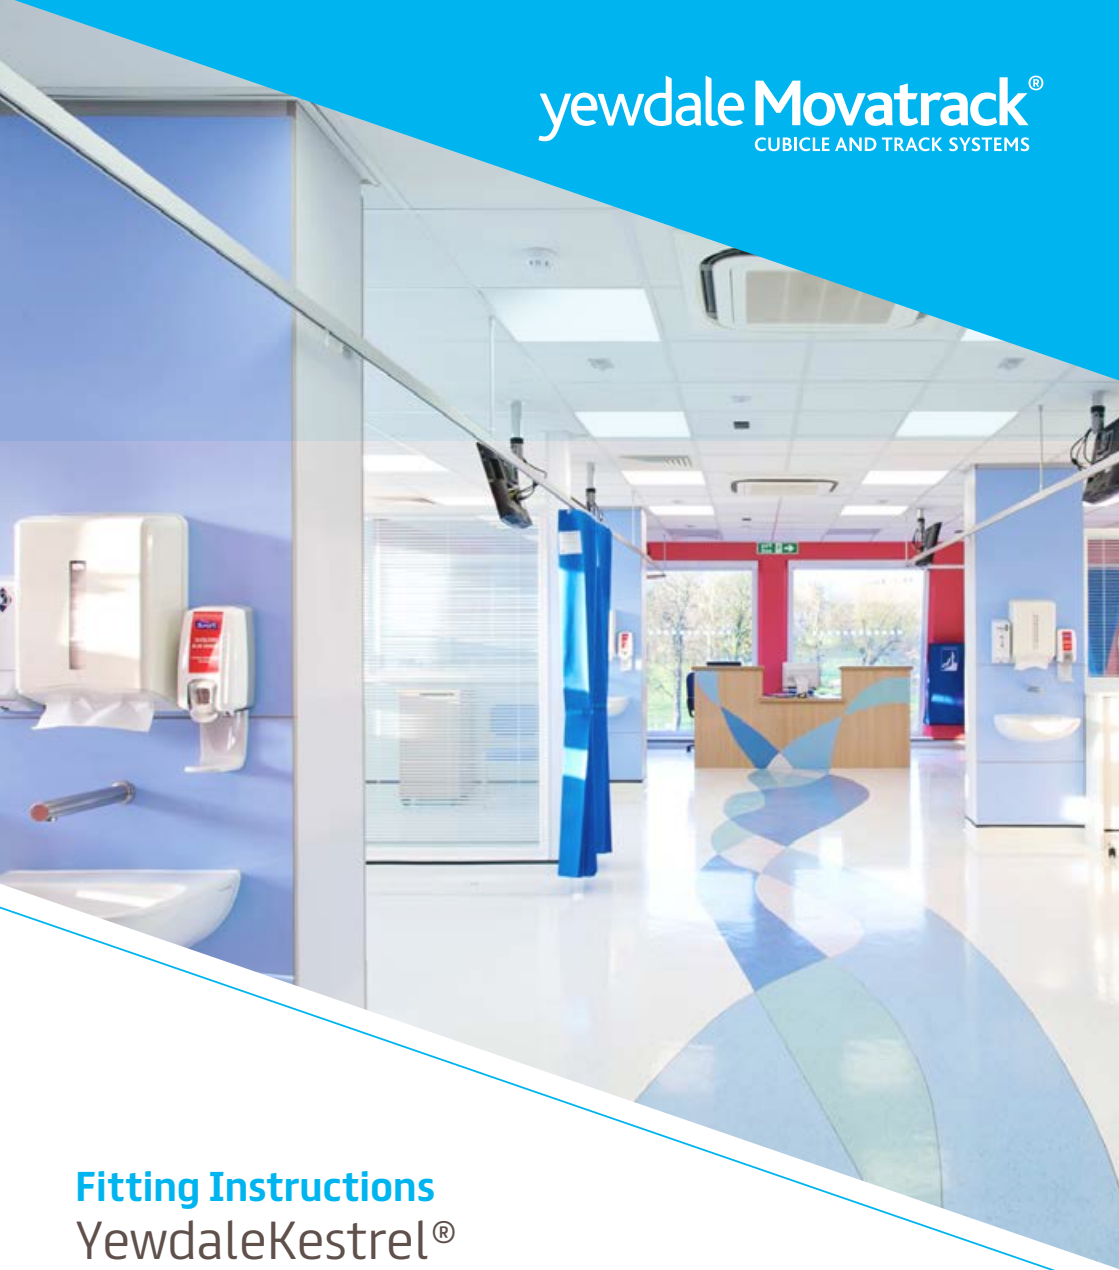

Fitting Instructions

YewdaleKestrel®


Cubicle Curtain Track (100S/W)

Part no: 963


What you'll need




Screwdriver

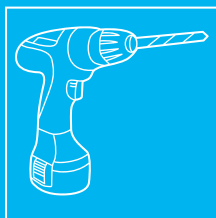


Drill

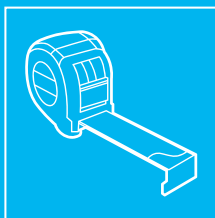


Measuring Tape

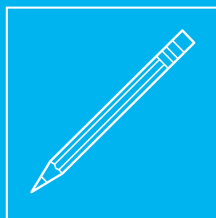

Pencil

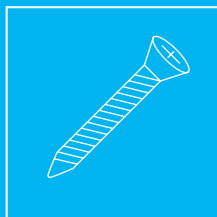

Screws

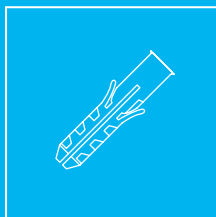


Wall Plugs


What's in the box




Pre-assembled Track

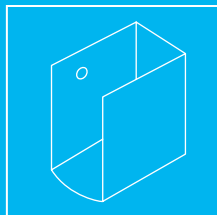


Wall Shoe

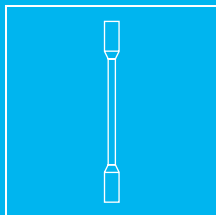

Ceiling Hanger
(optional if L shape or
over 3000mm wide)

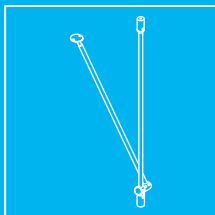

V Hanger
(optional with no lateral
support and is over
3000mm wide)

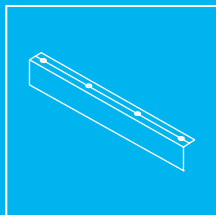

Overlaps
(optional with joining
tracks)



Warning

All instructions must be read before installing.




Fitting Time

Approx. 20 minutes

Yewdale Movatrack® Technical Book
Further information can be found in the full Yewdale Movatrack® Technical Book.
Please request a copy if required.

Cubicle Curtain Track

Instructions

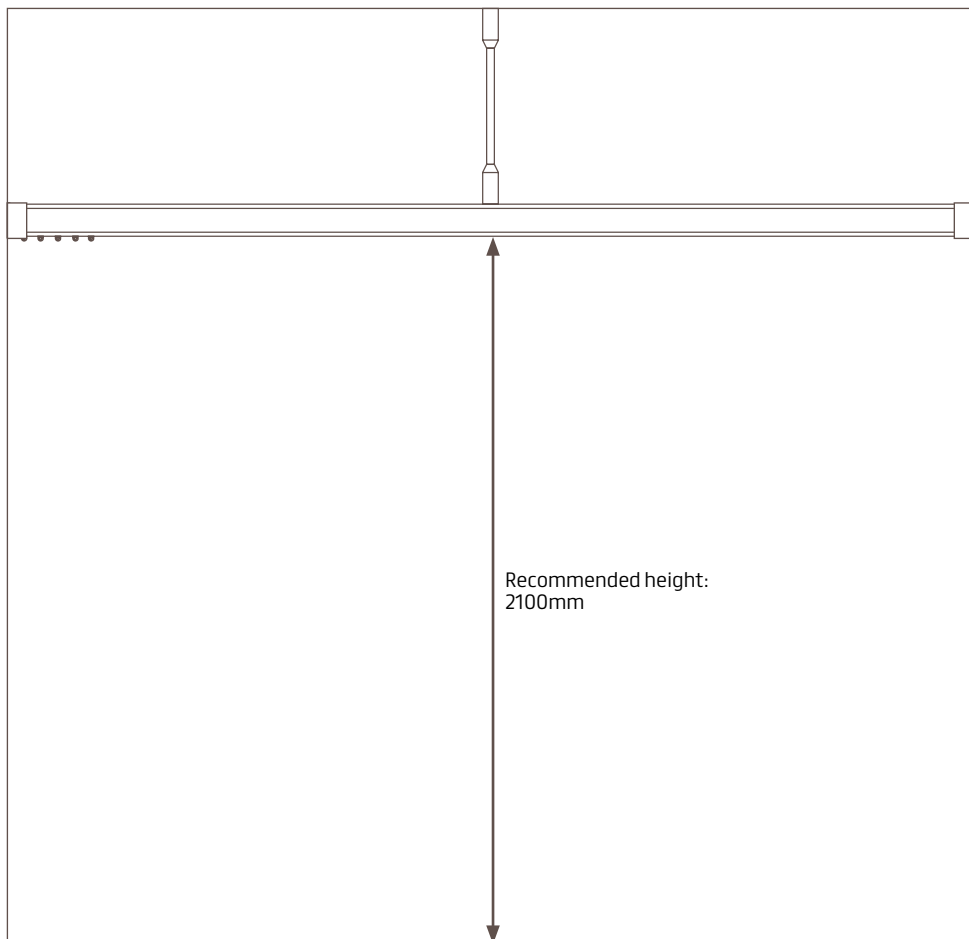


Before Installation

Unpack all of the track and components and ensure that all of the items are included as per the delivery note. Using the dimension on the drawing or the agreed track position, mark the position of the wall shoes on the wall. All dimensions are to the centre of the track.

The HTM66 recommended fitting height is 2100mm from the floor to the underside of the track.

Cubicle Curtain Track

Instructions

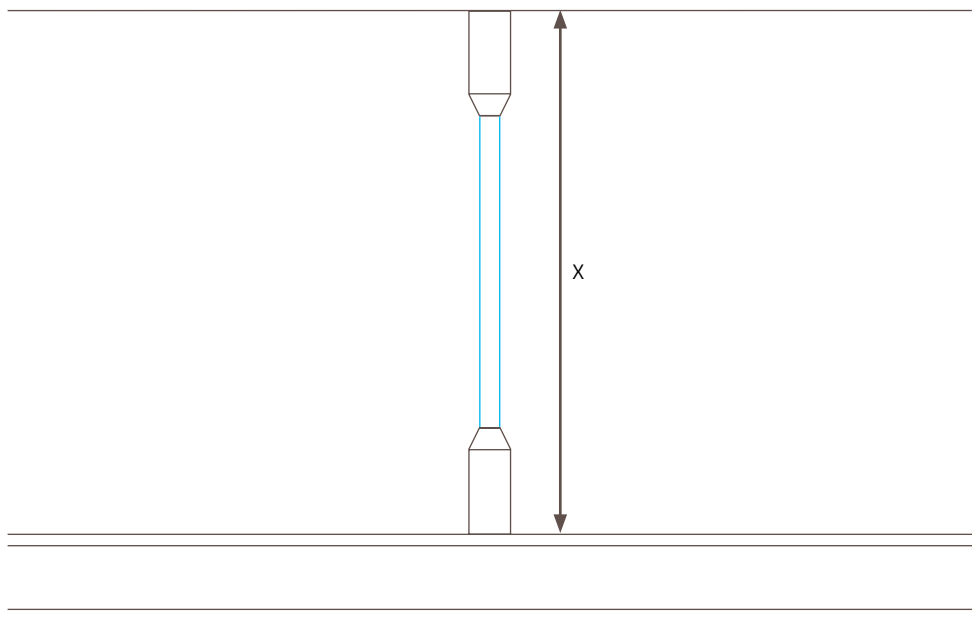

Before Installation


For the correct tube length, you will need to minus (-) 30mm from the overall length of the track to the ceiling (x).

Each bend must be supported by a 313 hanger assembly no further than 350mm from either leg of the bend.


At no point should the track span more than 3000mm without a support. If the track has a join, ensure the track is suspended within 150mm from the join. If the track has no lateral support and spans more than 3000mm, please ensure a V-hanger is used.

Cubicle Curtain Track Instructions


- 01** Mark the position of the wall shoes and fix them using suitable screws.

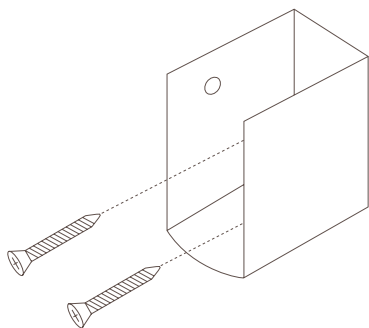


- 02** Assemble each section of the track on a clean floor using track inner joiners where applicable.

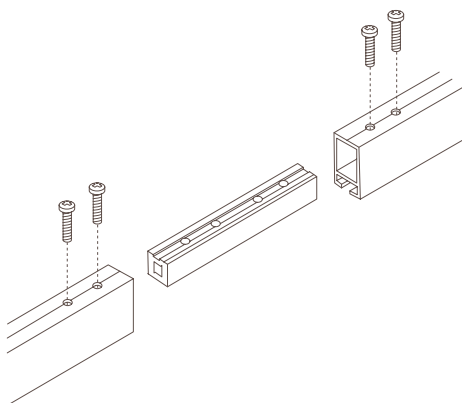

- 03** Lift the first section of the track up into the wall shoes and secure with the screw provided. Make sure to support the track at the bend with a suitable temporary support ensuring that the track is level.

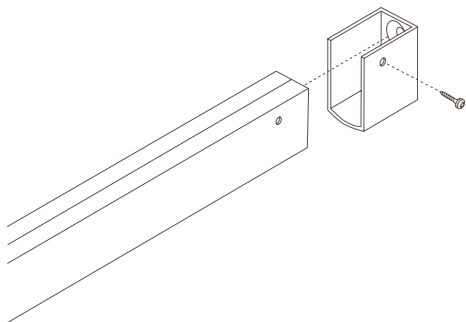


- 04** Depending on the layout of the track, join each section together with the overlaps, taking care that all fixing holes are used and that the screws are tightened securely for maximum stability.

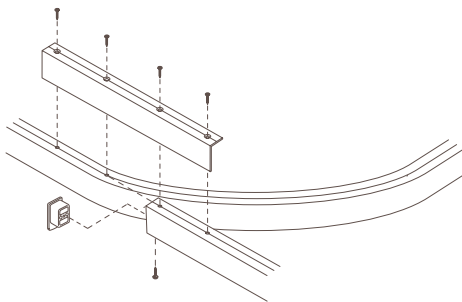


Cubicle Curtain Track

Instructions


- 05** Each bend must be supported by a 313 hanger, with assembly no further than 350mm from either leg of the bend.

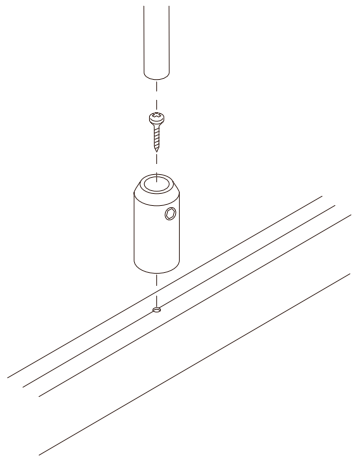


- 06** Using a plumb line, mark where hanger assembly will fix to ceiling and track.

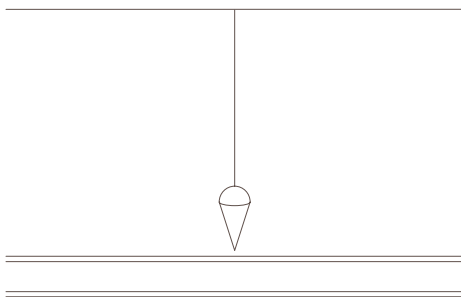

- 07** For V-suspension. When assembling the 313 hanger, ensure that the K113 V-hanger is located on the suspension tube and is rest on the lower 113 hanger which is fixed to the track.

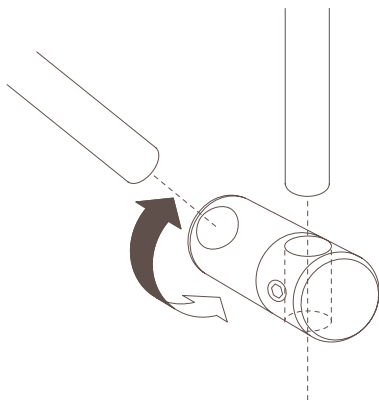

- 08** Once installation is complete, ensure that the gliders run smoothly across any joins and adjust any misalignments accordingly.

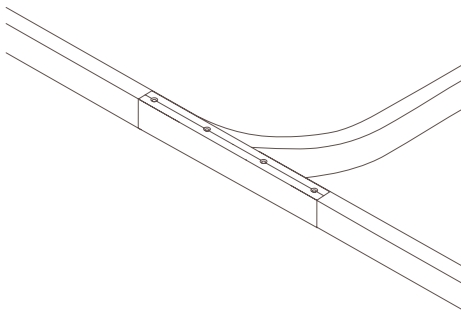



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH

Call: +44 (0)1268 570900

Email: sales@yewdale.co.uk

For more information on all
Yewdale products, please call
the sales department.

