


Fitting Instructions

YewdaleDefiant[®]

Vertical Blinds Sloping (VL30S)

Part no: 994

Safety Instructions

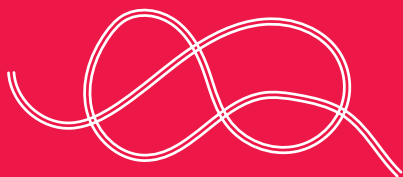

Loops in pull cords, chains, tapes and inner cords that operate the product can cause strangulation.



Keep cords out of the reach of young children.



Move beds, cots and furniture away from window covering cords



Do not tie cords together. Make sure cords do not twist and create a loop

Please note

All blinds should be installed by a person competent in DIY.
If in doubt, please consult a professional.



Warning

All instructions must be read
before installing the blind.




Fitting Time

Approx. 15 minutes


What you'll need



Screwdriver

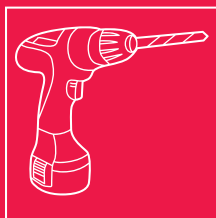


Drill

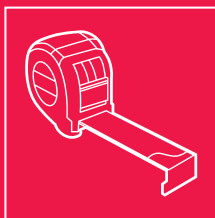


Measuring Tape



Pencil

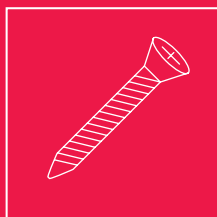


Screws

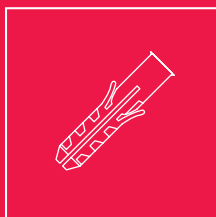

Wall Plugs


What's in the box

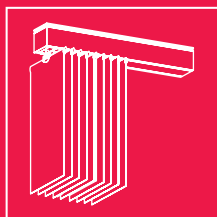

Vertical Blind



Top Fix Bracket

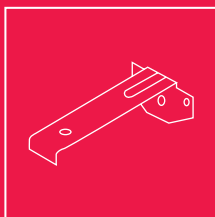


Face Fix Bracket




P Clip

VL30S
Cord Control Sloping

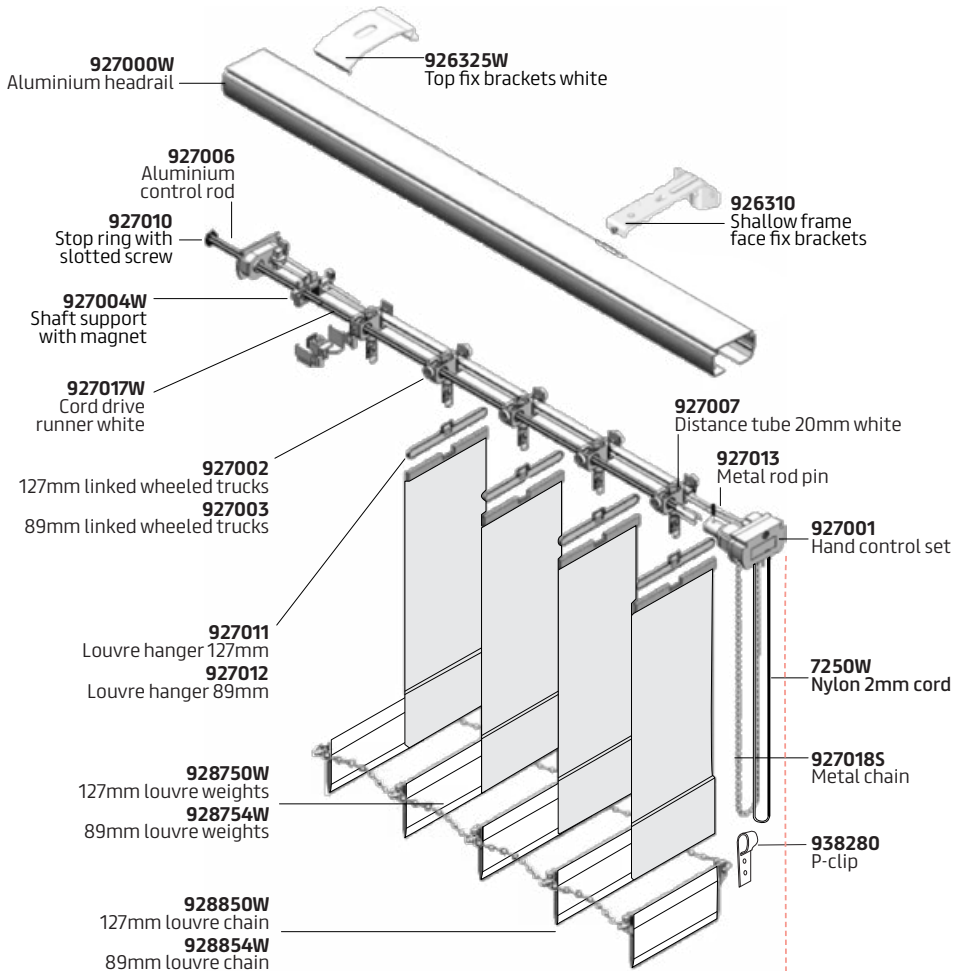

VL31 OPTIONAL

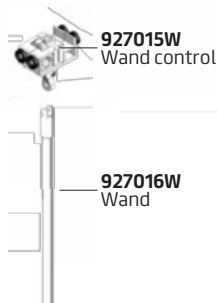

VL30S

Vertical Blinds Sloping

PLEASE NOTE


Due to the stacking of louvres, it is necessary to install the headrail first before measuring for the louvres.

TOP FIX

For 127mm louvres, brackets should be at least 75mm from the wall or window frame.


For 89mm louvres, brackets should be at least 55mm from the wall or window frame.

Brackets should be 40mm from either end of the tracks. All remaining brackets should be spaced evenly between these two brackets.

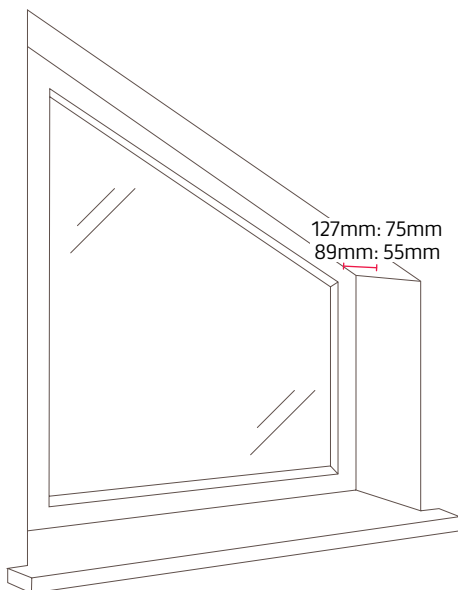

FACE FIX


Fix the brackets as close as possible to the ceiling or lintel. Brackets should be 40mm from either end of the tracks. All remaining brackets should be spaced evenly between these two brackets.

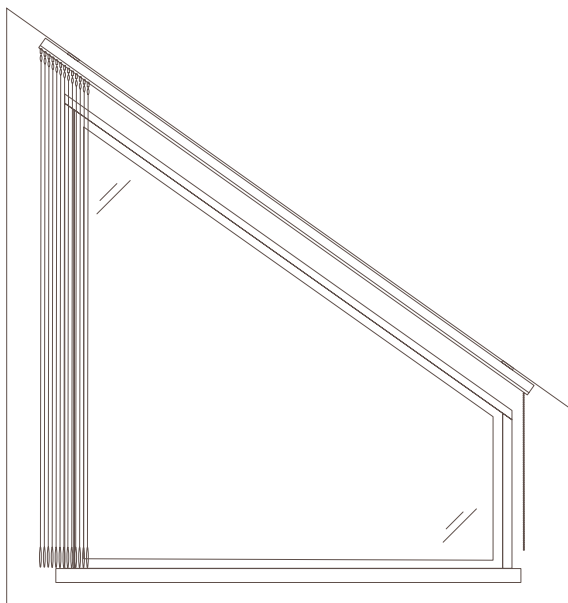


VL30S

Vertical Blinds Sloping


- 01** Keep controls to side that was chosen during the ordering process. Insert the small lip projecting from the brackets into the groove in the track.

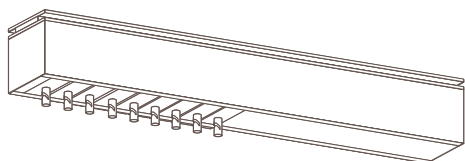

- 02** Push the track up into the brackets. The spring clip brackets will hold the track without further adjustment. Do not over tighten the screws as this will damage the track.

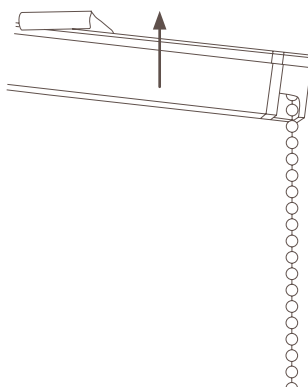

- 03** If your brackets have retaining screws, these should now be screwed into the other slot in the track. Please do not over-tighten the retaining screws as this will damage the track.

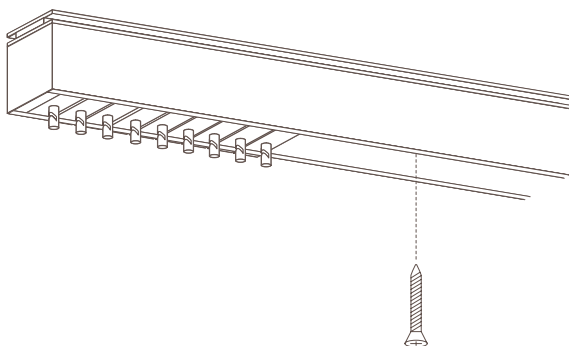


VL30S

Vertical Blinds Sloping

04

Using the form enclosed, measure each of the louvres drops and send the form back to Yewdale to manufacture the louvres.

Please note, the size of the louvres must be louvre length (hem to hem). Use the sample extension hook and the louvres hanger enclosed with headrail to determine this.

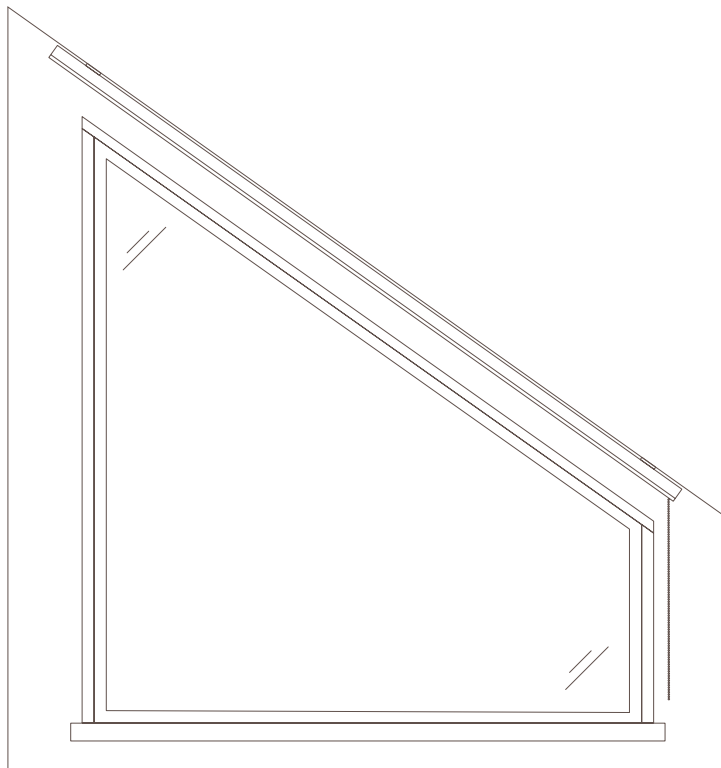

VL30S

Vertical Blinds Sloping

Customer

Job No.


[illegible]

VL30S

Vertical Blinds Sloping

- 05** Turn the hooks so that the slots are 90° to the track. Hang louvres, keeping all the seams facing the same way. Do not traverse blinds with the louvres in a closed position.


Please note, louvre references are from left to right.
For example, **Ref 1** would be the first louvre on the left hand side when facing the blind.

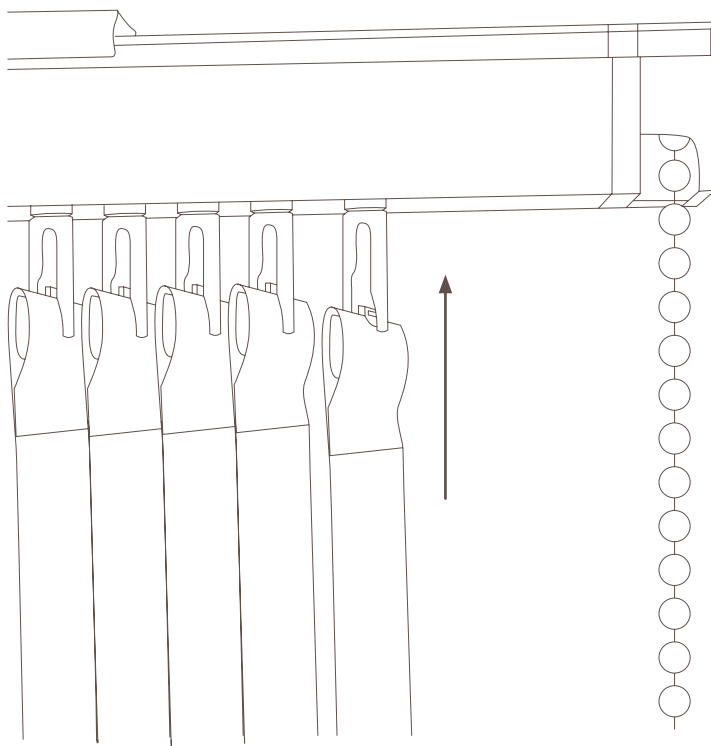

VL30S

Vertical Blinds Sloping

- 06** Ensure the relevant child safety device is used to comply with BS EN13120:2009+A1:2014, BS EN16433:2014 and BS EN16434:2014.

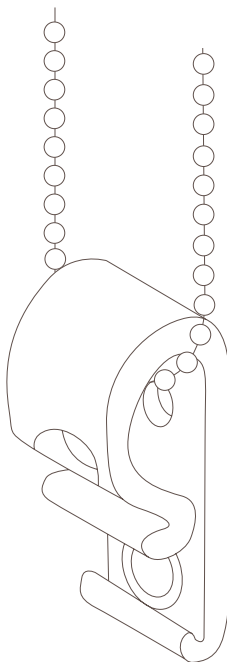

The chain tidy should be at a maximum distance from the control mechanism, keeping the chain taut (not under excessive tension however as this could negatively affect the longevity and operation of the blind).



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH

Call: +44 (0)1268 570900

Email: sales@yewdale.co.uk

For more information on all
Yewdale products, please call
the sales department.

