

Fitting Instructions

for YewdaleDefiant[®] overhead cassettes
(C56T, C57T)



Fitting Instructions

YewdaleDefiant[®] overhead cassettes
(C56T, C57T)


Part no: 1052

yewdale.co.uk


Fitting Instructions

YewdaleDefiant® overhead cassettes (C56T, C57T)

C56/90T Overhead Crank Control Cassette:

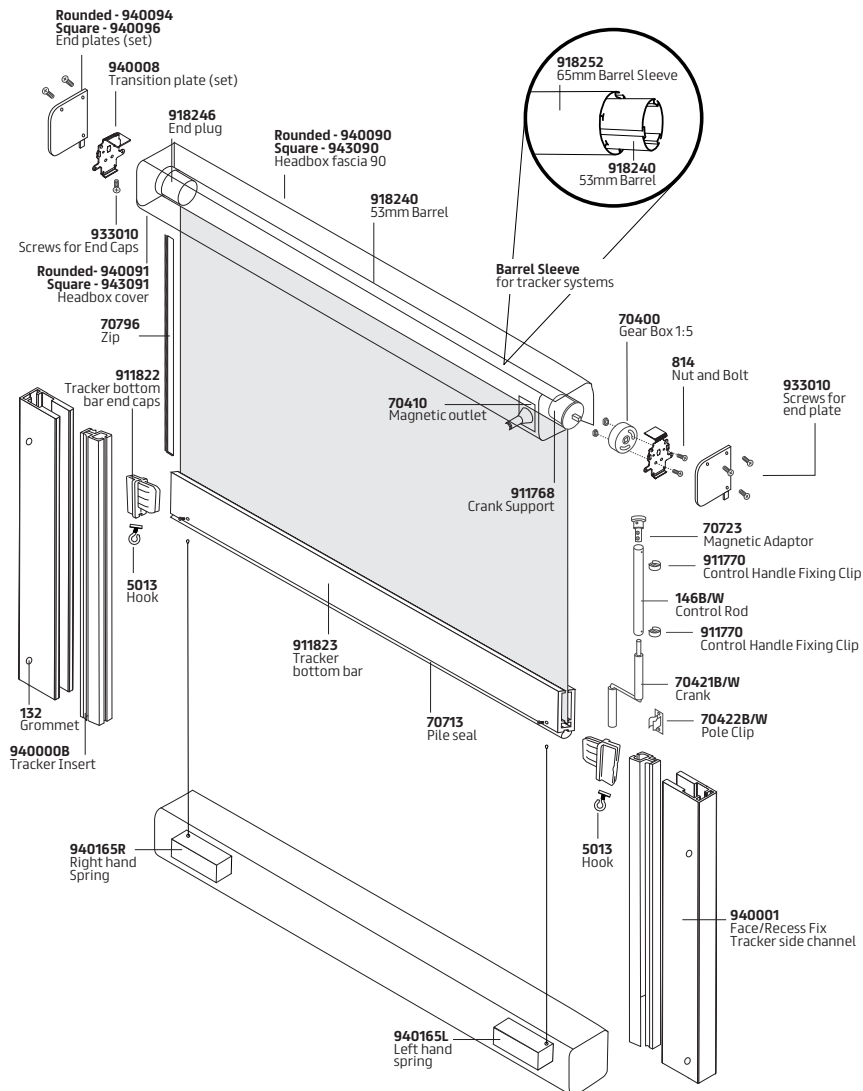


C56/120T Overhead Crank Control Cassette:

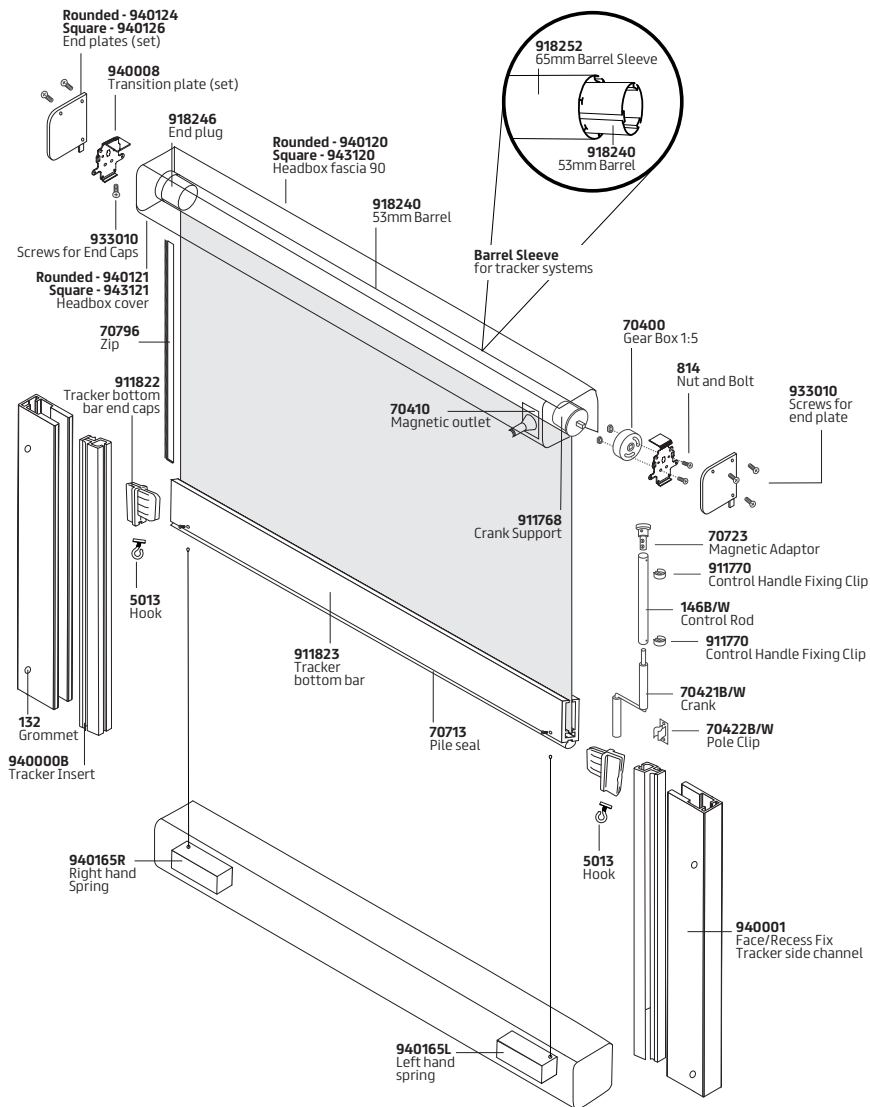


Fitting Instructions

YewdaleDefiant® overhead cassettes (C56T, C57T)

C57/90T Overhead Electric Control Cassette:

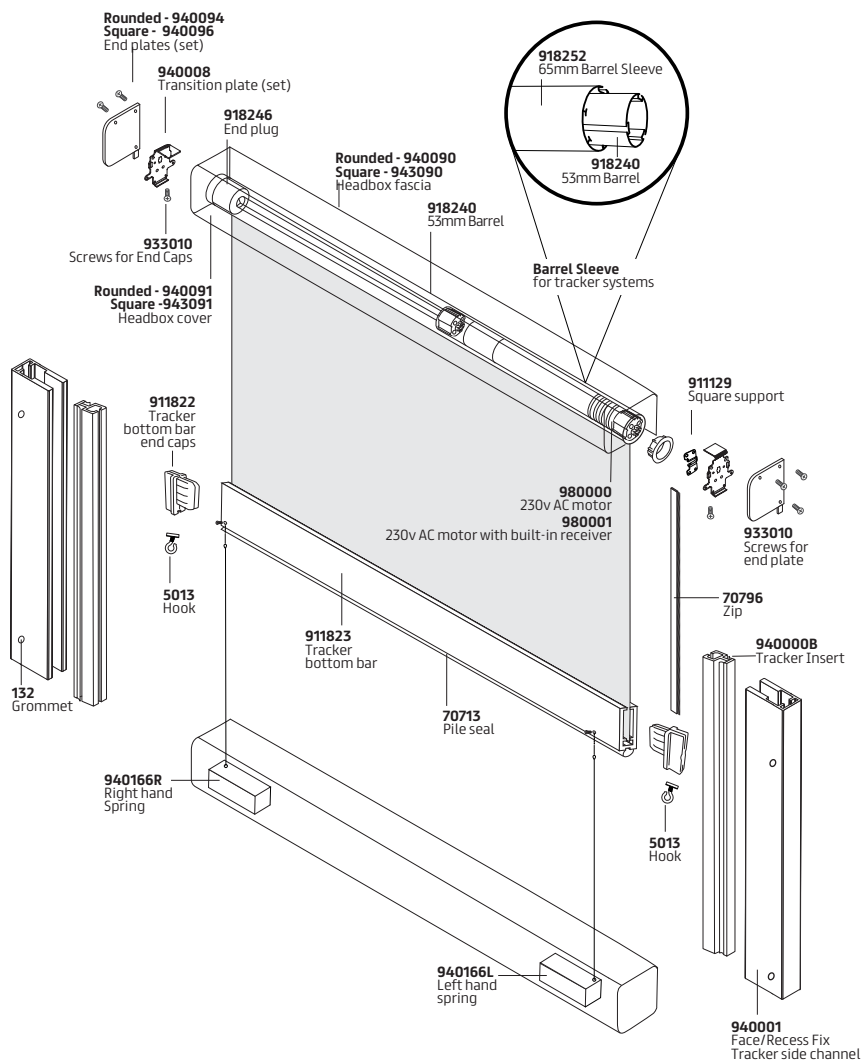

C57/120T Overhead Electric Control Cassette:

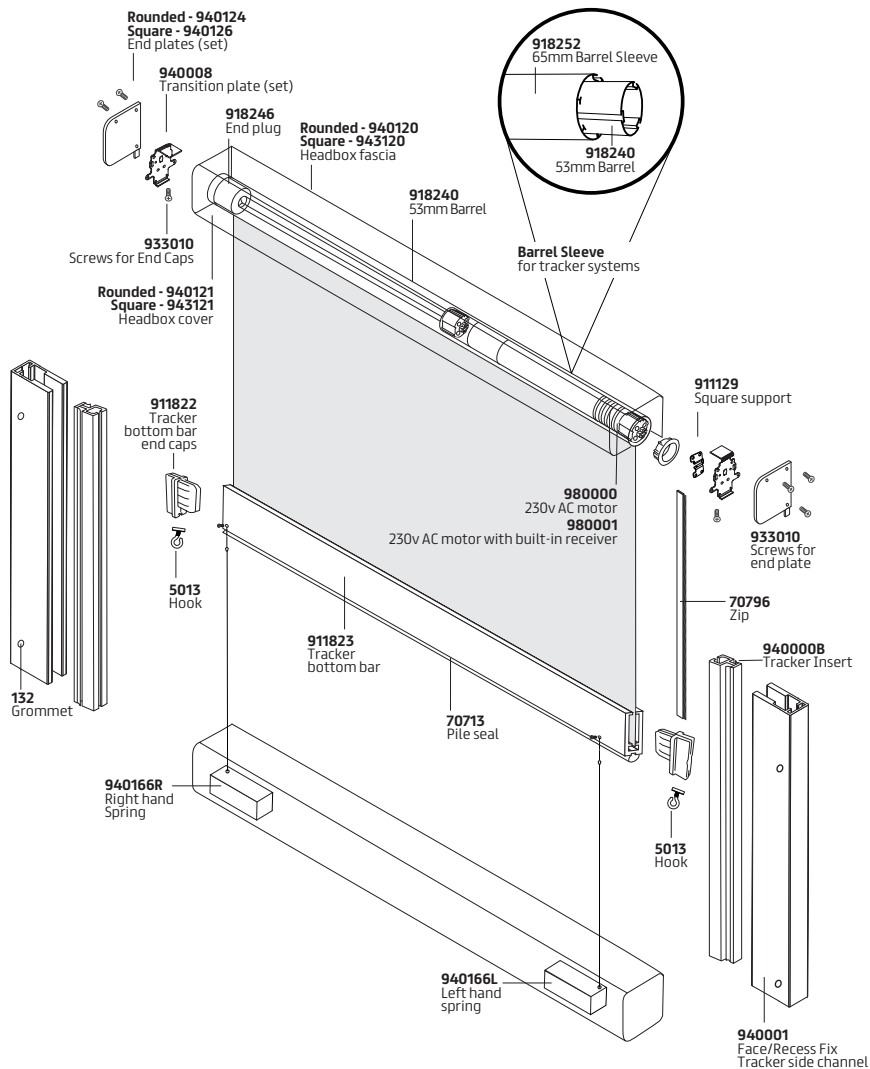


Fitting Instructions

YewdaleDefiant® overhead cassettes (C56T, C57T)

C56T & C57T Overhead Cassette:


1. Unpack all of the goods
2. Remove the two safety screws in the underside of the head boxes to enable the covers to open.
3. Using the indents (see below) within the head box, drill 3.8mm fixing holes either in the top or back depending on whether it is required to be face or recess fixed. Fixing holes should be equally spaced and no more than 1m apart to ensure head box is fixed completely level.

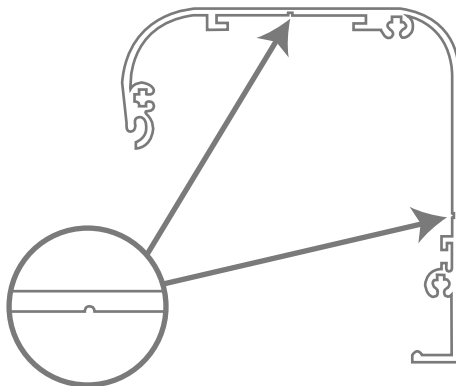

- 
- 
4. Lift the head boxes in place making sure the headbox with the CTS springs in is installed at the receiving end of the blind. If fitting to steel or concrete mark with a marker where holes need to be drilled so the hole(s) can be drilled and plugged. Drill the holes and lift the head box into place and fix using the appropriate screws. If timber, simply fix the head box in place using the appropriate screws.

NB. To operate correctly, the blind MUST be fixed level.

5. Insert the barrel and fabric into the head box, making sure the fabric rolls off the top of the barrel.
6. If it is electric control, drill an exit hole for the electric cable slide outlet grommet onto the motor cable, push the cable through the exit hole and fit the grommet into position and insert the fabric and barrel into the head box, feeding the supply cable through and refer to motor instructions for setting limit stops.
7. If it is crank control, insert the fabric and barrel into the headbox, making sure the blind locates securely within the crank mechanism.
8. Make sure that the blind is in the head box and is fully retracted before the side channels are installed.
9. Using the indent provided, fit the side channel by drilling 5mm fixing holes at maximum 600mm centres. If face fixing, 10mm access hole(s) in the front will also be required as shown:

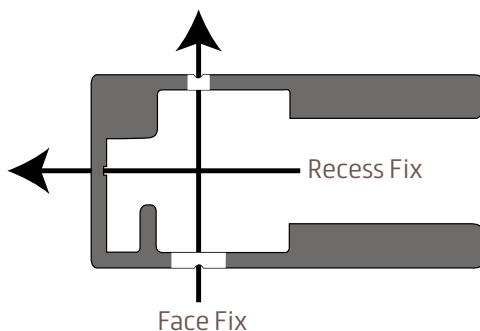


Fitting Instructions

YewdaleDefiant® overhead cassettes (C56T, C57T)

10. Ensure the back of the side channel lines up directly with the back of the headbox and not fitted past it. Make sure that the side of the side channels extend no further than the side of the headbox or causes an overhang of the headbox. The side channel and headbox back and side must be absolutely flush with each other. If it is fitted out of-line the blind will not lower easily due to the fabric being stretched too far. Please see images below for further guidance.



11. Use packers if necessary to ensure the side channels remain lined up correctly and level all the way down.
12. Feed the PVC insert up into the side channel (with the fluted end towards the fabric head box) making sure the zip locates within the insert.
13. Push the PVC insert home within the side channel making sure the fins are opened out as shown:

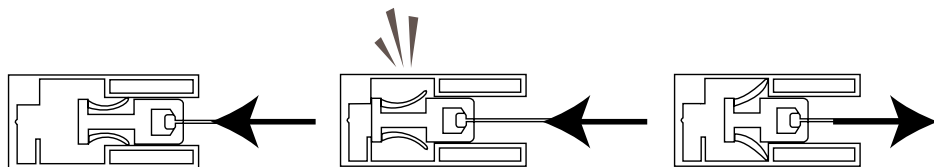

14. Making sure the CTS boxes are in position so that the tension cord is in line with the anchor points at each end of the bottom bar, release sufficient cord from the CTS to allow you to attach it onto the bottom bar. Lock the tension using a suitable hex key or screwdriver inserted into the hole in the side of the CTS box. The tension can then be released by carefully removing the hex key or screwdriver.

NB. These CTS boxes can be dangerous if not used correctly. Eye protection must be worn at all times.

DO NOT release the cord to allow it to travel back into the CTS unit at speed. It must be fed back into the unit slowly and under careful tension, or jamming will occur!




Connect constant tension ring to the hooks on both sides of the bottom bar.



Fitting Instructions

YewdaleDefiant® overhead cassettes (C56T, C57T)

15. Run blind back and forth making sure the blind operates correctly. When the blind is in a closed position, check the distance from the edge of the zip to the inside of the cheek, both sides need to be equal. Centralise as required by sliding the barrel sleeve across. If more or less tension is required on the fabric, follow the process below. If tension is correct, go to point 20.
 16. Insert the PVC insert removal tool into the PVC insert (approx. 20mm from the bottom).
 17. Twist insert tool by 90 degrees and pull the PVC insert out of the side channel being careful not to disturb any fixings. When the PVC fins are visible, simply remove the insert from the side channel using your hand.
PVC insert removal tool: Part Number 930006 (sold separately)
 18. Undo fixings and refit where required and repeat process 13 -16.
 19. If face fixing side channels, close access holes with grommets.
 20. Attach the cover onto the head box by inserting the cover into the head box groove. Swing to the closed position and apply and upward pressure to click the cover into its home position.
 21. Fix cover using the two safety screws previously removed.
 22. For programming instructions, please refer to enclosed leaflet.
- NB. Some rippling may occur at the edges of the fabric and the CTS boxes do make a noise while in operation.**

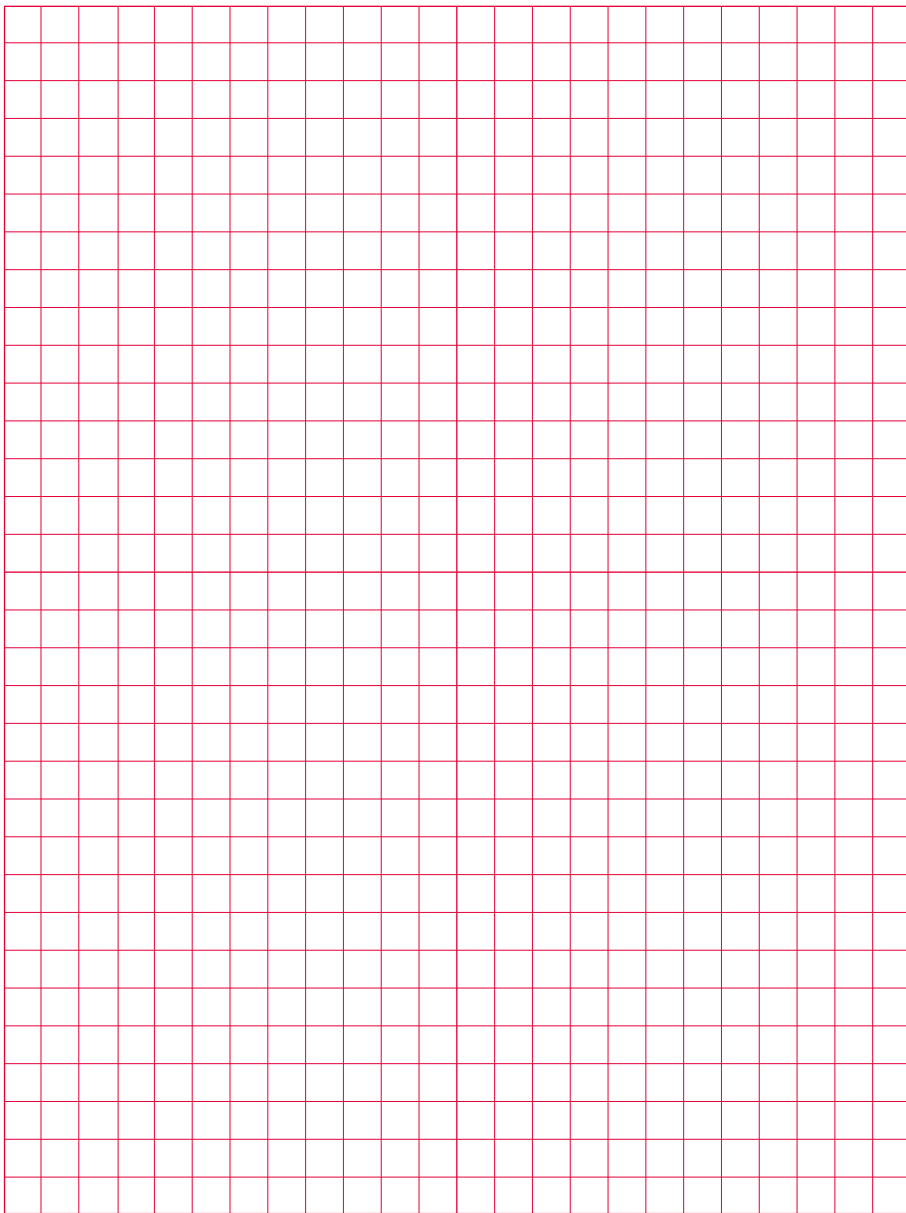



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.



yewdale **Defiant**[®]
FABRIC AND BLIND SYSTEMS



yewdale **Kestrel**[®]
MAGNETIC ANTI-SIGATURE SYSTEM



yewdale **Movatrac**[®]
CURBLE AND TRACK SYSTEMS



yewdale **Harrier**[®]
CURBLE AND SHOWER CURTAINS



yewdale **Vitesse**[®]
CURTAIN TRACK SYSTEMS