

Fitting Instructions

for YewdaleDefiant[®] insect screens
(F40)



Fitting Instructions


YewdaleDefiant[®] insect screens
(F40)

Part no: 981

yewdale.co.uk

YewdaleDefiant® insect screens (F40)

F40 roll across insect screen - Recess Fix:

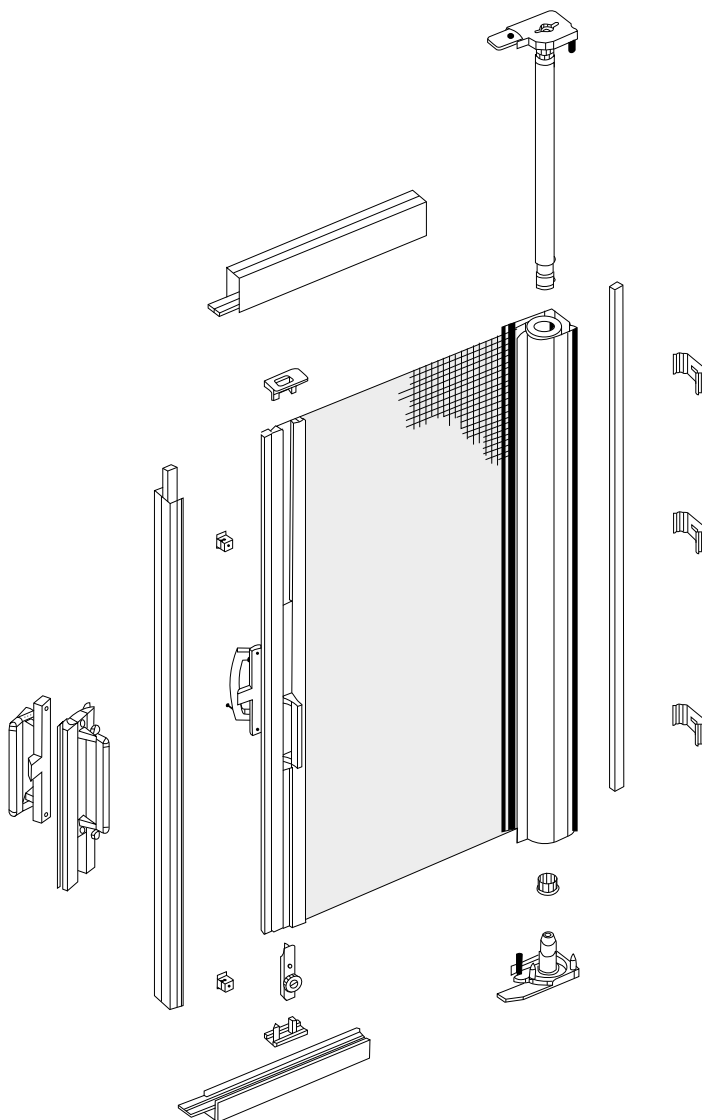




F40 roll across insect screen - Recess Fix:

1. The cassette is pre-assembled and does not need to be opened. Check positioning of cassette, which should be mounted vertically, at the side of the doorway.
2. Fix spring clips at suitable points, using appropriate screws/plugs. Clip cassette into place and fix cassette side lugs to recess.
3. At minimum 600mm centres drill 5mm fixing holes in edge of top and bottom channels (the top channel is deeper). Locate channels onto cassette, ensuring the hem bar of the screen slides into the channels. Check that there is room for the receiving channel at the opposite end to the cassette.
4. Fix top and bottom channels using appropriate screws/plugs. Channels **MUST** be fixed square. Check by measuring diagonals.
5. At minimum 600mm centres drill 5mm fixing holes in edge of magnetic receiving channel, taking care not to damage the magnetic element.
6. Fit receiving channel to recess, opposite to the cassette, ensuring snug fit against top and bottom channels. Fix using appropriate screws/plugs.
7. Adjust the support wheel on the bottom of the hem bar to allow the screen to travel freely and in line along the channel.
8. Ensure the screen closes fully allowing the magnetic elements to make complete contact.
9. Fit the optional catch if ordered with the screen.

Fitting Instructions

YewdaleDefiant® insect screens (F40)

F40 roll across insect screen - Face Fix:

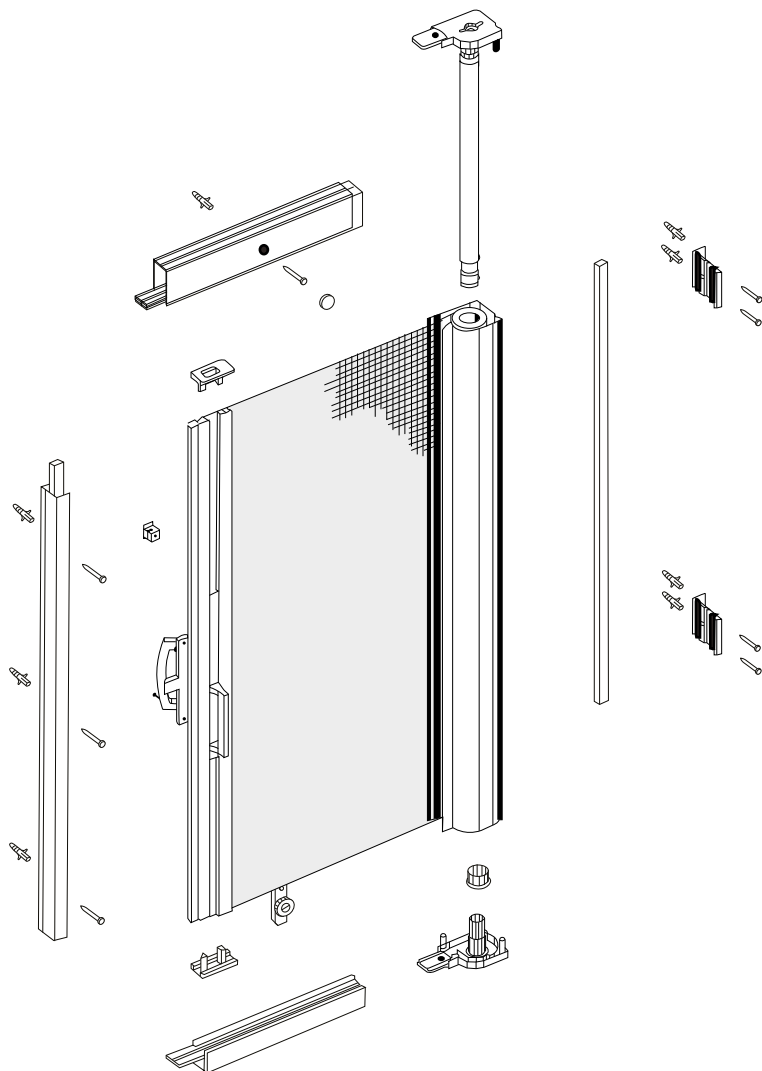



F40 roll across insect screen - Face Fix:


- 1.** The cassette is pre-assembled and does not need to be opened. Slide the brackets onto the cassette, check the positioning, and fix the brackets using the appropriate screw/plugs.
- 2.** At a minimum of 600mm centres, drill 5mm fixing holes through the bottom edge of the bottom channel.
- 3.** Insert the channels onto the cassette, ensuring the hem bar of the screen slides into the channels. Check that there is room for the receiving channel at the opposite end to the cassette. Fix the top and bottom channels using the appropriate screws/plugs. The channels must be fixed square. Check this by measuring diagonals.
- 4.** Slide the face-fix brackets onto the magnetic receiving channel. Fit the channel to the recess, opposite to the cassette, ensuring a snug fit against the top and bottom channels. Fix using appropriate screws/plugs.
- 5.** Adjust the support wheel on the bottom of hem bar to allow the screen to travel freely and in line along the channel.
- 6.** Ensure the screen closes fully allowing magnetic elements to make complete contact.
- 7.** Ensure the screen closes fully allowing magnetic elements to make complete contact.

Fitting Instructions

YewdaleDefiant® insect screens (F40)

Operating instructions:

1. The cassette should be pre-tensioned at the factory. If it is necessary to increase or decrease tension follow these steps:
2. Remove the fixing screws from the top end cap (cassette mounted on right hand side) and carefully prise the end cap out of the cassette, until it is possible to rotate it. The end cap must be held tightly as it will be under tension.
3. Carefully rotate end cap clockwise to increase tension or anti-clockwise to decrease tension. Refit end cap.
4. To operate the unit, pull the screen across until the hem bar is held against the magnetic locking strip. To open the screen, pull on the handle until the screen releases, then allow it to retract under spring tension.

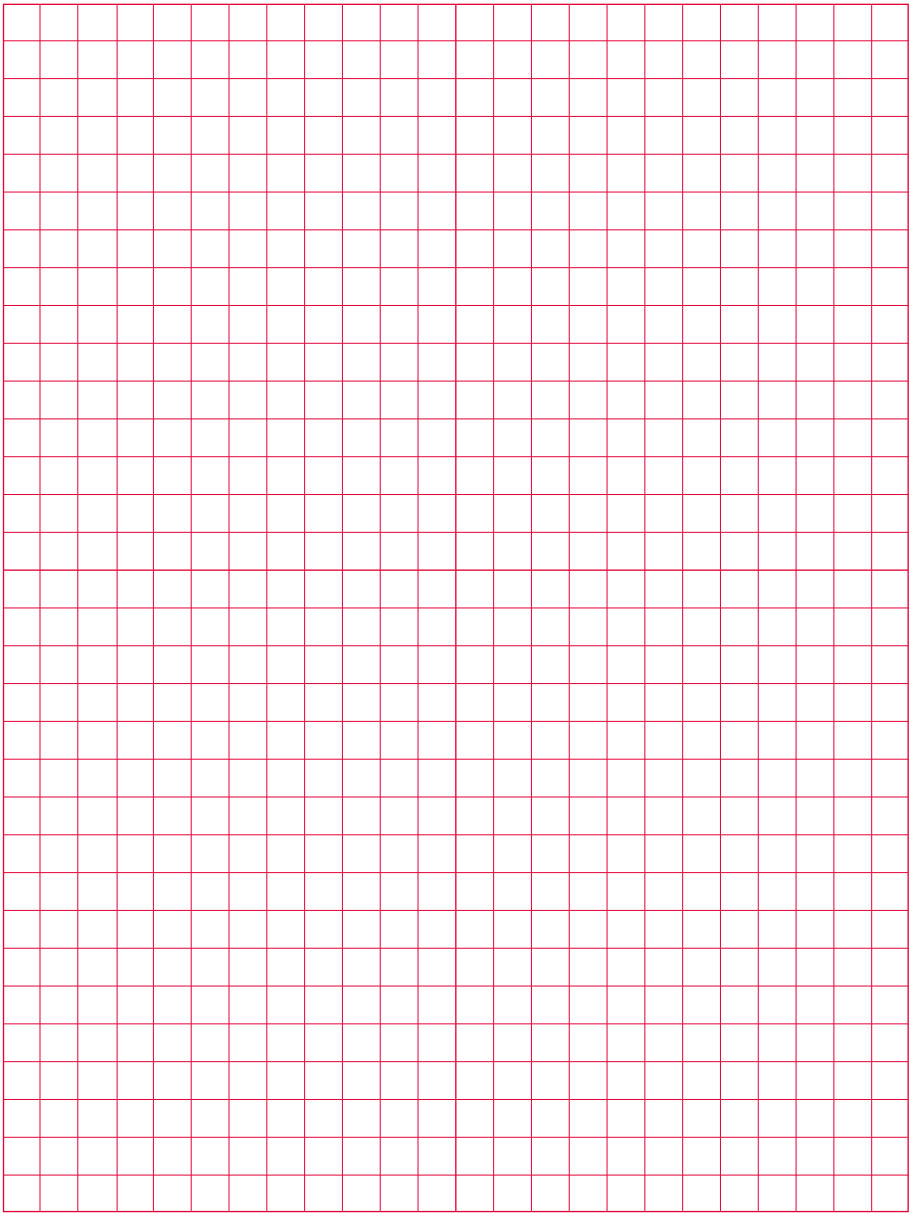



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.



yewdale **Defiant**[®]
FABRIC AND BLIND SYSTEMS



yewdale **Kestrel**[®]
MAGNETIC ANTI-LIGATURE SYSTEM



yewdale **Movatrack**[®]
CURTAIN AND TRACK SYSTEMS



yewdale **Harrier**[®]
CURTAIN AND SHOWER CURTAINS



yewdale **Vitesse**[®]
CURTAIN TRACK SYSTEMS