

Fitting Instructions

for YewdaleVitesse[®] curtain tracks
(8500W)



Fitting Instructions

for YewdaleVitesse[®]
curtain tracks (8500W)


Part no: 996

Fitting Instructions



YewdaleVitesse® Curtain tracks (8500W)

8500W Electric Curtain Track:

Top fix:

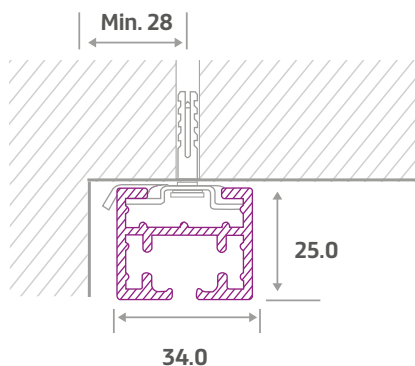

Extention Bracket:

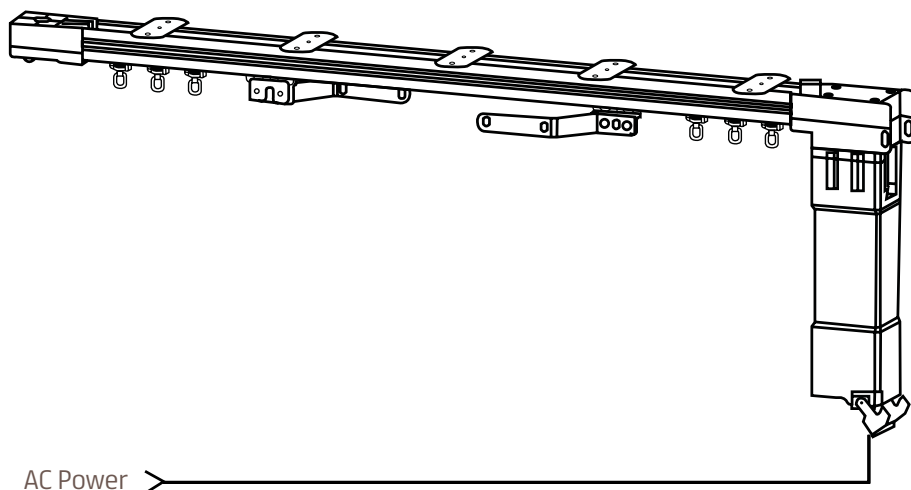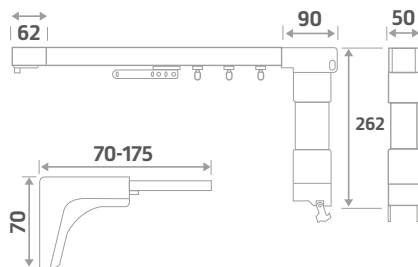



8500W Electric Curtain Track:

1. Unpack the track and fit the brackets in place using the appropriate screws. Brackets should be 100mm in from either end and spaced at no more than 600mm between.
2. Do not fit the motor onto track yet.
3. If the track requires a join, assemble this tightening the supplied track joiner insert in position, along with the overlap, before lifting the track into place. A second person is recommend to help should a join be used, to prevent damage to the track. To install the overlap, insert the overlap plate (see fig 1) into the belt joiners (see fig 2). Fix the overlap arm to the overlap plate using the screws provided (see fig 3).
4. Lift the track into place and insert it onto the brackets making sure to secure them accordingly.
5. Attach motor onto the track as follows:

If the motor is on the left, insert the motor into the drive end with the locating lug (see fig 4) to the front of track. Rotate the motor clockwise (right) 90 degrees and apply upward pressure to the locating lug to lock the motor into the drive end. This is important as limit stops have been pre-set in our factory (but may need adjusting depending on curtain stack size etc).

If the motor is on the right, then insert the motor into drive end with the locating lug (see fig 4) to the reverse of track. Rotate motor clockwise (left) 90 degrees and apply pressure to the locating lug to lock the motor into the drive end. This is important as the limit stops have been pre-set in our factory (but may need adjusting depending on curtain stack size etc).

6. Connect motor to power supply (test lead is recommended at this stage). Refer to wiring diagrams on page 5 for wiring information.

NB. The cable from the motor is 6 core. Please discard both the red and white cable as they are not required. If you have more than one track operating from one switch, you will need a relay.

Fitting Instructions

YewdaleVitesse® Curtain tracks (8500W)

7. We recommend curtains are hung at this point.
8. Carefully operate the track and draw the curtain into the closed position. If motor continues to run or stops short, stop motor immediately and proceed to point 13.
9. Once closed, carefully operate the track and draw to the open position.
10. We recommend curtains are hung at this point.
11. Carefully operate the track and draw the curtain into the closed position. If motor continues to run or stops short, stop motor immediately and proceed to point 13.
12. Once closed, carefully operate the track and draw to the open position.
13. To alter limit stops please do so as follows (refer to figs 1 – 4 also):
 - a) Remove the cover on the bottom of the motor (fig 2).
 - b) Remove the screw from the triangular plastic safety catch. This enables the two limit controls to be depressed, one at a time, by sliding the triangular catch from side to side.
 - c) Operate the track and bring the overlap back to the mid-way position. At this point, by watching the discs (see fig 3), identify which limit switch controls the forward and backwards movements.
 - d) When this is established the limit stops can be set by depressing and turning either clockwise or anticlockwise until the indentations in the three rotating discs (fig 4) viewed through the transparent motor housing are all one above the other (you will hear a click and see the arm of the switch drop into the indents). This procedure must be carried out for both directions so that the switch drops into the indents at the required positions for the motor to stop.
 - e) Once the correct positions have been established, pull the limit stop control out and lock the safety catch by re-inserting the screw taken out at point b.
 - f) Refit the cover.

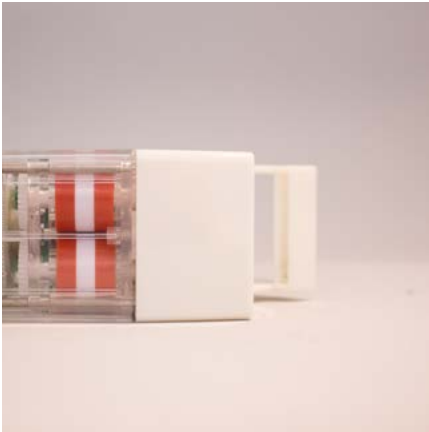


Figure 1

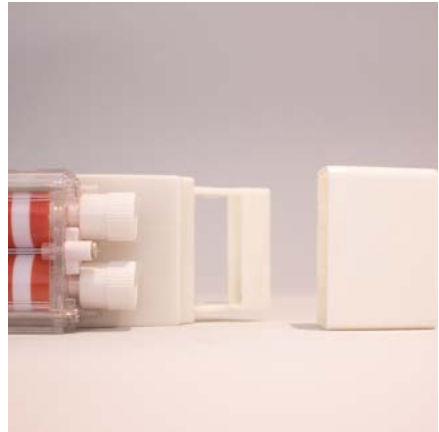


Figure 2

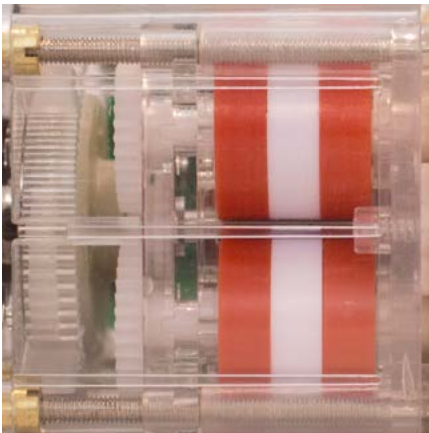


Figure 3


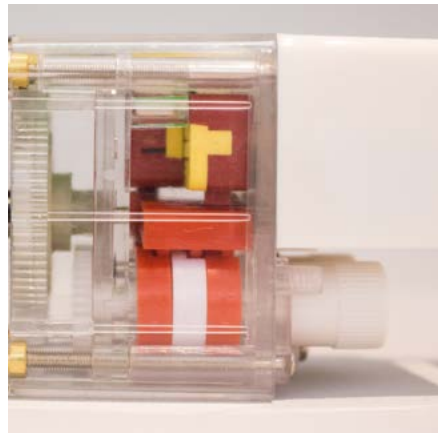


Figure 4


Fitting Instructions


YewdaleVitesse® Curtain tracks (8500W)

Wiring illustration for Remote control

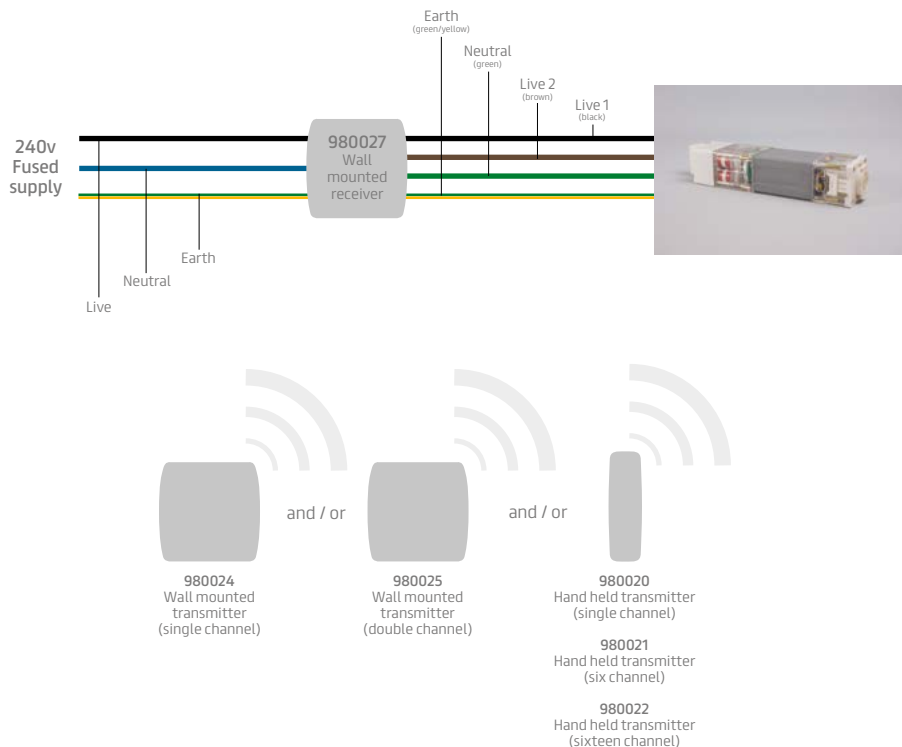

Wiring illustration for Hard wired

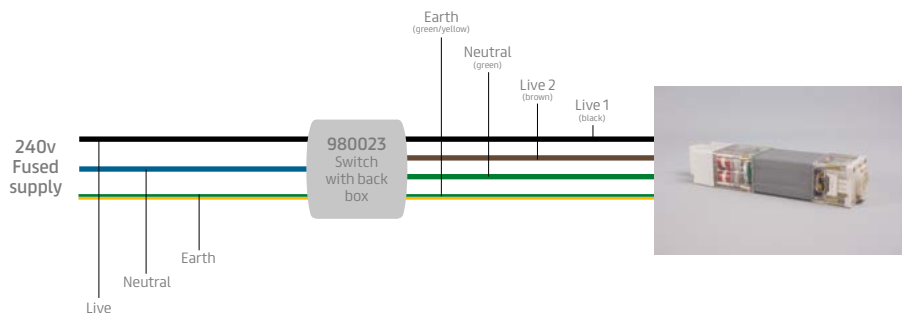

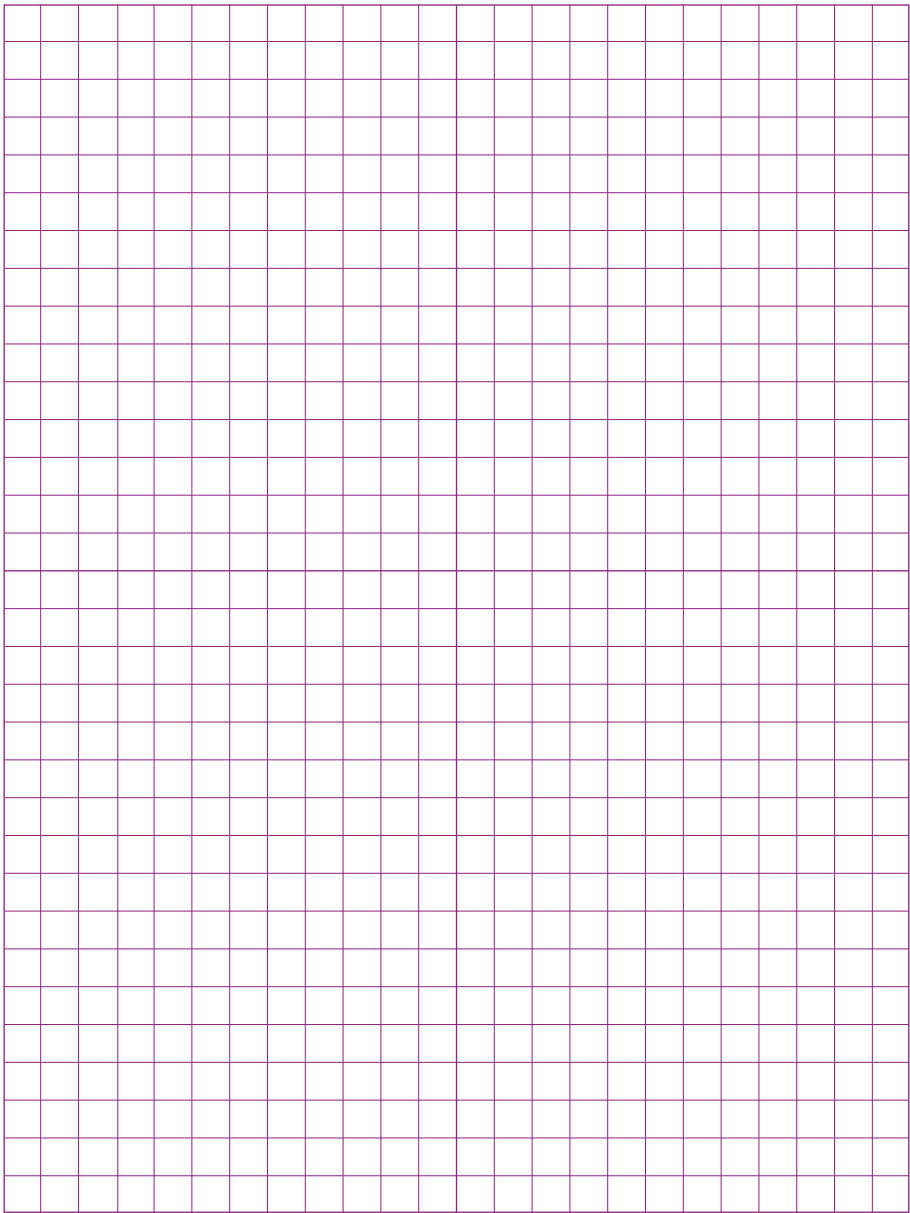



Yewdale, Enterprise Way,
Wickford, Essex SS11 8DH

Call +44 (0)1268 570900

Email enquiries@yewdale.co.uk

Visit yewdale.co.uk

For more information on all
Yewdale products, please call
the sales department.



yewdale **Defiant**[®]
FABRIC AND BLIND SYSTEMS



yewdale **Kestrel**[®]
MAGNETIC ANTI-LIGATURE SYSTEM



yewdale **Movatrack**[®]
CURBICLE AND TRACK SYSTEMS



yewdale **Harrier**[®]
CURBICLE AND SHOWER CURTAINS



yewdale **Vitesse**[®]
CURTAIN TRACK SYSTEMS