




Fitting Instructions
YewdaleDefiant[®]
Roller blinds
(R20B)

Part no: 938

Please note

All blinds should be installed by a person competent in DIY.
If in doubt, please consult a professional.

Safety Instructions

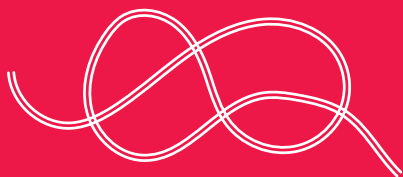

Loops in pull cords, chains, tapes and inner cords that operate the product can cause strangulation.



Keep cords out of the reach of young children.



Move beds, cots and furniture away from window covering cords




Do not tie cords together. Make sure cords do not twist and create a loop

Please note

All blinds should be installed by a person competent in DIY.
If in doubt, please consult a professional.


What you'll need

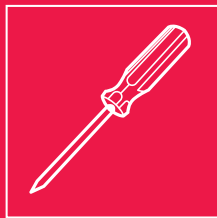


Screwdriver




Drill

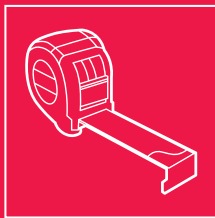

Measuring Tape

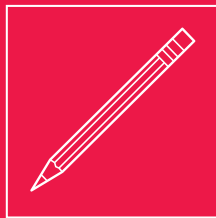


Pencil

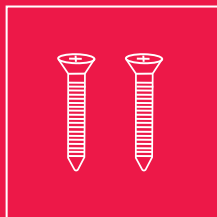


Screws

What's in the box

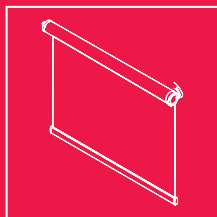

Roller Blind

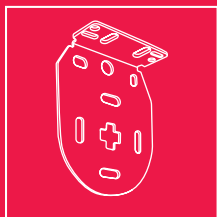

Universal Bracket



Bracket Cover



Warning

All instructions must be read
before installing the blind.



Fitting Time

Approx. 15 minutes




Need Extra Help?

You can find a helpful installation video by simply
scanning this QR Code or visiting our website


www.yewdale.co.uk/videos-page

R20B

Low Voltage Battery 5v DC Radio Control Battery Motor

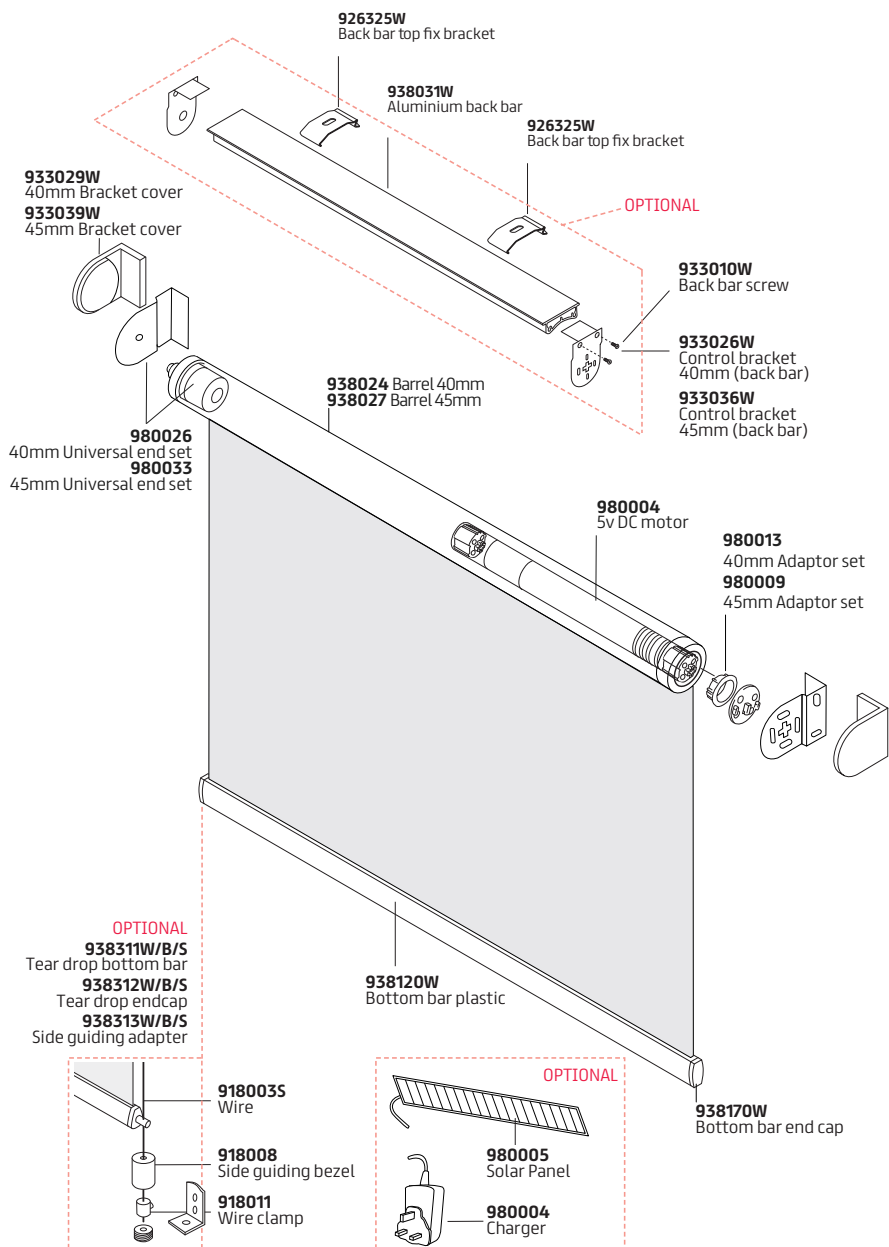

R20B with 70 Fascia

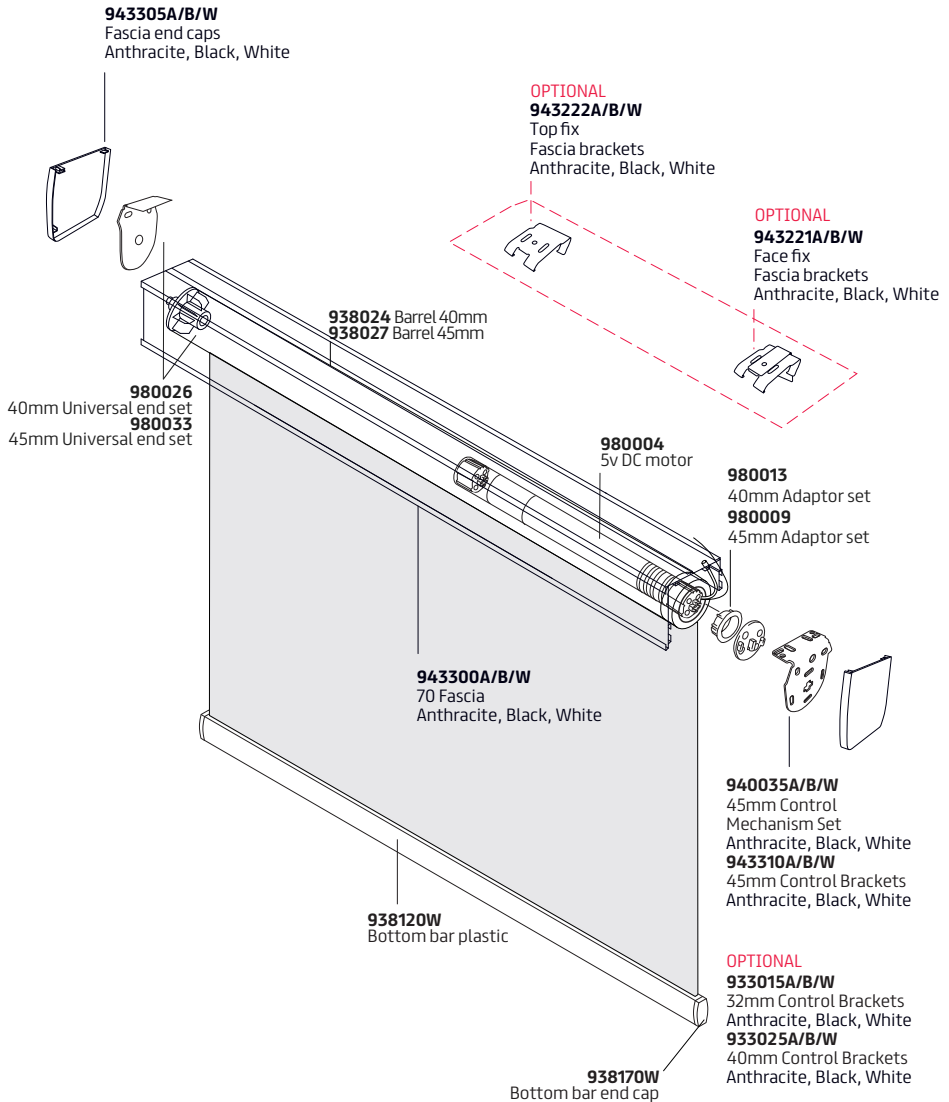


R20B


Low Voltage Battery 5v DC

Radio control battery motor


- 01** The standard universal metal brackets supplied with the blind may be top, face or side-fixed. Fix brackets in place using the appropriate screws/plugs.

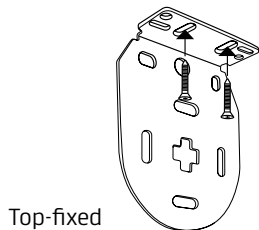

Top-fixed


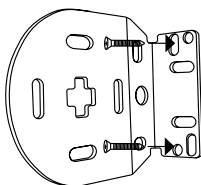


Face-fixed

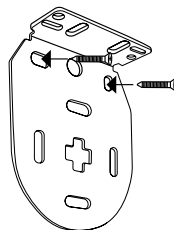


Side-fixed

- 02** Check that the blind fits correctly. The pin-end is sprung for easy fitting, but the pin should be depressed once in place. The fabric should roll off the back of the barrel, unless ordered as reverse-roll.

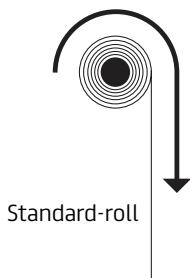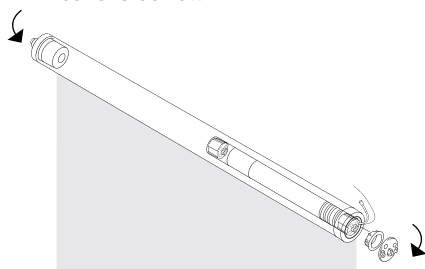


Standard-roll

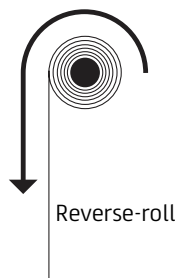


Reverse-roll

- 03** Fix the control-end bracket using appropriate screws/plugs.

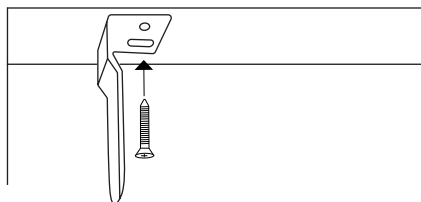

- 04** Locate the blind into the control-end bracket, and mark the position of pin end bracket.

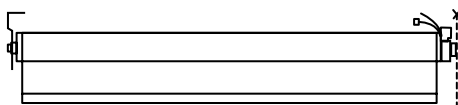


R20B


Low Voltage Battery 5v DC

Radio control battery motor

- 05** Remove the blind and fix the pin-end bracket using appropriate screws/plugs.


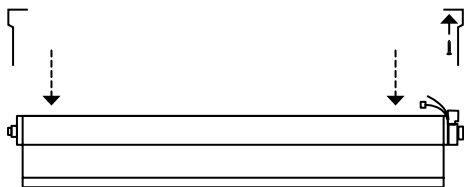


- 06** Secure the bracket covers onto the brackets.

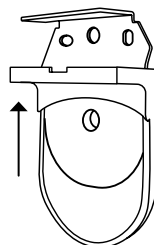

NB. To operate correctly, the blind **MUST** be fixed level.

- 07** Insert the pin-end of the blind into the bracket. Press the blind against the bracket to depress the sprung pin, and insert the lug on the control-end into its bracket until it drops into place.

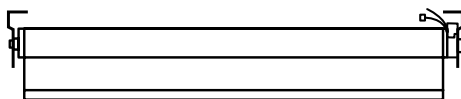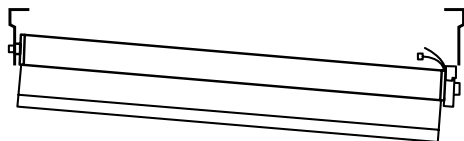

- 08** For programming instructions, please refer to enclosed leaflet (sheet 1023).


N.B. Large blinds are heavy and it is important that the correct fixings are used.
If unsure, seek expert advice.

If more than one blind is being installed to work from a single channel wallswitch or handset it can be useful to 'turn off' each motor once paired/set to enable other motors to be paired/set without any interference to motors already set. Simply, hold down the programming button on the motor for 7 seconds until it beeps. The motor will now be turned off and can be woken up again by holding down the programming button for 1 second (it will beep to indicate it is now back on again).


R20B

Roller Blind with Fascia 70


- 01** For face fixed, use the screws supplied to fix the brackets securely to the wall.

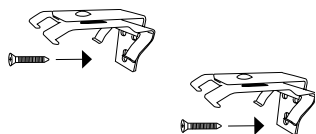


- 02** For top fixed, fix the brackets to the top of the recess using suitable screws.

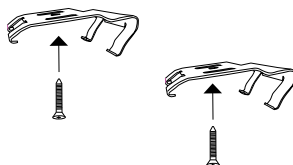


- 03** Attach the end caps to the fascia.

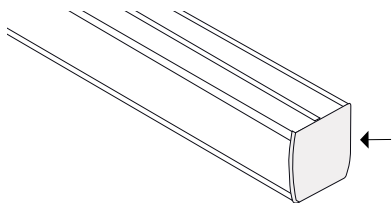


- 04** Hook the back of the fascia onto the bracket and push upwards until you hear a click, confirming it is securely in place.

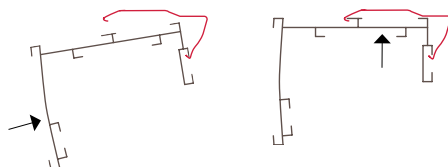


- 05** Lifting the blind into position, slot the barrel into each end of the fascia using the pin end side first.

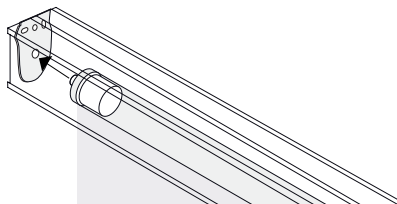

- 06** To detach the fascia, apply pressure to push it back, then pull down to remove it.

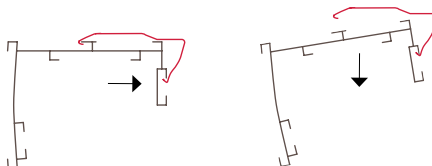

R20B Roller Blind with Fascia 70

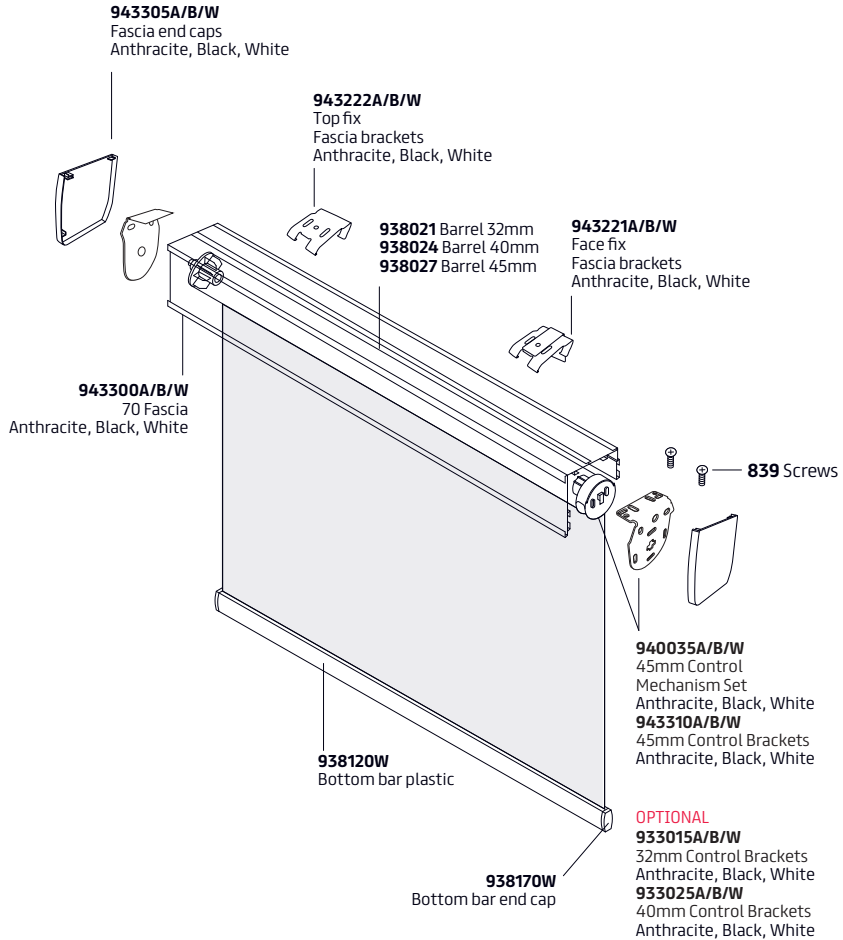



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH

Call: +44 (0)1268 570900

Email: sales@yewdale.co.uk

For more information on all
Yewdale products, please call
the sales department.

