


Fitting Instructions
YewdaleDefiant®
Child Safety Devices

Part no: 1019

Safety Instructions

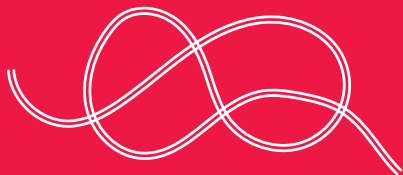

Loops in pull cords, chains, tapes and inner cords that operate the product can cause strangulation.



Keep cords out of the reach of young children.



Move beds, cots and furniture away from window covering cords



Do not tie cords together. Make sure cords do not twist and create a loop

Please note

All blinds should be installed by a person competent in DIY.
If in doubt, please consult a professional.



Warning

All instructions must be read
before installing the blind.



Fitting Time

Approx. 15 minutes




Need Extra Help?

You can find a helpful installation video by simply
scanning this QR Code or visiting our website


www.yewdale.co.uk/videos-page

Easy break chain joiner (933430)

- 01** Suitable for both metal and plastic chains.

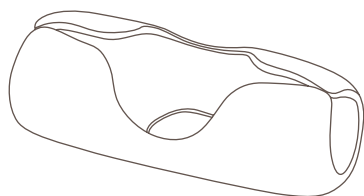


- 02** Locate two places (200mm apart) where a chain break can be installed in the control chain.

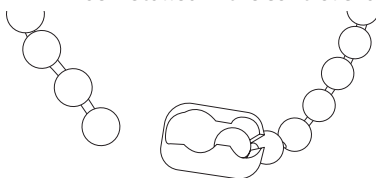

Note: it cannot travel through a control unit of a vertical or roller blind.


- 03** Click the chain into one end - applying pressure with your thumb.

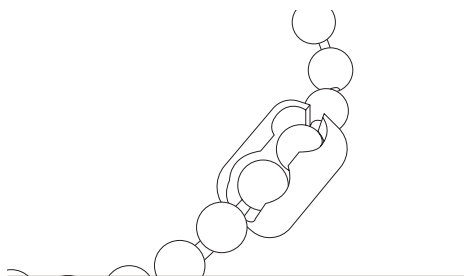


Ensure the installation complies with BS EN13120:2009+A1:2014, BS EN16433:2014 and BS EN16434:2014.

Cord and chain tidy (938276)


- 01** Suitable for cord, metal and plastic chain.

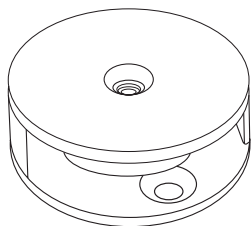

- 02** Remove the plastic cover housing on the chain tidy using the screw in the centre.

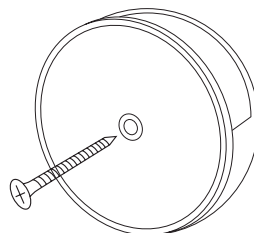

- 03** Using the markings, fix the safety device in the appropriate position.

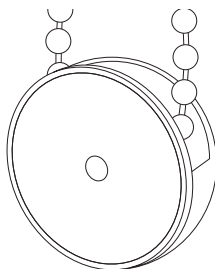


- 04** Test the blind to ensure smooth operation.




Ensure the installation complies with BS EN13120:2009+A1:2014, BS EN16433:2014 and BS EN16434:2014.

Cord and chain tidy – face fix (938279)

- 01** Suitable for both metal and plastic chains.

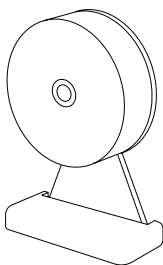


- 02** Using the two guide holes provided mark on the wall the appropriate fixing positions.

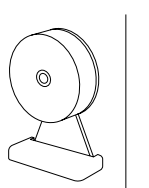


Note: The chain (and cord if a vertical) must not be undertension but located within the wheel).

- 03** Ensuring chain (and cord if a vertical blind) are in place, re-attach the cover using the screw provided.

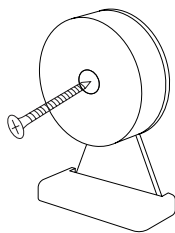


- 04** Test the blind to ensure smooth operation.

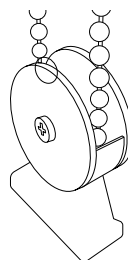

Ensure the installation complies with BS EN13120:2009+A1:2014, BS EN16433:2014 and BS EN16434:2014.


Plastic Cleat (938278)

- 01** Using the two guide holes provided mark on the sill/wall the appropriate fixing positions.

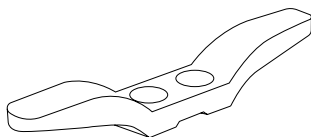

Note: It is important that the cord can be easily wrapped around the cleat, but is still out of reach of children. Position no less than 1.5m above the floor

- 02** Using the markings, fix the safety device in the appropriate position.

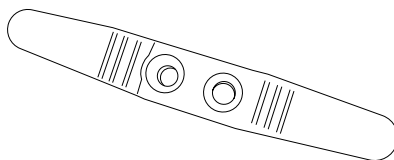


Safety Tassel (974012)

01 Pull the tassel in half.




02 Thread the cord through the hole at the top and tie a knot to hold it in place. Repeat this on the other half of the tassel.

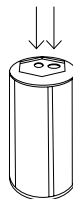


The blind cord should arrive from the factory with the safety tassel attached, but if it needs to be attached, follow these steps.

P Clip Chain Tidy (938280)


- 01** Hook the P Clip into the loop of the cord or chain.

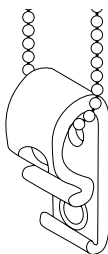


- 02** The cord should be held under slight tension – please ensure smooth operation.

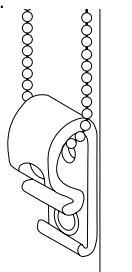

- 03** Using the two guide holes provided mark on the sill/wall the appropriate fixing positions.

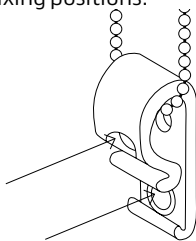

- 04** Using the markings, fix the safety device in the appropriate position.

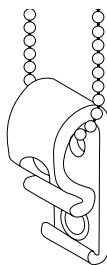



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.

