



Fitting Instructions

YewdaleKestrel[®]

Mounting Plate (K09AW/K09BW/K09CW)

Part no: 993


What you'll need




Screwdriver



Drill

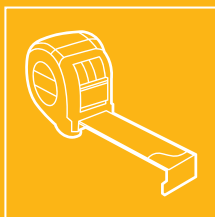

Measuring Tape

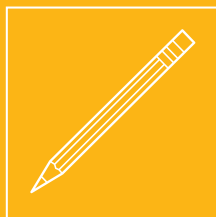


Pencil

What's in the box




K09AW
Mounting Plate

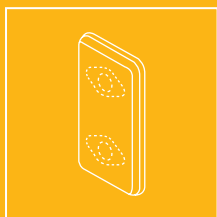


K09BW
Mounting Plate




K09CW
Mounting Plate

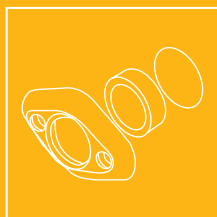

Magnets

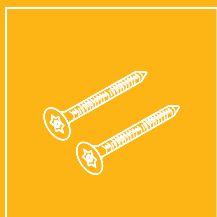

Fixing Screws
(x2 per magnet)

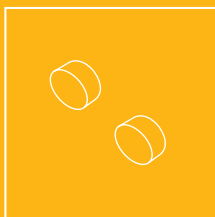

Screw Covers
(x2 per magnet)



Warning

All instructions must be read
before installing.



Fitting Time


Approx. 10 - 20 minutes

depending on product type/fixing substrate


Mounting Plate

Instructions


01 Use template provided

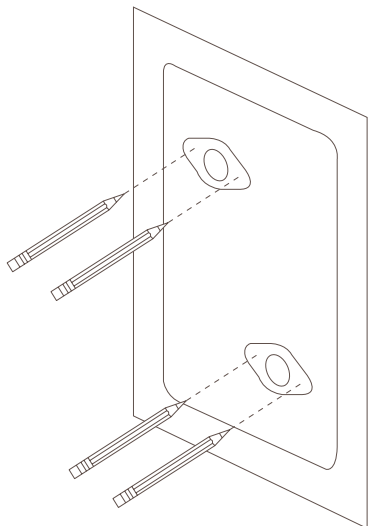


02

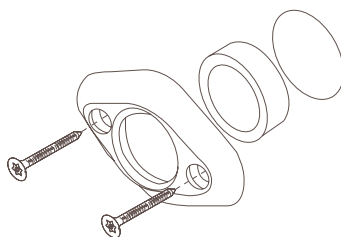

03 Ensure that the screw is not raised above the bracket body.

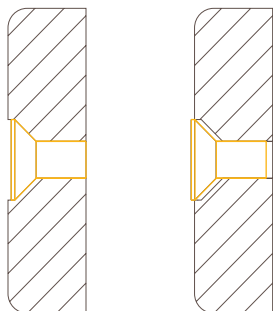


04 Packing discs in front of the magnet should be considered when fitting the **K09BW/K09CW** to further reduce the static load breaking point if felt necessary.

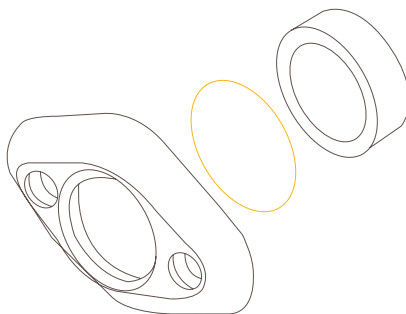


Mounting Plate Instructions


- 05** Push screw covers **MUST** be fitting ensuring that it is flush with the bracket body.

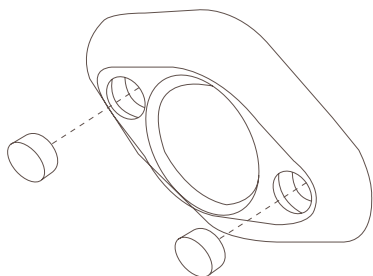

- 06**

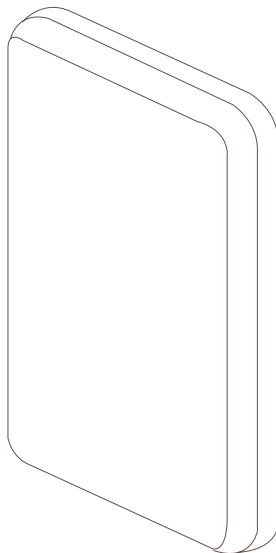

- 07** Ensure that there are no gaps between the back of the plastic bracket housing and the surface of the substrate.

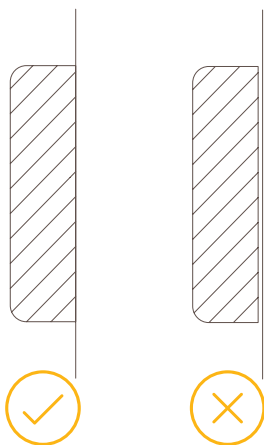

Mounting Plates

Testing & Accessories

Testing

Test the completed installation. The downward force needed to part the brackets should never be more than 400N (40kg static load) at any point.

Fitting Accessories To Back Plates

- Drill the pilot holes to suit the accessories.
- Fix accessories to the back plate ensuring the screws do not protrude through the plate or conflict with the brackets behind the plate.

Please note: Security screws can be used if preferred (Part numbers KT1, KT3)



For more information on installations, using the systems safely, load testing and maintenance, please scan the QR code to read our YewdaleKestrel® Policy.

Mounting Plates

Warning

The magnetic element of the YewdaleKestrel® bracket is POWERFUL. Handle with care. If attached to a flat steel surface it may be difficult to remove the magnet. DO NOT PLACE NEAR SENSITIVE ELECTRONIC EQUIPMENT.

YewdaleKestrel® products are designed as standalone products only. Care should be taken when assessing or arranging a room to ensure that YewdaleKestrel® products cannot be misused in conjunction with any other item, furniture or fixings in the room.

It is the responsibility of the end user or client to ensure the product is suitable for the environment it is being installed in. YewdaleKestrel® products must be fitted by a qualified professional following the manufacturer's instructions. Failure to do so could jeopardise the product's effectiveness as an anti-ligature system.

O+M Guidance

It is an NHS requirement that items suspended on load-release support systems should be maintained and load-tested in accordance with the manufacturer's instructions on an annual basis. The YewdaleKestrel® system is maintenance-free and its performance remains constant even after repeated use. It is a requirement, however, to carry out a physical inspection and testing of YewdaleKestrel® fittings to identify any possible damage or evidence of tampering and undertake an annual load test. Annual testing should only be carried out by Protects Plus 0345 646 0955.



Head Office:

Enterprise Way,
Wickford, Essex, SS11 8DH
Call: +44 (0)1268 570900
Email: sales@yewdale.co.uk

London Office & Showroom:

4 Sutton Lane,
London, EC1M 5PU
Call: +44 (0)203 818 5905

For more information on all
Yewdale products, please call
the sales department.

