




**Fitting Instructions**  
**YewdaleKestrel<sup>®</sup>**  
**SafeDoor Plus**

Part no: 999-P

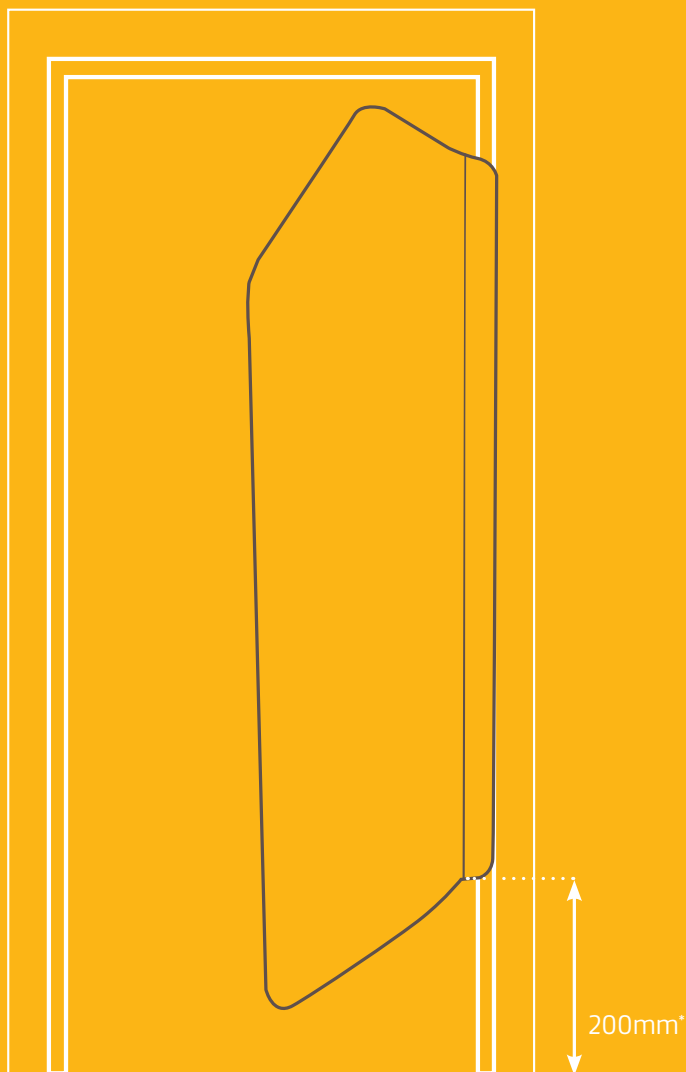

## SafeDoor Plus

- SafeDoor Plus is a safety and welfare device. Please read these instructions and familiarise yourself with the door and how it mounts before installation and use.
- Proper installation will assure best performance and longest lasting results. The magnetic hinge may be attached to a magnetic metal door frame, or to the Stainless Steel Hinge Plates provided for non-magnetic surfaces.
- Initial installation for applications for non-magnetic surfaces is best done by marking up where the hinge plates are to be fixed and then fixing in place with security screws. Once the hinge plates are installed the door may be positioned simply by offering up the magnetic hinge to the Stainless Steel Hinge Plates.

\*Standard height from the floor is 200mm but this may be altered to fit installation


## Considerations:

- Doors must be stored flat prior to installation and when not in use.
- Never allow the magnetic hinge of the door near (less than 300mm) a person with a pacemaker or similar medical device. The strong magnetic fields of the magnets can affect the operation of such devices.
- These doors are designed to reduce the risk of suicide in a mental health environment. Should a door become damaged, remove and discard it.
- YewdaleKestrel's SafeDoor Plus has a welded seam to prevent tampering and the vinyl material itself is tear resistant, shred proof, flame retardant and in accordance to BS5867-2 Type C & crib 7.
- The doors are designed to be used in any health care environment where the clients or service-users are in a secured setting, free of items that may be used for destructive purposes. Yewdale recommends that clients or service-users should be monitored to ensure they do not harm themselves or try to damage the doors or artwork by any means. Yewdale recommends regular inspections of SafeDoor Plus for early detection of tampering.
- Yewdale shall not be held liable for damage caused to products, individuals or facilities due to inadequate client or service-user supervision.




For more information on installations, using the systems safely, load testing and maintenance, please scan the QR code to read our YewdaleKestrel® Policy.

## SafeDoor Plus Instructions on Steel or Magnetic Substrate




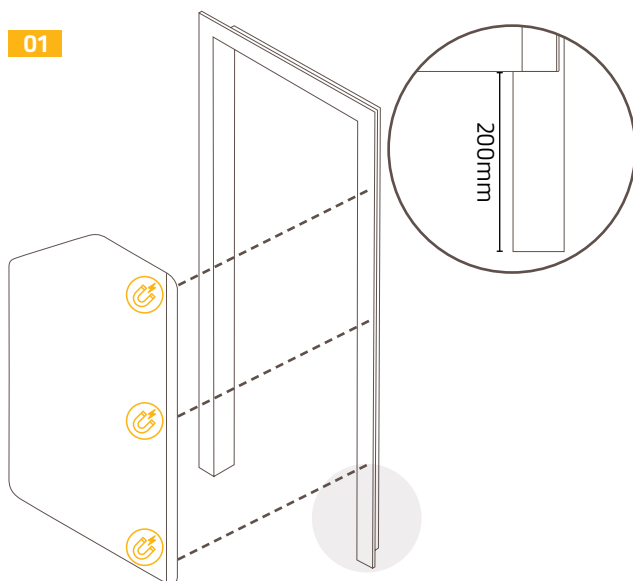


02

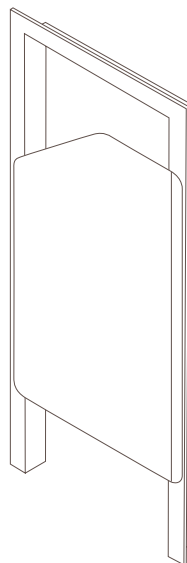

# SafeDoor Plus


## Instructions on Patented Self Closing Hinge

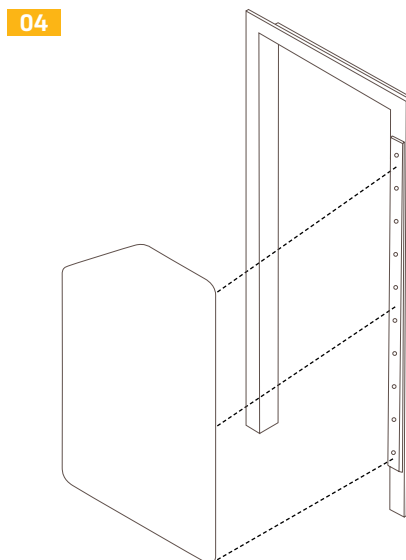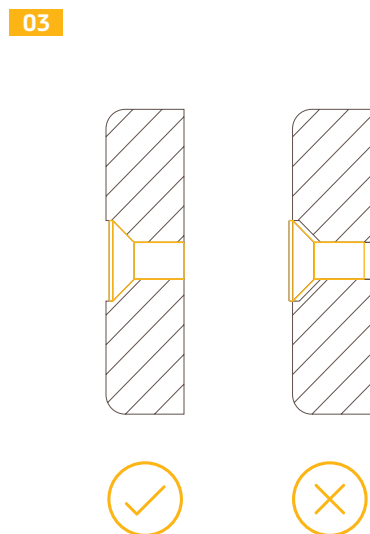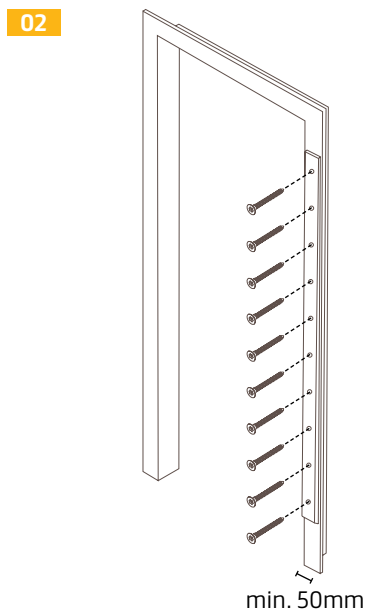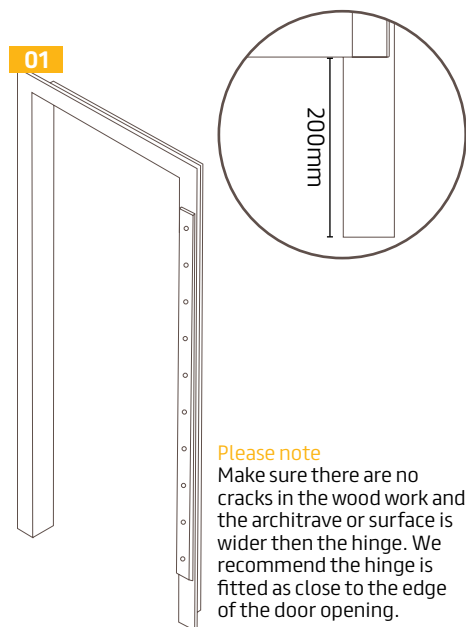

# SafeDoor Plus


## Instructions Connect

01

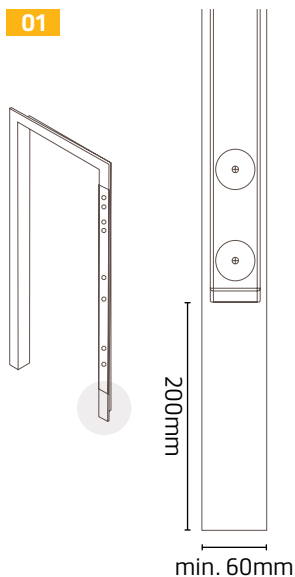


02

8x countersunk  
tamper proof screws.  
2x pre-cut holes.




03


Optional:  
Seal frame with  
anti-pick silicone.

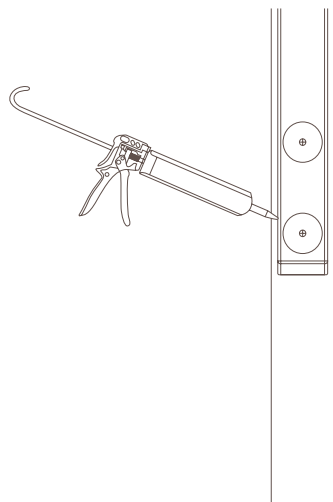


04

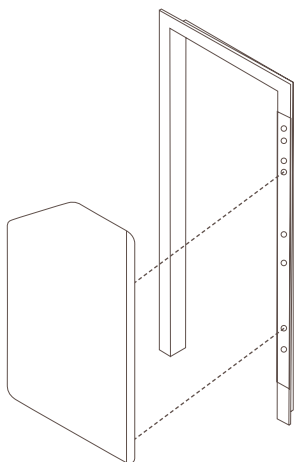


05

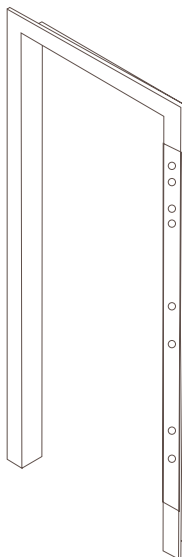

SafeDoor Plus  
Size Guide - Single Door

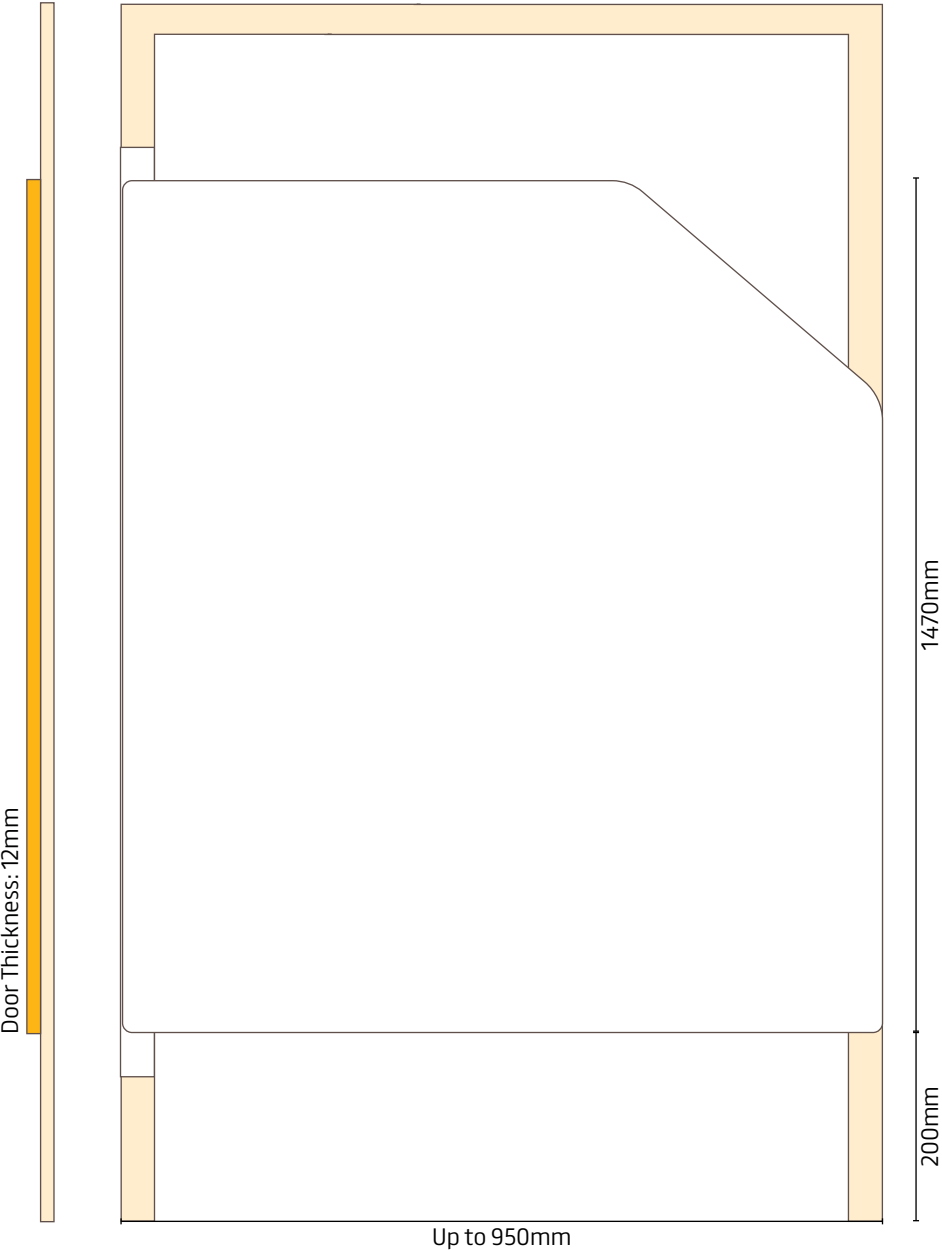

SafeDoor Plus  
Size Guide - Saloon Style Door

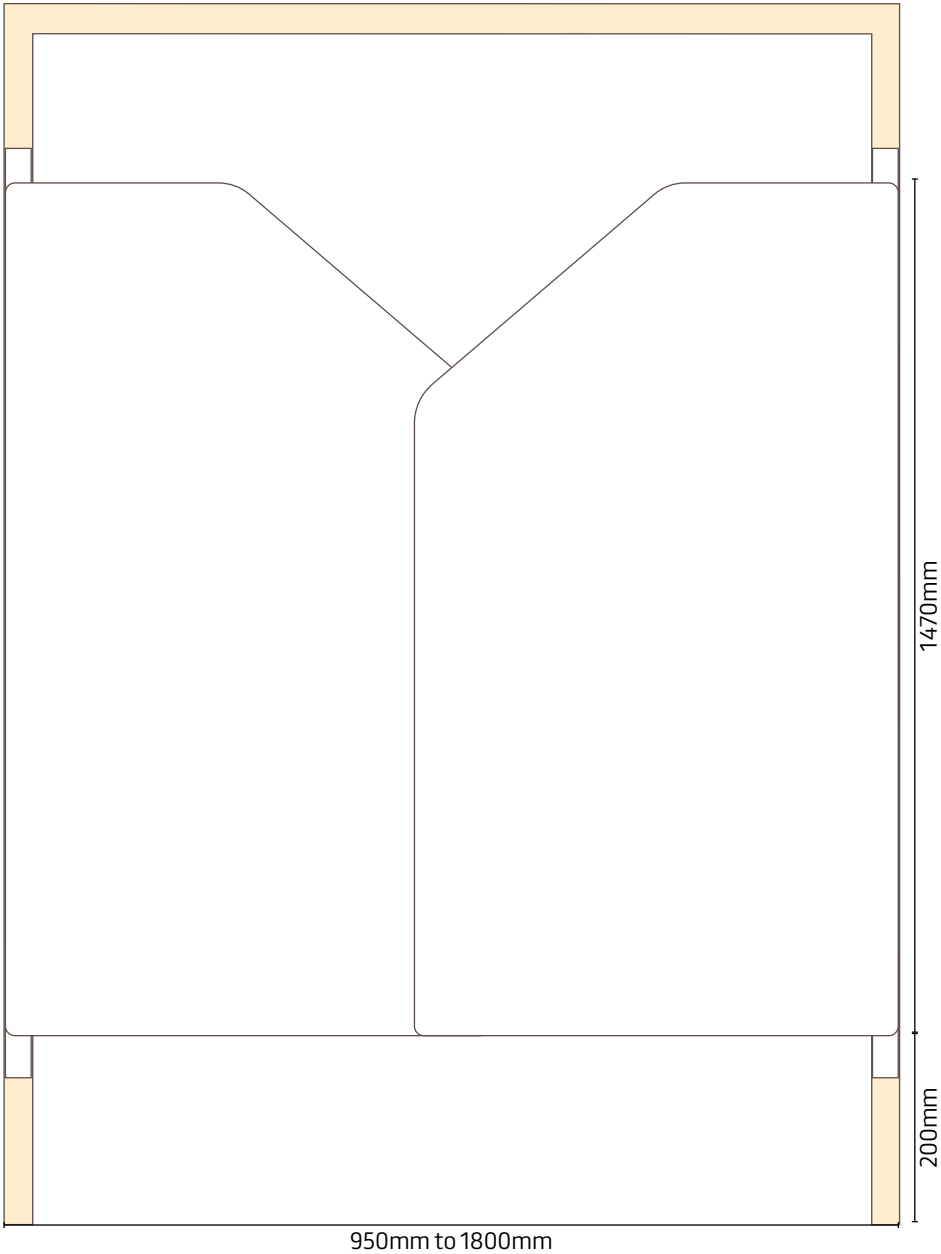



**Head Office:**

Enterprise Way,  
Wickford, Essex, SS11 8DH

**Call:** +44 (0)1268 570900

**Email:** sales@yewdale.co.uk

For more information on all  
Yewdale products, please call  
the sales department.

